

## Horizontal Fan Coil Models:

**SEHX – DX Cooling w/ Electric Heat, Uncased**  
**CEHX – DX Cooling w/ Electric Heat, Cased**  
**SCWE – Chilled Water Cooling w/Electric Heat, Uncased-2P**  
**CCWE – Chilled Water Cooling w/Electric Heat, Cased-2P**

**SDXW – DX Cooling w/ Hot Water Heat, Uncased**  
**CDXW – DX Cooling w/ Hot Water Heat, Cased**  
**SCWW – Chilled Water Cooling w/Hot Water Heat, Uncased-4P**  
**CCWW – Chilled Water Cooling w/Hot Water Heat, Cased-4P**

## LIST OF SECTIONS

1 – General.....	1	9 – Line Voltage Wiring.....	26
2 – Safety, General, Dimensional & Model Number Nomenclature .....	2	10 – Thermostat Wiring and Connections.....	28
3 – Location and Clearances.....	10	11 – Blower Performance .....	32
4 – Return and Supply Air Requirements .....	11	12 – Blower Motor Speed Selection .....	34
5 – Air Handler Installation.....	13	13 – Final System Checkout and Startup.....	35
6 – Refrigerant Piping, TXV, Flowrator & Condensate Drain .....	15	14 – Wiring Diagrams.....	37
7 – Hot Water and Chilled Water.....	20	15 – Minimum Conditioned Space and Air-Flow Tables .....	39
8 – Refrigerant Leak Detection System Operation & Sensor Installation....	24		

## LIST OF FIGURES

1 – CEHX/CCWE/CDXW/CCWW Dimensions .....	7	17 – Condensate Drain Pan.....	20
2 – CEHX/CCWE/CDXW/CCWW Dimensions–Top View.....	8	18 – Components and Water Connections.....	21
3 – SEHX/SCWE/SDXW/SCWW Dimensions .....	9	19 – Refrigerant Leak Detection Sensor Location .....	24
4 – Ceiling Access Panels .....	12	20 – Component Locations–Electric Heat Control Box.....	28
5 – Clearance For Service Access .....	13	21 – Component Locations–No Heat Control Box .....	28
6 – Return & Supply Duct Transitions.....	13	22 – Component Locations–Hydronic Heat Control Box.....	28
7 – Cased Air Handler Mounting.....	14	23 – Typ Low Voltage Connections–Straight Cooling w/Electric or Hydronic Ht...29	
8 – Piping for Air Handler Below Outdoor Unit .....	15	24 – Typ Low Voltage Connections–Heat Pump w/ Electric or Hydronic Ht....29	
9 – TXV Sensing Bulb Placement .....	16	25 – Refrigerant Leak Detection System Wiring Connections .....	29
10 – TXV Sensing Bulb Location.....	16	26 – Constant Torque Motor Control Module Terminals.....	34
11 – Typical TXV Connections .....	18	27 – Constant Torque Blower Assembly.....	35
12 – Flowrator Distributor Assembly.....	19	28 – Wiring Diagram–No Heat; C.T. Motor.....	37
13 – SHL Temperature Sensor Location.....	19	29 – Wiring Diagram–3kW-10kW Electric Ht; C.T. Motor w/Lockout Switch.37	
14 – SHL Temperature Sensor Mounting.....	19	30 – Wiring Diagram–Hydronic Heat; C.T. Motor; No Water Pump.....	38
15 – SHL Temperature Switch Wiring .....	19	31 – Wiring Diagram–Hydronic Heat; C.T. Motor and Water Pump.....	38
16 – Typical Condensate Trap.....	20		

## LIST OF TABLES

1 – CEHX/CCWE/CDXW/CCWW Dimensional Data .....	7	12 – Electric Heater Heating Capacity.....	27
2 – CEHX/CCWE/CDXW/CCWW Dimensional Data–Top View.....	8	13 – Low Voltage Wire Gauge and Maximum Lengths.....	28
3 – SEHX/SCWE/SDXW/SCWW Dimensional Data.....	9	14 – Air Handler Low Voltage Pigtail Wire Colors & Connections .....	30
4 – Model Number Nomenclature .....	10	15 – Typical Heating/Cooling Tstat Wire Colors & Connections.....	30
5 – Altitude Adjustment Factors .....	10	16 – Typical Heat Pump Tstat Wire Colors & Connections .....	30
6 – Clearance to Combustibles.....	11	17 – 26 – Blower Performance.....	32-33
7 – Ceiling Access Panels .....	12	27 – Constant Torque Motor Terminals–Electric Heat Models .....	34
8 – CCWW/SCWW Chilled Water Capacity 4 & 5 Row Coil.....	22	28 – Constant Torque Motor Terminals–Hydronic Heat Models.....	34
9 – CCWW/SCWW Hot Water Capacity 4 & 5 Row Coil.....	23	29 – Min Conditioned Space & Min Airflow–R-454B Refrigerant.....	39
10 – CCWW/SCWW Hot Water Capacity 2 Row HW Coil .....	24	30 – Min Conditioned Space & Min Airflow–R-32 Refrigerant.....	40
11 – Electrical Data–Electric and Hot Water Heat .....	27		

## SECTION 1: GENERAL


The following list includes important facts and information regarding this air handler.

1. This air handler is rated at 208/240 VAC (electric heat) or 115 VAC (hydronic heat), 60 Hertz, Single-Phase.
2. This air handler is not designed to operate at 50 Hertz.
3. Air handler size varies by model.
4. This air handler is designed for both A/C and heat pump applications.
5. Use 4-wire thermostat cable for heating/cooling applications and 7-wire thermostat cable for heat pump applications.
6. This air handler is designed for horizontal applications only.
7. This air handler must not be operated without the access panels installed.
8. This air handler and its components listed are listed by ETL for the United States and Canada.

### **WARNING**

This air handler shall only be connected to an outdoor unit suitable for the same refrigerant.

This air handler (Model Series CEHX/SEHX/CDXW/SDXW is a partial unit air conditioner, complying with partial unit requirements of Standard UL 60335-2-40 / CSA C22.2 No. 60335-2-40, and must only be connected to other units that have been confirmed as complying to corresponding partial unit requirements of Standard UL 60335-2-40 / CSA C22.2 No. 60335-2-40.

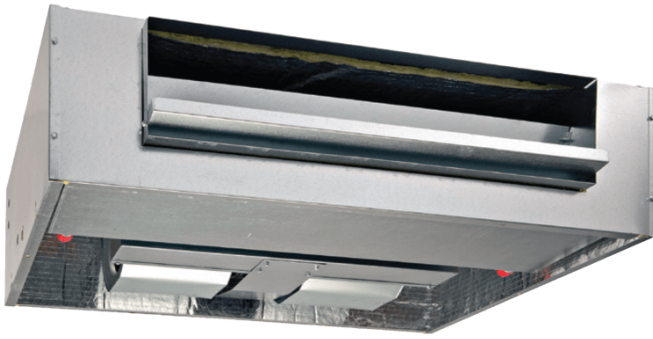

## WARNING

This is a safety alert symbol. When you see this symbol on labels or in manuals, be alert to the potential for personal injury. Understand and pay particular attention to the signal words **DANGER**, **WARNING**, or **CAUTION**.

**DANGER:** Indicates an imminently hazardous situation, which if not avoided, **will result in death or serious injury.**

**WARNING:** Indicates a potentially hazardous situation, which if not avoided, **could result in death or serious injury.**

**CAUTION:** Indicates a **potentially** hazardous situation, which if not avoided, **may result in minor or moderate injury.** It is also used to alert against unsafe practices and hazards involving property damage.

## WARNING

Improper installation may create a condition where the operation of the product could cause personal injury or property damage.

Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Refer to this manual for assistance; or for additional information consult a qualified contractor, installer, or service agency.

## WARNING

### FIRE OR ELECTRICAL HAZARD

Failure to follow the safety warnings exactly could result in serious injury, death, or property damage.

A fire or electrical hazard may result causing property damage, personal injury or loss of life.

## CAUTION

This product must be installed in strict compliance with the installation instructions and any applicable local, state, and national codes including, but not limited to; building, electrical, and mechanical codes.

## IMPORTANT

The Clean Air Act of 1990 bans the intentional venting of refrigerant (CFC's and HFC's) as of July 1, 1992. Approved methods of reclaiming must be followed. Fines and/or incarceration may be levied for non-compliance.

## CAUTION

This unit is equipped with a refrigerant leak detection system for safety and with electrically powered safety measures. To be effective, the unit must be electrically powered at all times after installation, other than when servicing.

## WARNING

### RISK OF FIRE

This unit is equipped with a refrigerant leak detection system for safety and with electrically powered safety measures. To be effective, the unit must be electrically powered at all times after installation, other than when servicing.

## WARNING

### RISK OF FIRE

Refer to Tables 29 and 30 for the minimum floor area of the conditioned space served by this air handler due to the use of an A2L class flammable refrigerant.

## WARNING



### RISK OF FIRE

Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.

The appliance shall be stored in a room without continuously operating ignition sources (e.g.: open flames, an operating gas appliance, or an operating electric heater).

Do not pierce or burn.

Be aware that refrigerants may not contain an odor.

## Safety Requirements

1. This air handler must be installed in accordance with all national and local building/safety codes and requirements, local plumbing and waste water codes, and other applicable codes. In the absence of local codes, install in accordance with the following codes.
  - Standard for the Installation of Air Conditioning and Ventilating Systems (NFPA 90A)
  - Standard for the Installation of Warm Air Heating and Air Conditioning Systems (NFPA 90B)
  - National Electrical Code (NFPA 70)
  - Canadian Electrical Code, Part I (CSA C22.2) or ANSI/NFPA No. 70
  - All local codes (State, City, and Township)
- NOTE:** All applicable codes take precedence over any recommendation made in these instructions. Mortex assumes no responsibility for units installed in violation of any code or regulation.
2. Refer to the air handler rating plate for the air handler model number. If a return air plenum is installed on the rear return air knock-out (See Figure 1) instead of using a louvered access panel with filters, the return air plenum must be installed according to the above listed codes or the instructions in this manual.
3. Refer to the dimensions page of these instructions to determine the proper location to install the air handler.
4. This air handler is not ETL listed or approved for installation in a manufactured (mobile) home.
5. Provide clearances from combustible materials as listed in the **LOCATION AND CLEARANCES** section.
6. Provide clearances for service access panel to allow access to the control box, electric heater elements, hot water coil, and blower.
7. Power supply wiring and circuit breakers/fuses must be sized for the electrical characteristics listed on the air handler rating plate.
8. Failure to carefully read and follow all instructions in this manual can result in malfunction of the air handler, death, personal injury, and/or property damage.
9. Electric heat air handlers must be installed so the electrical components are protected from water.
10. Installing and servicing heating/cooling equipment can be hazardous due to electrical components.
11. Only trained and qualified personnel should install, repair, or service heating/cooling equipment. Untrained service personnel only perform basic maintenance functions such as cleaning of exterior surfaces and replacing the air filters.
12. Observe all precautions shown in the manuals and on labels attached to the air handler when servicing or conducting maintenance tasks.
13. These instructions cover minimum requirements and conform to existing national standards and safety codes. In some cases, these instructions exceed certain local codes and ordinances, especially those who have not kept up with changing home construction practices. These instructions are to be followed and are the minimum requirement for a safe installation.
14. The capacity of the heating and cooling system should be based on an acceptable heat loss/heat gain calculation for the structure such as ACCA Manual J or other approved methods.
15. Ground wire connections must be securely fastened to the ground lugs inside the control box.
16. Ductwork must be installed in accordance with the standards of the National Fire Protection Association (NFPA) Warm Air Heating and Ventilation Systems (NFPA Standards 90A and 90B). The air distribution duct should be sized for 0.2 inches of static pressure. See Air Conditioning Contractors of America (ACCA) Manual D for duct sizing.
17. The safety testing label appearing on this air handler covers the air handler and the factory installed coil only. It does not cover any other equipment.
18. Exterior surface of the cabinet may sweat when installed in a non-conditioned space such as an attic or garage. Installer must provide protection for the building structure such as a full size auxiliary drain pan under all air handlers installed in the non-conditioned space. The auxiliary drain pan is needed to prevent building damage from condensation runoff from the unit casing.
19. Cabinet insulation used in this air handler is rated for R-2.1 (standard) and is ½" thick. Some jurisdictions require R-4.2 or R-6.0 on installations in a non-conditioned spaces. Add 1" thick insulation to the exterior casing of the air handler to comply in these jurisdictions and add a vapor barrier on the outside of the added insulation.
20. Air handler must not be operated with the access panels removed.
21. The air handler must be attached to the supporting building structure with screws instead of relying on adhesive.
22. This air handler is for use at elevations of 10,000 ft (3,048m) or less.
23. This air handler is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this air handler by a person responsible for their safety. Children must not be allowed to play with this air handler.
24. For hydronic heat models, check the rating plate and power supply to be sure that the air handler is connected to a nominal 115 VAC, 1 Phase, 60-Hertz power supply. **DO NOT CONNECT THE AIR HANDLER TO A 50 HZ POWER SUPPLY OR A VOLTAGE ABOVE 127 VOLTS.**
25. For electric heat models, check the rating plate and power supply to be sure that the air handler is connected to a nominal 208/240 VAC, 1 Phase, 60-Hertz power supply. **DO NOT CONNECT THIS AIR HANDLER TO A 50 HZ POWER SUPPLY OR A VOLTAGE ABOVE 250 VOLTS.**
26. 208/240V air handlers are shipped from the factory for 240VAC applications. The transformer must be reconfigured for 208VAC applications using the following steps to assure adequate control voltage (24VAC).
  - a) Remove the zip tie from the transformer wire bundle that secures the BLACK, ORANGE and WHITE wires together.
  - b) Disconnect the WHITE (240VAC) transformer primary wire with an insulated terminal from the load side of the circuit breaker and connect the ORANGE (208VAC) transformer primary wire with an insulated terminal to the same terminal on the circuit breaker.
  - c) Secure the loose BLACK, ORANGE and WHITE wires to the transformer wire bundle with a zip tie.
  - d) If the main electrical panel supplying electrical power to the air handler utilizes circuit breakers, the circuit breakers must be HACR type.

- e) A means of disconnecting all poles of the incoming line voltage power to the air handler must be provided in the fixed field wiring within sight of the air handler unless the air handler is equipped with integral circuit breaker(s) with their ON/OFF lever(s) located on the outside of the air handler which can be used to disconnect line voltage electrical power to the air handler.
27. Ground connections must be securely fastened to the control box and ground wires must be secure.
  28. Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.
  29. Installation, servicing and maintenance must only be performed by qualified service personnel that are licensed by the state to install, service, and repair HVAC equipment and those who have successfully completed a course in handling, installing, commissioning, maintenance, servicing, repairing, decommissioning, and disposing of equipment using a flammable refrigerant offered by an accredited national training organization or the manufacturer of the equipment.
  30. Non-duct connected appliances containing A2L refrigerants with the supply and return air openings in the conditioned space may have the body of the appliance installed in open areas such as false ceilings not being used as return air plenums, as long as the conditioned air does not directly communicate with the air of the false ceiling.
  31. The use of dropped ceilings for return air is not permitted for this air handler.
  32. **Safely Commissioning of the System**
    - Ensure that the floor area is sufficient for the refrigerant charge or that the ventilation duct is assembled in a correct manner.
    - Connect the pipes and carry out a leak test before charging with refrigerant.
    - Check safety equipment before putting into service.

### **Proper Safe Working Procedures for Equipment Using Flammable Refrigerants**

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized. For repair to the refrigerating system, the following steps must be completed prior to conducting work on the system.

1. Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapor being present while the work is being performed.
2. All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided.
3. The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.
4. If any hot work is to be conducted on the refrigerating equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO<sub>2</sub> fire extinguisher adjacent to the charging area.

5. No person carrying out work in relation to a refrigerating system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.
6. Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.
7. Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt, consult the manufacturer's technical department for assistance.
8. The following checks shall be applied to installations using flammable refrigerants:
  - the actual refrigerant charge is in accordance with the room size within which the refrigerant containing parts are installed;
  - marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
  - refrigerating pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

### **9. Detection of Flammable Refrigerants**

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

The following leak detection methods are deemed acceptable for all refrigerant systems.

Electronic leak detectors may be used to detect refrigerant leaks but, in the case of flammable refrigerants, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25 % maximum) is confirmed.

Leak detection fluids are also suitable for use with most refrigerants, but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

**NOTE:** Examples of leak detection fluids are:

- bubble method,
- fluorescent method agents.

If a leak is suspected, all naked flames shall be removed/ extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. Removal of refrigerant shall be according to Step 10 below.

## 10. Removal and Evacuation

When breaking into the refrigerant circuit to make repairs or for any other purpose, conventional procedures shall be used. However, for flammable refrigerants, it is important that best practice be followed since flammability is a consideration. The following procedure shall be adhered to:

- safely remove refrigerant following local and national regulations;
- evacuate;
- purge the circuit with inert gas (optional for A2L);
- evacuate (optional for A2L);
- continuously flush or purge with inert gas when using flame to open circuit; and
- open the circuit.

The refrigerant charge shall be recovered into the correct recovery cylinders if venting is not allowed by local and national codes. For appliances containing flammable refrigerants, the system shall be purged with oxygen-free nitrogen to render the appliance safe for flammable refrigerants. This process might need to be repeated several times. Compressed air or oxygen shall not be used for purging refrigerant systems.

For appliances containing flammable refrigerants, purging shall be achieved by breaking the vacuum in the system with oxygen-free nitrogen and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum (optional for A2L). This process shall be repeated until no refrigerant is within the system (optional for A2L). When the final oxygen-free nitrogen charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.

The outlet for the vacuum pump shall not be close to any potential ignition sources, and ventilation shall be available.

## 11. Charging Procedures

In addition to conventional charging procedures, the following requirements shall be followed.

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
- Cylinders shall be kept in an appropriate position according to the instructions.
- Ensure that the refrigerating system is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the refrigerating system.

Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas. The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

## 12. Refrigerant Recovery Requirements

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge is available. All cylinders to be used are designated for the recovered refrigerant and labeled for that refrigerant (i.e.: special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of the flammable refrigerant. If in doubt, the manufacturer should be consulted. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition.

The recovered refrigerant shall be processed according to local legislation in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The compressor body shall not be heated by an open flame or other ignition sources to accelerate this process. When oil is drained from a system, it shall be carried out safely.

### **WARNING**

#### **RISK OF FIRE**

**For air handlers using A2L refrigerants connected via an air duct system to one or more rooms, auxiliary devices which may be a potential ignition source shall not be installed in the duct work. Examples of such potential ignition sources are hot surfaces with a temperature exceeding 1290°F (700°C) and electric switching devices.**

### **WARNING**

**ALWAYS SHUT OFF ELECTRICITY AT THE DISCONNECT SWITCH OR TURN OFF THE CIRCUIT BREAKERS IN THE MAIN ELECTRICAL PANEL BEFORE PREFORMING ANY SERVICE ON THIS AIR HANDLER.**

## WARNING

### RISK OF FIRE

For air handlers using A2L refrigerants connected via an air duct system to one or more rooms, only auxiliary devices approved by the air handler manufacturer or declared suitable with the refrigerant shall be installed in connecting ductwork.

## WARNING

### RISK OF FIRE – FLAMMABLE REFRIGERANT APPLICATIONS

If any refrigerating circuit contains more than 62.6 oz (1.776 kg) of R-454B refrigerant or more than 64.6 oz (1.836 kg) of R-32 refrigerant, an unventilated area where the air handler using a flammable refrigerant is installed shall be so constructed that should any refrigerant leak, it will not stagnate and create a fire or explosion hazard.

If the air duct system connected to one or more rooms with an area less than the 29 and 30 based on the total system refrigerant charge, that room shall be without continuously operating open flames (e.g.: an operating gas appliance) or other potential ignition sources (e.g.: an operating electric heater, hot surfaces). A flame-producing device may be installed in the same space if the device is provided with an effective flame arrest.

## WARNING

### RISK OF FIRE – FLAMMABLE REFRIGERANT APPLICATIONS

The ductwork connected to this air handler shall not contain an ignition source.

Auxiliary devices which may be a potential ignition source shall not be installed in the duct work. Examples of such potential ignition sources are hot surfaces with a temperature exceeding 1292°F (700°C) and electric switching devices.

Only auxiliary devices approved by the air handler manufacturer or declared suitable with the refrigerant shall be installed in connecting ductwork.

### GENERAL INFORMATION

This air handler provides the flexibility for installation in any horizontal application and may be used with or without electric heat or hydronic heat. The 5-speed constant torque motor is capable of providing sufficient air flow for most applications. Return air may enter the bottom or end of a cased air handler.

### Maximum Operating Temperature for Heat Pump Applications


For heat pump applications, the maximum outdoor temperature recommended by the manufacturer while the system is operating in the heating mode is 70°F/23.9°C.

### Inspection

As soon as the air handler is received, it should be inspected for damage that may have occurred during transit. If shipping damage is found, the extent of the damage should be noted on the carrier's freight bill. A separate request for inspection by the carrier's agent should be made in writing. See the local wholesale distributor for more information. Mortex Products, Inc assumes no liability for freight damage.

Before installing the air handler, check the cabinet for screws or bolts which may have become loose during transit. Some air handler models have shipping supports for the blower motor shaft. Remove this support before operating the air handler unit.


Check the connections of wiring, electric heater, ducts or piping to make sure there is easy access to the air handler during the installation.

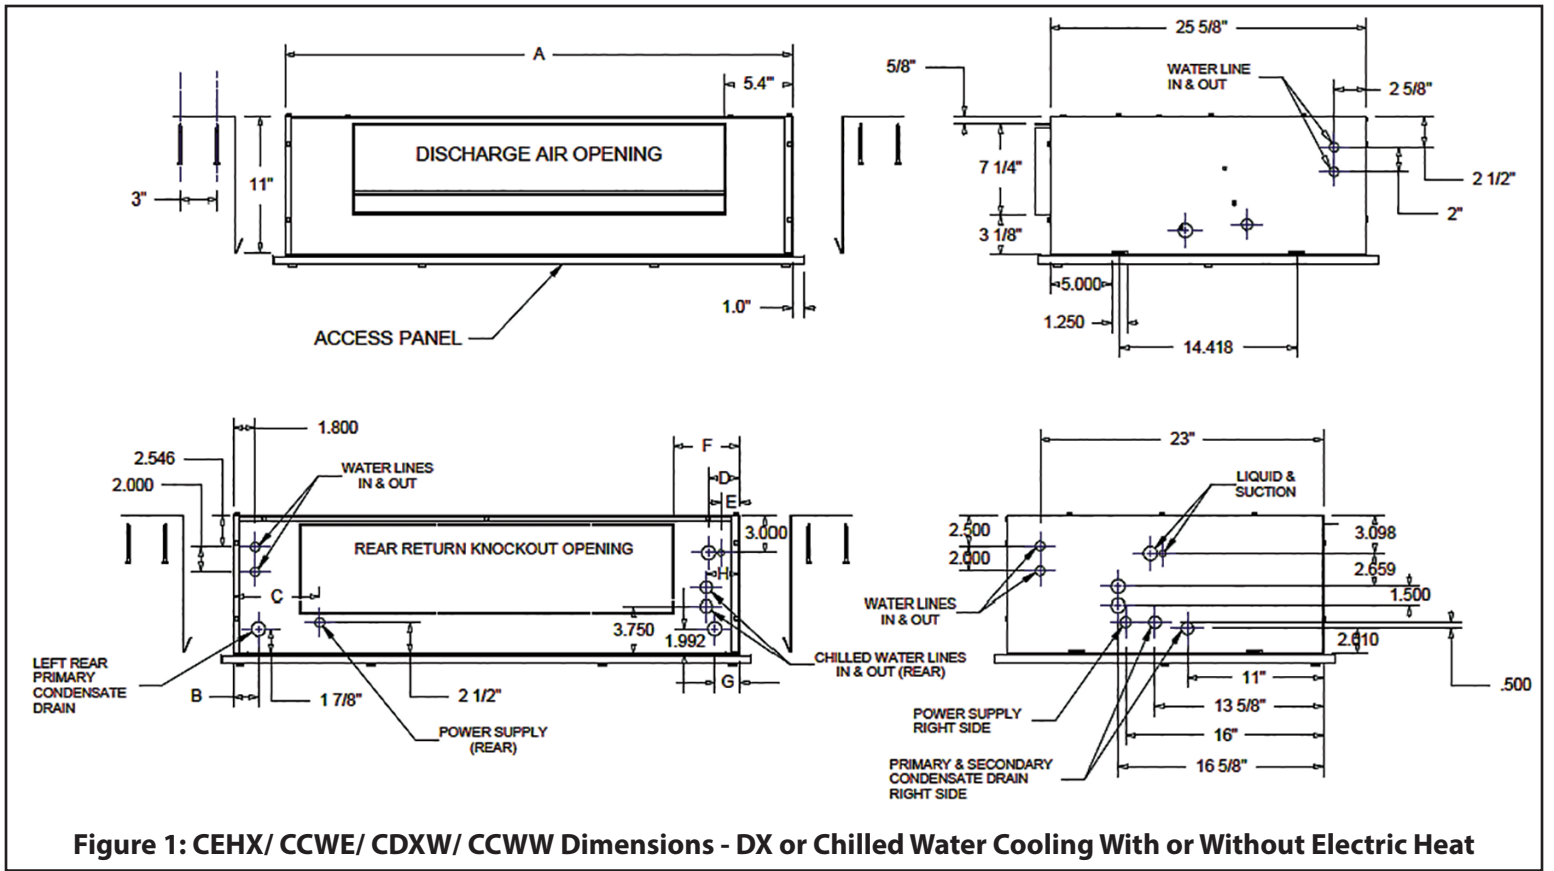

**Figure 1: CEHX/ CCWE/ CDXW/ CCWW Dimensions - DX or Chilled Water Cooling With or Without Electric Heat**

Model Number	Physical Dimensions							
	A	B	C	D	E	F	G	H
CEHX / CCWE / CDXW / CCWW - 18	41	2.625	7.125	4	3	5.25	2.625	3.75
CEHX / CCWE / CDXW / CCWW - 19	41	2.625	7.125	4	3	5.25	2.625	3.75
CEHX / CCWE / CDXW / CCWW - 24	41	2.625	7.125	4	3	5.25	2.625	3.75
CEHX / CCWE / CDXW / CCWW - 25	47	2	10.5	2.5	1.5	4.625	2	2.6875
CCWE / CCWW - 30	47	2	10.5	2.5	1.5	4.625	2	2.6875
CEHX / CCWE / CDXW / CCWW - 31	47	2	10.5	2.5	1.5	5.875	2	2.6875
CCWE / CCWW - 34	53.5	3.25	13.75	3.25	2.75	5.875	3.25	3.9375
CEHX / CCWE / CDXW / CCWW - 35	53.5	3.25	13.75	3.25	2.75	5.875	3.25	3.9375
CCWE / CCWW - 36	60.5	3.25	17.5	3.25	2.75	5.875	3.25	3.9375
CEHX / CCWE / CDXW / CCWW - 37	60.5	3.25	17.5	3.25	2.75	5.875	3.25	3.9375


**Table 1: CEHX/ CCWE/ CDXW/ CCWW Dimensional Data**

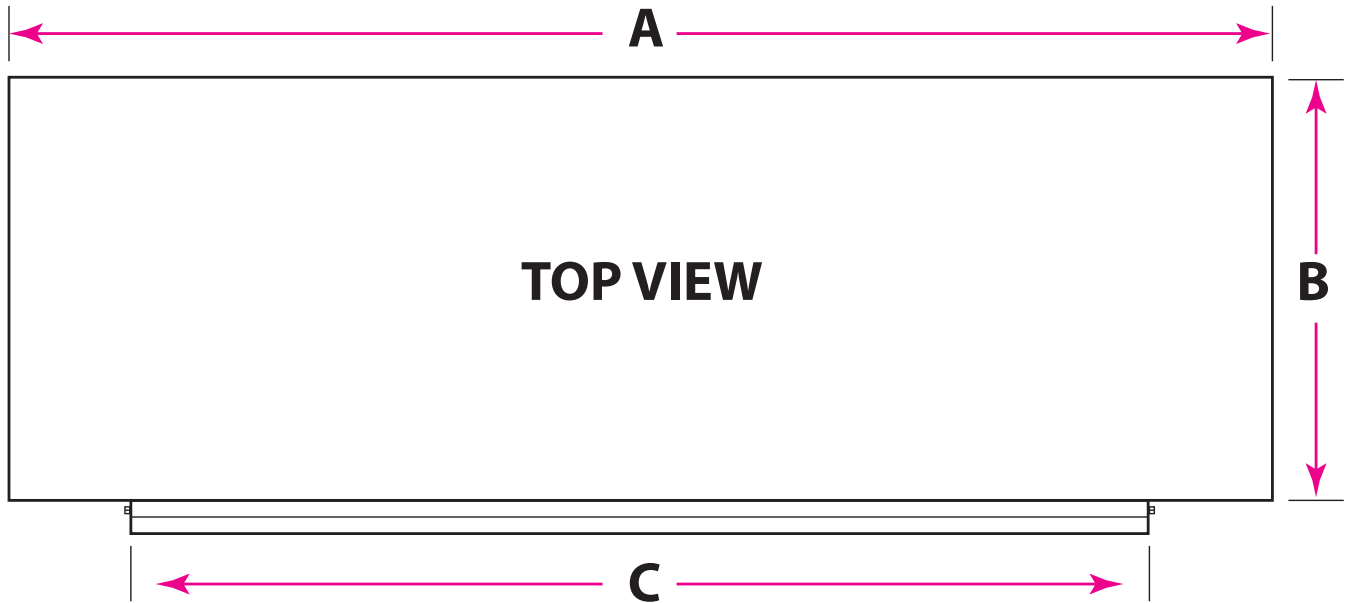

**Figure 2: CEHX/CCWE/CDXW/CCWW Dimensions - Top View**

Model Number	Physical Dimensions					
	Liquid Line	Suction Line	DX Coil Rows	A	B	C
CEHX / CCWE / CDXW / CCWW - 18	3/8"	3/4"	4	41"	25 5/8"	30 1/4"
CEHX / CCWE / CDXW / CCWW - 19	3/8"	3/4"	5	41"	25 5/8"	30 1/4"
CEHX / CCWE / CDXW / CCWW - 24	3/8"	3/4"	4	41"	25 5/8"	30 1/4"
CEHX / CCWE / CDXW / CCWW - 25	3/8"	3/4"	5	47"	25 5/8"	38 1/4"
CCWE / CCWW - 30	3/8"	3/4"	N/A	47"	25 5/8"	38 1/4"
CEHX / CCWE / CDXW / CCWW - 31	3/8"	3/4"	5	47"	25 5/8"	38 1/4"
CCWE / CCWW - 34	3/8"	3/4"	N/A	53 1/2"	25 5/8"	42 1/4"
CEHX / CCWE / CDXW / CCWW - 35	3/8"	3/4"	5	53 1/2"	25 5/8"	42 1/4"
CCWE / CCWW - 36	3/8"	3/4"	N/A	60 1/2"	25 5/8"	49 1/4"
CEHX / CCWE / CDXW / CCWW - 37	3/8"	3/4"	5	60 1/2"	25 5/8"	49 1/4"

**Table 2: CEHX/CCWE/CDXW/CCWW Dimensional Data - Top View**

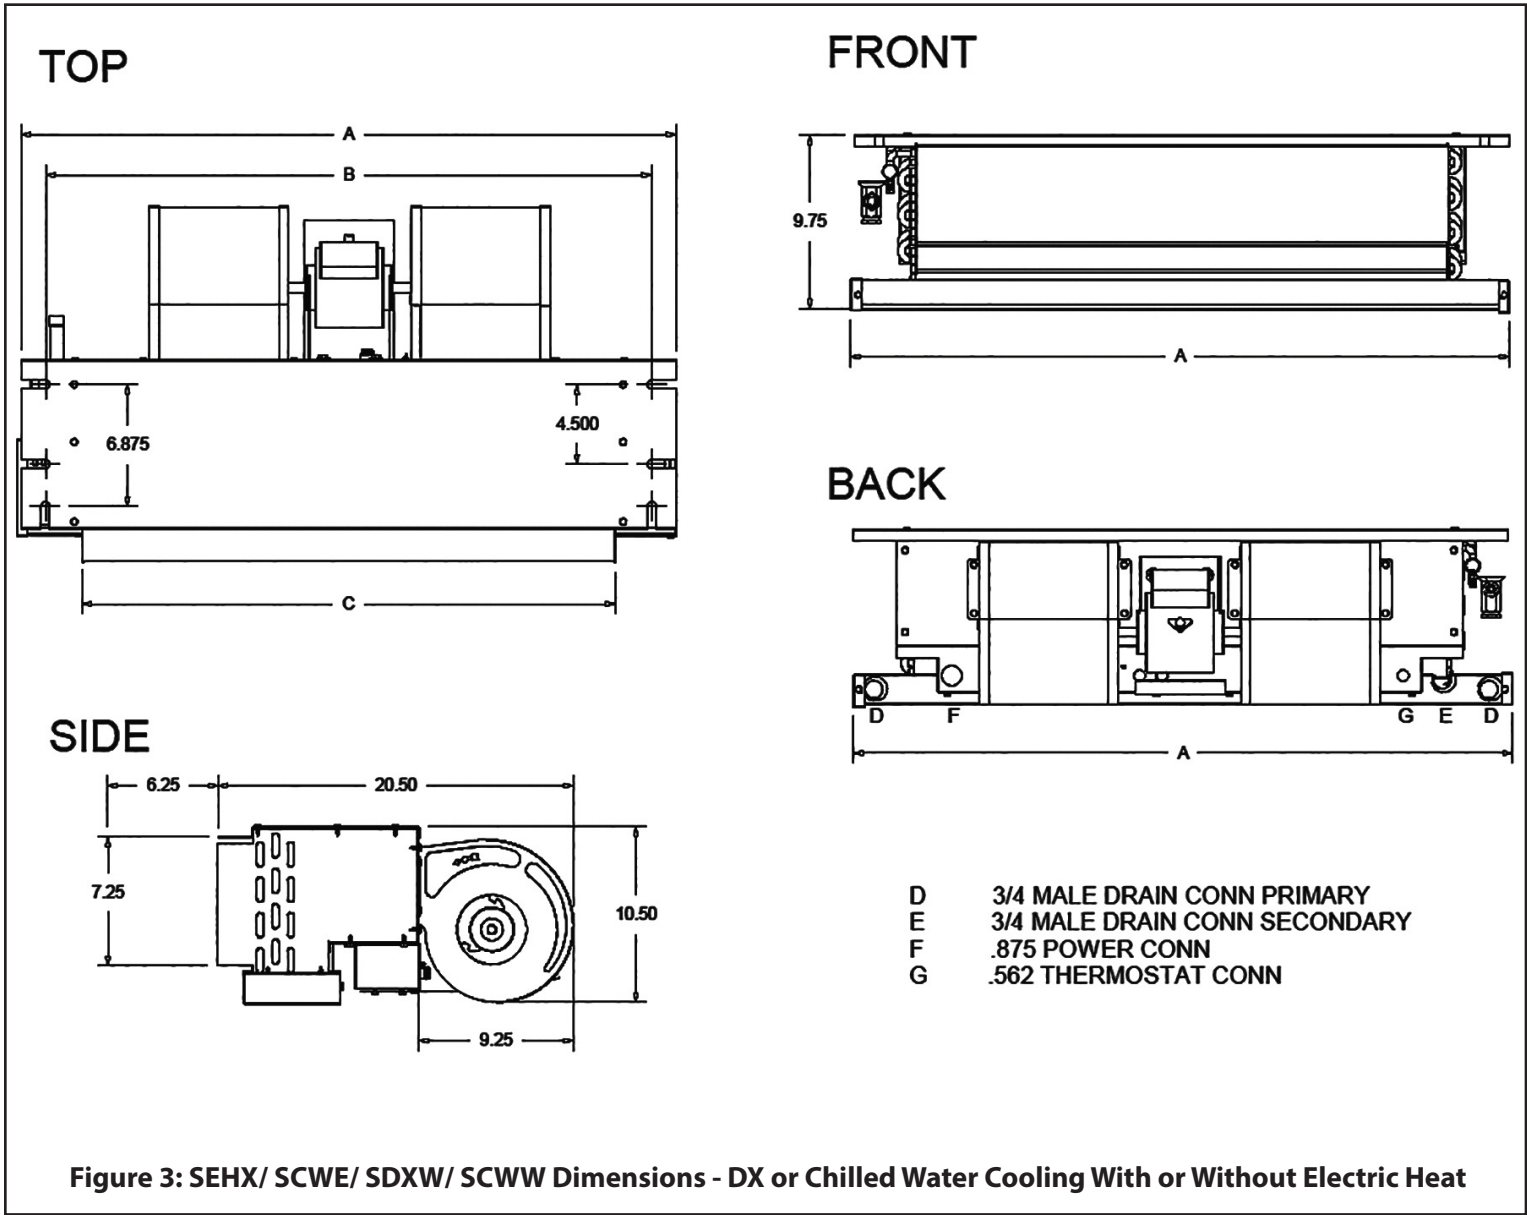

Model Number	Physical Dimensions						
	Liquid Line	Suction Line	Evap. Rows	A	B	C	Ship Weight
SEHX / SCWE / SDXW / SCWW - 18	3/8	3/4	3	37	34.25	30	60
SEHX / SCWE / SDXW / SCWW - 19	3/8	3/4	4	37	34.25	30	65
SEHX / SCWE / SDXW / SCWW - 24	3/8	3/4	3	37	34.25	30	60
SEHX / SCWE / SDXW / SCWW - 25	3/8	3/4	4	45	42.25	38	75
SEHX / SCWE / SDXW / SCWW - 30	3/8	3/4	3	45	42.25	38	70
SEHX / SCWE / SDXW / SCWW - 31	3/8	3/4	4	45	42.25	38	75
SEHX / SCWE / SDXW / SCWW - 34	3/8	3/4	3	49	46.25	42	74
SEHX / SCWE / SDXW / SCWW - 35	3/8	3/4	4	49	46.25	42	80
SEHX / SCWE / SDXW / SCWW - 36	3/8	3/4	3	56	53.25	49	85
SEHX / SCWE / SDXW / SCWW - 37	3/8	3/4	4	56	53.25	49	90

**Table 3: SEHX/SCWE/SDXW/SCWW Dimensional Data**

S		EHX - 18 - 00 - E		D - 1		C 80	
<b>Series:</b>				<b>Blower Motor and Wheel Package:</b>			
S - Horizontal Fan Coil Unit (Uncased)				80 - 1/3 HP 208/240V CT Motor w/ (2) 7.00 x 8.00 Blowers			
C - Horizontal Fan Coil Unit (Cased)				81 - 1/2 HP 208/240V CT Motor w/ (2) 7.00 x 9.00 Blowers			
<b>Type:</b>				82 - 1/3 HP 115V CT Motor w/ (2) 7.00 x 8.00 Blowers			
EHX - DX Coil and Electric Heat				83 - 1/2 HP 115V CT Motor w/ (2) 7.00 x 9.00 Blowers			
DXW - DX Coil and Hot Water Heat				84 - 1/3 HP 115V CT Motor w/ (2) 6.25 x 6.88 Blowers			
CWE - Chilled Water Coil and Electric Heat				85 - 1/3 HP 208/240V CT Motor w/ (2) 6.25 x 6.88 Blowers			
CWW - Chilled Water Coil and 2 Row Hot Water Coil				86 - 1/2 HP 208/240V CT Motor w/ (2) 6.25 x 8.00 Blowers			
<b>Cooling Capacity (Tons):</b>				87 - 1/2 HP 115V CT Motor w/ (2) 6.25 x 8.00 Blowers			
18,19 - 18,000 BTU Cooling				<b>Unit Voltage:</b>			
24,25 - 24,000 BTU Cooling				A - 115V			
30,31 - 30,000 BTU Cooling				C - 208/240V			
34,35,36,37 - 36,000 BTU Cooling				<b>Time Delay Relay and Hydronic Control:</b>			
<b>Heating Capacity:</b>				0 - No Time Delay Relay ( Standard)			
00 - Electric Heat Capacity (kW)				1 - With Time Delay Relay			
26 - Hot Water Heating Capacity (MBTU/H)				2 - With Hydronic Control Board			
00 - No Heat with Chilled Water Cooling				<b>Expansion Valve Number or Chilled Water Coil Rows:</b>			
<b>Expansion Valve or Chilled Water Configuration:</b>				D - TXV4-A (R-410A, 1.5 to 3.0 Ton)			
E - Expansion Valve (DX Coil - Standard)				Y - TXV4-A (R410A, 3.0 Ton)			
2 - 2 Pipe Chilled Water (Cooling Coil Only)				F - R32 (1.5 - 3.0 Ton)			
4 - 4 Pipe Chilled Water (Cooling Coil and Separate 2 Row Hot Water Coil)				P - R454B (1.5 - 3.0 Ton)			
				4 - 4 Row Chilled Water Cooling Coil			
				5 - 5 Row Chilled Water Cooling Coil			

**Table 4: Model Number Nomenclature**

**SECTION 3: LOCATION AND CLEARANCES**

**⚠ WARNING**

**RISK OF FIRE**

Refer to Tables 29 and 30 for the minimum floor area of the conditioned space served by this air handler due to the use of an A2L class flammable refrigerant.

**⚠ WARNING**

**RISK OF FIRE – FLAMMABLE REFRIGERANT APPLICATIONS**

If any refrigerating circuit contains more than 62.6 oz (1.776 kg) of R-454B refrigerant or 64.6 (1.836 kg) of R-32 refrigerant, an unventilated area where the air handler using a flammable refrigerant is installed shall be so constructed that should any refrigerant leak, it will not stagnate and create a fire or explosion hazard.

If the air duct system connected to one or more rooms with an area less than the minimum conditioned space floor area shown in Tables 29 and 30 based on the total system refrigerant charge, that room shall be without continuously operating open flames (e.g.: an operating gas appliance) or other potential ignition sources (e.g.: an operating electric heater, hot surfaces). A flame-producing device may be installed in the same space if the device is provided with an effective flame arrest.

When flammable A2L class refrigerants are used, the minimum floor area of the conditioned space the air handler serves must comply with Tables 29 and 30 to allow a refrigerant leak to disperse and be diluted with air to eliminate the risk of the refrigerant igniting and causing an explosion and/or fire. The minimum floor area must be corrected by an altitude adjustment factor based on the building site ground level altitude. See Table 5 for the altitude adjustment factor for various altitudes and refer to the example below for how to apply the altitude adjustment factor.

**Example:**

- Total System Charge = 2.6 kg of R-454B
- Altitude = 2400 m
- Min. Conditioned Floor Area (MCFA) from Table 29 = 7.97 m<sup>2</sup>
- Altitude Adjustment Factor (AF) from Table 5 = 1.24
- Adjusted MCFA = MCFA x AF
- Adjusted MCFA (@ 2400 m altitude) = 7.97 m<sup>2</sup> x 1.24 = 9.88 m<sup>2</sup>

Altitude Correction Factors									
Altitude (m)	0	100	200	300	400	500	600	700	800
Altitude (ft)	0	328	656	984	1312	1640	1969	2297	2625
AF	1.00	1.01	1.02	1.02	1.03	1.04	1.05	1.06	1.07
Altitude (m)	900	1000	1100	1200	1300	1400	1500	1600	1700
Altitude (ft)	2953	3281	3609	3937	4265	4593	4921	5249	5577
AF	1.08	1.09	1.10	1.11	1.12	1.13	1.14	1.15	1.16
Altitude (m)	1800	1900	2000	2100	2200	2300	2400	2500	2600
Altitude (ft)	5906	6234	6562	6890	7218	7546	7874	8202	8530
AF	1.17	1.18	1.19	1.20	1.21	1.22	1.24	1.25	1.26
Altitude (m)	2700	2800	2900	3000	3100	3200	3400	3600	3700
Altitude (ft)	8858	9186	9514	9842	10171	10499	11155	11811	12139
AF	1.27	1.29	1.30	1.31	1.33	1.34	1.37	1.40	1.42

**Table 5: Altitude Adjustment Factors**

## Location

Access for servicing is an important factor when selecting the location of an air handler. Provide a minimum of 30 inches under the air handler for access to the control box, heating elements, water pump, blower, and air filters. The air handler can be serviced entirely from the bottom, including replacing the air filter on models equipped with a louvered ceiling access panel with an integrated filter rack.

**NOTE:** The air handler is designed for horizontal applications only and is therefore not designed to be installed in a closet or flush mounted in a wall in an upflow vertical position.

Location is usually predetermined. Check with the homeowner or general contractor for predetermined installation plans. If location has not been decided, consider the following in choosing a suitable location.

1. Select a location with adequate structural support, space for service access, and clearance for return and supply duct connections. The air handler is designed to fit in a 12" high drop down space (furred-in area).
2. To assure that the refrigerant leak detection system works properly, the inside dimensions of the furred down area for an **uncased air handler** must be no larger than 12 inches tall x 60 inches wide x 48 inches deep. The furred down area must be completely sealed (with the exception of return air grille) to ensure that return air is being pulled from the conditioned space only. These requirements do not apply to **cased air handlers**.
3. Normal operating sound levels may be objectionable if the air handler is placed directly over or under some rooms such as bedrooms, study, etc.
4. Locate the air handler where the supply and return air ducts can provide even air distribution to and from the living spaces.
5. Locate the air handler where the electrical supply wiring can be easily routed from main electrical panel to the air handler and where electrical wiring will not be damaged.
6. Supply power wiring may be installed in a flexible conduit or armored cable. The installer must refer to National Electrical Code (NFPA 70), Canadian Electrical Code, Part I (CSA C22.2), ANSI/NFPA No. 70 and/or any local codes to ensure supply wiring complies with all applicable codes.
7. Locate appliance where thermostat wiring can be easily routed from the thermostat to the air handler and where the wiring will not be damaged. Make sure the wiring has enough length so it will not block access to any components that may need to be replaced or serviced.
8. Locate the air handler where refrigerant lines can be easily routed from the air handler to the outdoor unit.
9. Primary and secondary drain lines must be routed so air filter replacement is not obstructed.
10. The blow-thru design of this air handler will cause the exterior surface of cabinet to sweat when installed in a non-conditioned space such as an attic or garage. The installer must provide protection such as a full size auxiliary drain pan under any unit installed in a non-conditioned space to prevent damage to the building structure from condensation runoff is a consideration.

## Clearances

This air handler is approved for 0 inches of clearance to combustible material on any part of the air handler exterior casing and the inlet or outlet ducts (See Table 6). A clearance of 30 inches below the air handler is required for the service access panel to swing open (See Figure 5).

Top (inches)	Back (inches)	Sides (inches)	Supply Duct (inches)
0	0	0	0

**Table 6: Clearance to Combustibles**

## SECTION 4: RETURN AND SUPPLY AIR REQUIREMENTS

### RETURN AIR REQUIREMENTS

Provisions shall be made to permit air in the conditioned space to return to the air handler. Failure to provide means for adequate return air will result in reduced airflow through the air handler causing improper heating and cooling of the living space. Reduced airflow may also cause the cooling coil to freeze up and the electric heat limit(s) to cycle, resulting in premature heating element failure.

**NOTE:** Utilizing the space above a dropped ceiling for return air is not permissible for this air handler.

**NOTE:** The return air must be filtered to prevent a buildup of lint, dust, and debris on the coil surface.

**NOTE:** For free return (non-ducted return air) installations, the furred down area must be completely sealed (with the exception of return air grille) to ensure that return air is being pulled from the conditioned space only.

### Uncased Air Handler – Return Air

If a louvered service access panel with an integral filter (See Figure 4) is not used, a return air duct should be routed between the ceiling joists from the furred-in area around the air handler to a return air filter grille located in the ceiling. The return air grille must never be located in a closet.

**NOTE:** The return air must be filtered to prevent a buildup of lint, dust, and debris on the coil surface.

### Cased Air Handler – Return Air

A cased air handler can utilize a louvered ceiling access panel with an integral filter (See Figure 4) as a means of returning the conditioned air from the conditioned space to the air handler.

A cased air handler may also utilize a non-louvered ceiling access panel with a return air duct attached to the return air opening in the air handler. If a return air duct is used, the return air opening knock-out must be removed to allow the return air to enter the air handler through the return air opening. The return air duct may consist of an elbow that drops directly into a return air filter grille in the ceiling or the return duct may be routed between the ceiling joists to a return air filter grille located in the ceiling away from the air handler.

**NOTE:** The return air must be filtered to prevent a buildup of lint, dust, and debris on the coil surface.



## WARNING

**NON-METALLIC RETURN DUCTS MAY NOT BE ALLOWED IN SOME STATES, COUNTIES, OR CITIES.**

**CHECK ALL STATE, LOCAL AND FIRE CODES TO DETERMINE IF NON-METALLIC RETURN DUCTS ARE ALLOWED.**

## ! WARNING

**FIRE HAZARD:**  
**NON-METALLIC DUCTS CAN COLLECT DUST AND DEBRIS WHICH CAN RESULT IN A FIRE HAZARD. BE SURE TO THOROUGHLY CLEAN THE DUCT SYSTEM ANNUALLY TO REMOVE ALL DUST AND DEBRIS.**

## ! WARNING

### IMPACT HAZARD

Use extreme caution when removing the ceiling access panel screws. The panel is secured to the frame assembly with the thumb screws. Once the thumb screws have been removed, the ceiling access panel will swing down rapidly and can injure anyone standing underneath the panel. The panel must be supported from underneath as it swings downward to prevent injury.

The louvers can also have sharp edges which can cut hands or fingers. Wearing gloves is recommended when servicing the horizontal air handler.

### Return Air Filter Location

Horizontal air handlers are not factory equipped with an air filter. The air filter can be installed in the filter rack of the louvered ceiling access panel (See Figure 4 and Table 7) or it may be located remotely in a ceiling mounted return air filter grille. If a return duct and return air filter grille is used, a non-louvered ceiling access panel will be required.

The recommended minimum filter sizes for a return air filter grille is shown below.

Standard Throw-Away Air Filter @ 300 ft/min or Less

600 CFM = 16" x 20" x 1"

700 CFM = 20" x 20" x 1"

800 CFM = 20" x 20" x 1"

900 CFM = 20" x 24" x 1"

1000 CFM = 20" x 24" x 1"

**NOTE:** Pleated filters are not recommended due to their higher pressure drop.

Part Number	Overall Frame Width (A in Figure 4)	Type	SunTherm Horizontal Fan Coil Models	Filter Size/Qty
HCPL-1	43	Louvered	SCWE/CCWE/SDXW/CDXW/CCWW-18	16" x 16" x 1" / 2
CPNL-1		Non-Louvered	SCWE/CCWE/SDXW/CDXW/CCWW-19 SCWE/CCWE/SDXW/CDXW/CCWW-24	N/A
HCPL-2	49	Louvered	SCWE/CCWE/SDXW/CDXW/CCWW-25	16" x 20" x 1" / 2
CPNL-2		Non-Louvered	SCWE/CCWE/SDXW/CDXW/CCWW-30 SCWE/CCWE/SDXW/CDXW/CCWW-31	N/A
HCPL-3	55.5	Louvered	SCWE/CCWE/SDXW/CDXW/CCWW-34	16" x 25" x 1" / 2
CPNL-3		Non-Louvered	SCWE/CCWE/SDXW/CDXW/CCWW-35	N/A
HCPL-4	62.5	Louvered	SCWE/CCWE/SDXW/CDXW/CCWW-36	16" x 25" x 1" / 2
CPNL-4		Non-Louvered	SCWE/CCWE/SDXW/CDXW/CCWW-37	N/A

**Table 7: Ceiling Access Panels**

### SUPPLY AIR REQUIREMENTS


The horizontal air handler can be mounted into the ceiling to allow horizontal left supply air flow or horizontal right supply air flow. The supply air plenum is attached and secured to the air handler duct flanges using screws. Use a non-tape sealant such as mastic or an aerosol sealant to seal the plenum to the air handler to prevent air leakage. The supply plenum must be the same size as the supply air opening.

The entire supply duct system must be designed for a total of 0.20" W.C. static pressure drop or less and each individual duct must be sized to deliver the proper amount of air to each room of the conditioned space. Holes cut in the supply plenum for ducts must be the same size as the supply ducts. Use a duct starting collar to attach the ducts to the plenum. Use a non-tape sealant such as mastic or an aerosol sealant to seal the ducts to the plenum to prevent air leakage.

If the supply duct system is installed in a non-conditioned space, the duct system must be insulated and installed in accordance with local codes.

## ! IMPORTANT

**USING A DUCTED RETURN WILL RESULT IN QUIETER OPERATION THAN USING A LOUVERED CEILING ACCESS PANEL USED FOR RETURN AIR.**

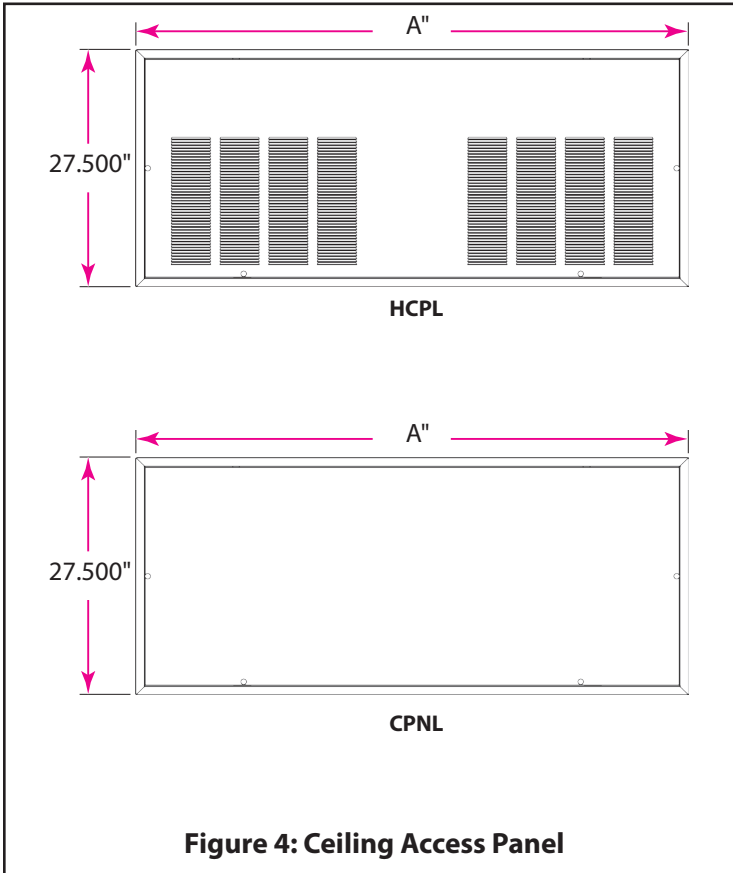

**Figure 4: Ceiling Access Panel**

If the supply duct system is installed in a non-conditioned space, the duct system must be insulated and installed in accordance with local codes.

## SECTION 5: AIR HANDLER INSTALLATION

### Ceiling Installation

The area in the ceiling where the air handler is to be located should have a framed in structure so the air handler can be properly mounted and secured. The inside height of the area must be 12 inches. Prior to installing the air handler, holes must be cut into the frame for the refrigerant tubing, drain line(s), electrical wiring, thermostat wiring, and outdoor unit control wiring to enter the air handler. The air handler must be level in both directions to allow proper condensate drainage.

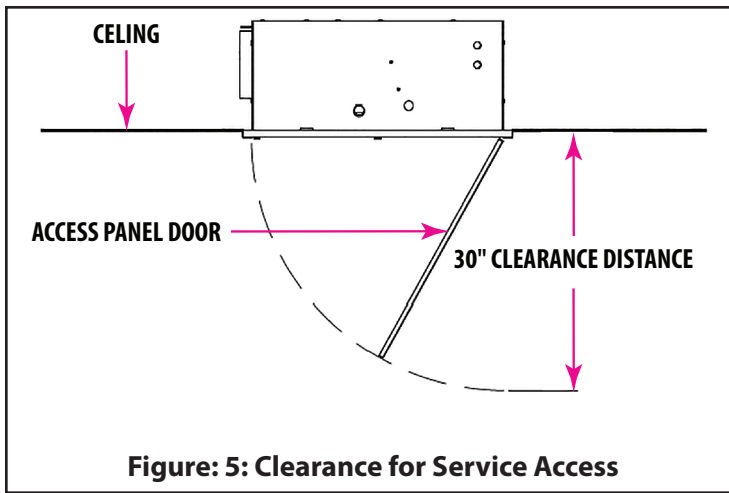


Figure 5: Clearance for Service Access

**NOTE:** Cased air handlers require return and supply transition ducts to assure proper airflow. See Figure 6 below for factory recommendations.

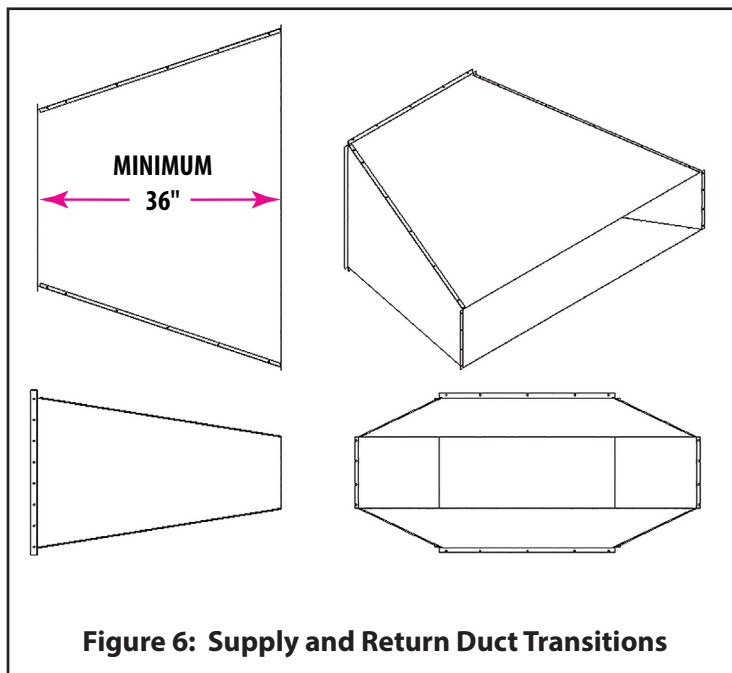


Figure 6: Supply and Return Duct Transitions

## WARNING

### Risk of Fire – Flammable Refrigerant Applications

To assure that the refrigerant leak detection system works properly, the inside dimensions of the furred down area for an uncased air handler must be no larger than 12 inches tall x 60 inches wide x 48 inches deep. The furred down area must be completely sealed (with the exception of return air grille) to ensure that return air is being pulled from the conditioned space only. These requirements do not apply to cased air handlers.

## WARNING

The air handler and enclosure must be covered during the drywall installation, texturing, and painting process to prevent spray and debris from collecting on and entering the air handler and enclosure.

## WARNING

*Extreme caution must be taken that no internal damage will result if screws or holes are drilled into the cabinet.*

## WARNING

### RISK OF FIRE – FLAMMABLE REFRIGERANT APPLICATIONS

The following requirements are necessary to allow the flammable refrigerant mitigation system to properly dilute the refrigerant with air in the event of a refrigerant leak.

The supply and return air shall be directly ducted to the space. Open areas such as false ceilings shall not be used as a return air duct.

Keep all supply and return registers for this air handler clear of obstructions.

## Cased Air Handler

The following steps are required to properly install a cased air handler.


1. Remove the top shipping cover and corner posts.
2. Remove the bottom shipping cover.
3. Use screws to secure the 4 straps to the ceiling joists where the air handler will be installed (See Figure 7). The straps must be located so the hooks in the straps line up with the slots in the base of the air handler.
4. Raise the air handler into place and place the hooks into the slots in the base. Bend the hooks back to keep the hooks from slipping out of the slots in the base.
5. Connect the supply air plenum to the air handler supply air duct flanges as described in **SUPPLY DUCT REQUIREMENTS** found in **SECTION 4** of these instructions.
6. **New Installations Only:**
  - a. If a non-louvered ceiling access panel is being used, connect the return air duct to the air handler as described in **RETURN AIR REQUIREMENTS / Cased Air Handler** found in **SECTION 4** of these instructions.
  - b. After the air handler is mounted, a 2x2 or 2x4 frame must be installed around the base of the air handler to create an air tight seal and support the ceiling access panel frame.
  - c. Install the ceiling access panel.

**NOTE:** The ceiling access panel is sold separately. It is not included with the air handler.

7. Remove the thumb screws that secure the ceiling access panel and slowly swing the panel down.
8. Remove the control box cover.
9. Connect the electrical supply wires and the thermostat control wires to the appropriate terminal block and pigtails in the control box as described in **SECTIONS 9 and 10** of these instructions.

**NOTE:** An ON/OFF switch must be installed in the supply circuit to disconnect the power to the air handler during servicing. The identified.

10. Connect the refrigerant lines or chilled water lines to the coil as in **SECTIONS 6 and 7** of these instructions.

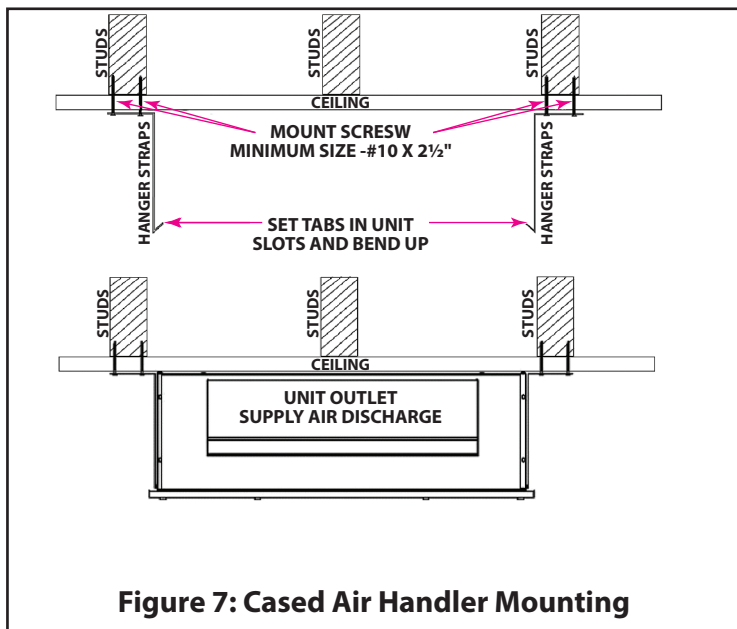

**Figure 7: Cased Air Handler Mounting**

11. Make the necessary blower motor speed changes as described in **SECTION 11** of these instructions.
12. Install the control box cover.
13. Raise the ceiling access panel into place and secure with the thumb screws.
14. Turn the power on to the unit by following the procedure found in **SECTION 13** of these instructions and in the **Users Information Manual** to place the air handler into service.
15. Set the thermostat to the desired operating mode and temperature.

## Uncased Air Handler

**NOTE:** To assure that the refrigerant leak detection system works properly, the inside dimensions of the furred down area for an **uncased air handler** must be no larger than 12 inches tall x 60 inches wide x 48 inches deep. The furred down area must be completely sealed (with the exception of return air grille) to ensure that return air is being pulled from the conditioned space only. These requirements do not apply to **cased air handlers**.

The following steps are required to properly install a cased air handler.

1. Remove the top shipping cover and corner posts.
2. Remove the screws from the control box cover and remove the cover.
3. Remove the bottom shipping cover.
4. Raise the air handler into place and install the lag bolts with washers through the slots in the top cover. Tighten the lag bolts until the air handler is securely fastened to the ceiling.
5. Connect the supply air plenum to the air handler supply air duct flanges as described in **SUPPLY DUCT REQUIREMENTS** found in **SECTION 4** of these instructions.
6. **New Installations Only:**
  - a. If a non-louvered ceiling access panel is being used, install the return air duct as described in **RETURN AIR REQUIREMENTS / Uncased Air Handler** found in **SECTION 4** of these instructions.
  - b. After the air handler is mounted, a 2x2 or 2x4 frame must be installed around the base of the air handler to create an air tight seal and support the ceiling access panel frame.
  - c. Install the ceiling access panel.

**NOTE:** The ceiling access panel is sold separately. It is not included with the air handler.

7. Remove the thumb screws that secure the ceiling access panel and slowly swing the panel down.
8. Remove the control box cover.
9. Connect the electrical supply wires and the thermostat control wires to the appropriate terminal block and pigtails in the control box as described in **SECTIONS 9 and 10** of these instructions.

**NOTE:** An ON/OFF switch must be installed in the supply circuit to disconnect the power to the air handler during servicing.

10. Connect the refrigerant lines or chilled water lines to the coil as in **SECTIONS 6 and 7** of these instructions.
11. Make the necessary blower motor speed changes as described in **SECTION 12** of these instructions.
12. Install the control box cover.
13. Raise the ceiling access panel into place and secure it with the thumbscrews.
14. Turn the power on to the unit by following the procedure found in **SECTION 13** of these instructions and in the Users


15. Set the thermostat to the desired operating mode and temperature.

**SECTION 6: REFRIGERANT PIPING, TXV, FLOWRATOR, CONDENSATE DRAIN**

**DX Refrigerant Piping:**

Air handlers with DX type evaporator coils require liquid and suction piping sized in accordance with the outdoor unit manufacturer's instructions. The DX coil has sweat copper connections. Refrigerant lines should be soldered with silver solder or high temperature brazing alloy. The suction line must be insulated to prevent condensate from forming and dripping off. Armaflex (or equivalent) with 3/8" (1 cm) minimum wall thickness is recommended. In severe conditions, such as hot or high humidity areas, insulation with 1/2" (1.3 cm) minimum wall thickness may be required. If the outdoor unit is installed above air handler, oil traps are required at equal intervals along suction line (See Figure 8). Horizontal suction lines should slope downward 1 inch for every 20 feet toward the outdoor unit. Flow dry nitrogen through refrigerant lines during the soldering operation to prevent oxidation of the inside surface of the copper tubing which can result in debris plugging the TXV or orifice screen.

- Install 1 oil trap for a height difference of 15 ft to 25 ft (4.6 m to 7.6 m) between indoor and outdoor units.
- Install 2 oil trap for a height difference of 26 ft to 50 ft (7.9 m to 15.2 m) between indoor and outdoor units.
- Install 3 oil trap for a height difference of 51 ft to 100 ft (15.5 m to 30.5 m) between indoor and outdoor units.
- Install 4 oil trap for a height difference of 101 ft to 150 ft (30.8 m to 45.7 m) between indoor and outdoor units.

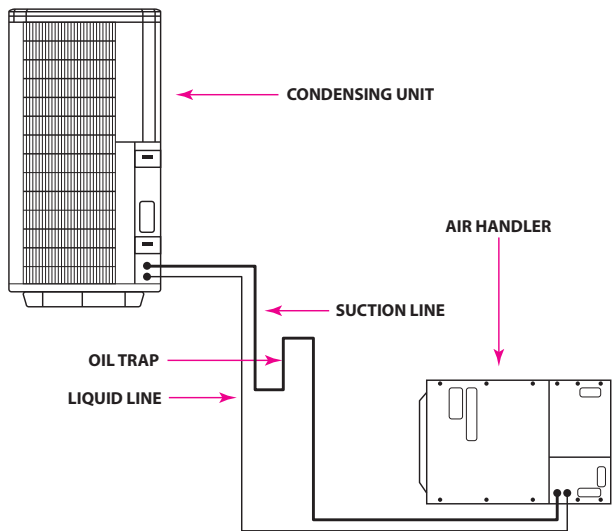

**Figure 8: Piping for Air Handler Below Outdoor Unit**

**SPECIAL PIPING INSTRUCTIONS DUE TO THE USE OF AN A2L CLASS FLAMMABLE REFRIGERANT**

**WARNING**

**RISK OF FIRE**

**This following precautions must be taken for the refrigerant piping due to this air handler being used with an A2L class flammable refrigerant.**

Piping material, pipe routing, and installation shall include protection from physical damage in operation and service, and shall be in compliance with national and local codes and standards, such as ASHRAE 15, IAPMO Uniform Mechanical Code, ICC International Mechanical Code, or CSA B52. All field joints shall be accessible for inspection prior to being covered or enclosed.

The installation of pipe-work shall be kept to a minimum.

Due to this air handler being used with an A2L class flammable refrigerant, the refrigerant pipe-work shall not be installed in an unventilated space if that space is smaller than the minimum floor area shown in Tables 29 and 30 unless there are no joints in the pipe-work in that space (e.g.: pipework that is run in walls or between floors).

Since refrigerant line length affects the final refrigerant charge, the final refrigerant charge after field charging of the system must be noted and used when determining the minimum floor area of the conditioned space from Tables 29 and 30 .

Mechanical connections shall be accessible for maintenance purposes.

For appliances using flammable refrigerants, all joints made in the installation between parts of the refrigerating system, with at least one part charged, shall be made in accordance with the following:

- A brazed, welded, or mechanical connection shall be made before opening the valves to permit refrigerant to flow between the refrigerating system parts. A vacuum valve shall be provided to evacuate the interconnecting pipe or any uncharged refrigerating part.
- Mechanical connectors used indoors shall comply with ISO 14903 or UL 207 Annex A (USA only). When mechanical connectors are reused indoors, sealing parts shall be renewed. When flared joints are reused indoors, the flare part shall be refabricated.
- Refrigerant tubing shall be protected or enclosed to avoid damage.
- Flexible refrigerant connectors (such as connecting lines between the indoor and outdoor unit) that may be displaced during normal operation shall be protected against mechanical damage.

For installations with field applied joints that are exposed in the occupied space, these joints shall be at least one of the following:

- mechanical joints in compliance with ISO 14903 or UL 207 Annex A (USA only)
- welded or brazed joints; or
- joints in enclosures that vent to the unit or to the outside.

Provision shall be made for expansion and contraction of long runs of piping.

Protection devices, piping, and fittings shall be protected as far as possible against adverse environmental effects, for example, the danger of water collecting and freezing in relief pipes or the accumulation of dirt and debris.

Piping in refrigeration systems shall be so designed and installed to minimize the likelihood of hydraulic shock damaging the system.

After completion of field piping for split systems, the field pipework shall be pressure tested with an inert gas and then vacuum tested prior to refrigerant charging, according to the following requirements:

- The minimum test pressure for the low side of the system shall be the low side design pressure as stated on the air handler rating plate and the minimum test pressure for the high side of the system shall be the high side design pressure as stated on the air handler rating plate, unless the high side of the system cannot be isolated from the low side of the system in which case the entire system shall be pressure tested to the low side design pressure.
- The test pressure after removal of pressure source shall be maintained for at least 1 hour with no decrease of pressure indicated by the test gauge, with test gauge resolution not exceeding 5% of the test pressure.
- During the evacuation test, after achieving a vacuum level specified in the manual or less, the refrigeration system shall be isolated from the vacuum pump and the pressure shall not rise above 1500 microns within 10 min. The vacuum pressure level shall be the lesser of 500 microns or the value required for compliance with national and local codes and standards, which may vary between residential, commercial, and industrial buildings.

Field-made refrigerant joints indoors shall be tightness tested. The test method shall have a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0.25 times the maximum allowable pressure. No leak shall be detected.

### SPECIAL INSTRUCTIONS FOR COILS WITH THERMAL EXPANSION VALVES (TXV)

The thermal expansion valve (TXV) used in this air handler has a built-in check valve making it heat pump capable. The external equalizer line attached to the TXV has a female flare nut with built in Schrader valve depressor that attaches to the Schrader valve port located on the coil suction manifold.

A TXV has a thermostatic element separated from the valve body by a diaphragm designed to regulate the rate at which refrigerant flows into the evaporator.

The best location for the TXV sensing bulb is on a horizontal section of the suction line tube and positioned between 10 o'clock and 2 o'clock on the tube. (See Figures 9 and 10).

**NOTE:** The sensing bulb must never be located at the bottom of the suction line due to the possibility of oil and refrigerant laying in the bottom of the pipe causing false signals.

The sensing bulb must be able to sense the temperature of the superheated suction vapor and must therefore not be located in a position that will expose it to extraneous heat/cold. The sensing bulb must be insulated to isolate it from the surrounding air. The TXV must be the proper size and type to achieve the performance ratings of the system.

**NOTE:** If a non-bleed type TXV is used, the outdoor unit may require a hard start kit to allow the compressor to start under load.

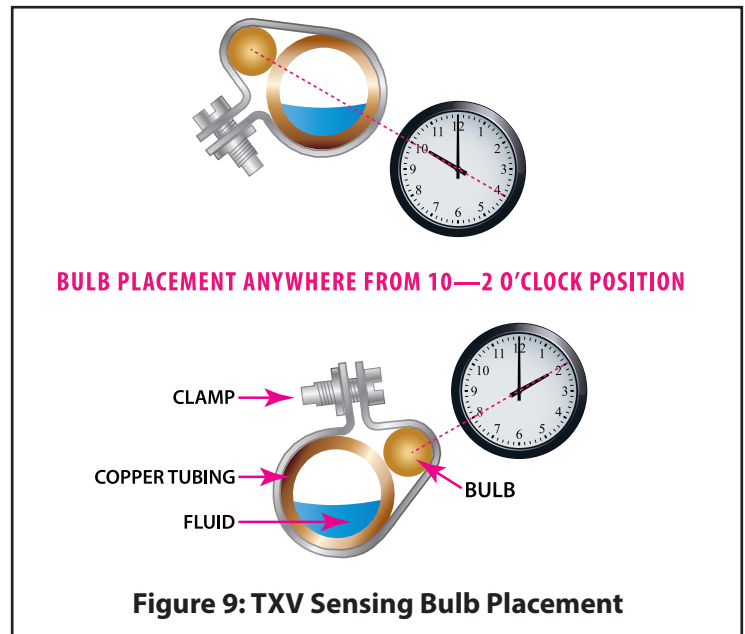


Figure 9: TXV Sensing Bulb Placement

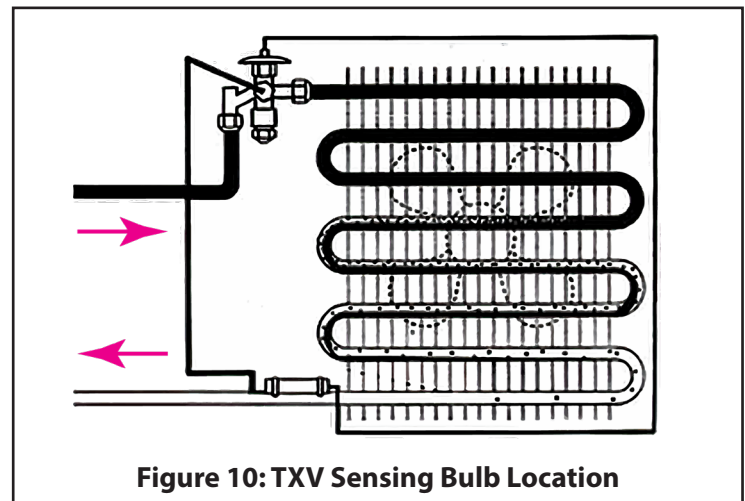


Figure 10: TXV Sensing Bulb Location

### How the TXV Controls Superheat

The TXV is a precision device designed to regulate the rate at which liquid refrigerant flows into the evaporator. This controlled flow is necessary to provide optimum performance and to prevent the return of liquid refrigerant to the compressor.

The TXV separates the high pressure and low-pressure sides of a refrigeration or air conditioning system. Liquid refrigerant enters the TXV under high pressure, but the pressure is reduced when the flow of the refrigerant is restricted by an internal moving pin and port.

It is important to remember that the TXV only controls the level of superheat of the refrigerant in the suction line. The TXV is not designed to control air temperature, head pressure, capacity, suction pressure, or humidity. Attempts to adjust the TXV to control any of these system variables will lead to poor system performance and possible compressor failure.

The TXV responds to the temperature of refrigerant gas as it leaves the evaporator. This temperature is detected by the sensing bulb which is located near the evaporator outlet. The TXV also responds to the refrigerant pressure within the evaporator, which is transmitted to the TXV by an equalizer tube connected to the coil suction manifold. By responding to these variables, the TXV maintains a predetermined superheat level exiting the evaporator

which maintains proper system stability, performance, and reliability.

## TXV TROUBLESHOOTING

The thermostatic expansion valve (TXV) is like the carburetor in a car engine. It opens and closes to allow the correct amount of refrigerant flow through the system. When the TXV isn't working properly, the capacity and efficiency of the system is reduced. If a faulty TXV is suspected, perform the following tests:

Connect refrigerant gauges to the system and check that the refrigerant pressures, liquid subcooling and suction superheat levels are correct according to the outdoor unit charging chart. Subcooling at the outdoor unit liquid service valve is normally around 10°F and superheat at the outdoor unit suction service valve is normally between 8-12°F, but these can vary depending on the manufacturer and model of the outdoor unit.

Check to see if the indoor airflow through the system is correct. Check to see if the indoor and outdoor coils and indoor air filters are dirty. Clean dirty coils and clean/replace dirty air-filters as necessary before measuring air-flow and checking pressures, superheat, and subcooling.

Make sure the refrigerant charge in the system is correct. This step may require weighing the refrigerant in the system. Once refrigerant charge weight has been adjusted as necessary, recheck the pressures, subcooling and superheat. If these values are still not correct, the TXV may be defective or the TXV inlet strainer or the liquid line filter dryer is plugged with debris.

A good way to determine if the TXV is defective is to remove the TXV's sensing bulb from the suction line and check the pressures, subcooling, superheat again. No change in the pressures, subcooling, and superheat levels is an indication the TXV is defective. Another test that can be performed is to place the sensing bulb in ice water and recheck the pressures, superheat, and subcooling levels. If these values don't change, the TXV is likely defective.

### Additional TXV Troubleshooting Information

#### Low Suction Pressure – High Superheat

POSSIBLE CAUSES:

1. Undersized TXV
2. TXV superheat adjustment too high
3. High indoor coil pressure drop due to internal restriction
4. TXV sensing bulb installed on bottom of suction line
5. Restricted or capped TXV external equalizer tube
6. Improper TXV external equalizer location (must be located on suction manifold after the last feeder tube)
7. Low refrigerant charge
8. Plugged liquid line filter dryer
9. Plugged TXV inlet strainer
10. Low outdoor ambient temperature

#### High Suction Pressure – Low Superheat

POSSIBLE CAUSES:

11. Oversized TXV
12. TXV seat leakage
13. TXV superheat adjustment too low
14. Improper TXV sensing bulb installation
  - a. Poor thermal contact with suction line (loose clamp)
  - b. Uninsulated sensing bulb
  - c. Warm location
15. Bad compressor (low capacity)

16. Incorrectly located external equalizer line (must be located on suction manifold after the last feeder tube)

#### Low Suction Pressure – Low Superheat

POSSIBLE CAUSES:

1. Low system load:
  - a. Insufficient indoor airflow
  - b. Dirty indoor air filters
  - c. Return air too cold
  - d. Indoor coil icing or frosting
2. Poor air distribution over indoor coil
3. Improper indoor/outdoor coil internal volume balance on heat pump systems (improper air handler/outdoor unit match up; indoor coil too big or too small causing incorrect refrigerant charge balance between cooling and heating modes.
4. Oil trapped in indoor coil

#### Things to Check Before Replacing TXV

1. Slowly loosen the flare nut on the TXV external equalizer connected to the suction line port with a flare nut. If there is a large pressure release when the nut has been loosened, tighten the nut. If this results in a slight pressure release or no pressure release, the Schrader valve stem is not being depressed. Install an anti-blow back fitting to the external equalizer line of the TXV to depress the Schrader valve stem and check for proper operation of the TXV.
2. The high side pressure should drop and low side pressure should increase as the TXV opens. Place the sensing bulb in ice water. The high side pressure should increase and the low side pressure should decrease as the TXV closes. If the pressures do not change, TXV is faulty.

#### FLOWRATOR TO TXV CONVERSION

While thermal expansion valves can be factory installed, they are normally available in kit form for field installation. Follow the installation instructions provided with the TXV kit. The TXV must be installed before system is charged with refrigerant. Installation of the TXV requires no cutting or brazing.

**IMPORTANT NOTE:** The flowrator piston must be removed from the flowrator distributor prior to the installation of the TXV (See Figure 12).

#### Field Installed TXV Kit Information

**R72DB0101DF:** R-32, 1.5 – 3.0 Ton, 15% Bleed,  
Inlet: Male Rotolock, Outlet: Female Swivel Nut


**R72DB0103DF:** R-454B, 1.5 – 3.0 Ton, 15% Bleed,  
Inlet: Male Rotolock, Outlet: Female Swivel Nut



## WARNING

The indoor coil is pressurized with nitrogen. Relieve pressure before installing TXV by depressing Schrader valve on coil suction manifold.

1. Remove the cap on Schrader valve port on coil suction manifold.
2. Depress the Schrader valve to relieve the pressure inside the coil.
3. Only after coil pressure has been relieved, turn the female swivel nut counter-clockwise to separate it from the distributor.
4. Remove the piston orifice from the flowrator distributor assembly using a small diameter wire or paper clip.
5. As shown in Figure 11, the TXV assembly must be installed between the distributor and the liquid line connector.
6. Attach the TXV by connecting the female swivel nut on TXV outlet to the flowrator distributor (aligning Teflon seal first) and torque swivel nut to 10-30 ft. lbs.
7. Attach the liquid line connector with female swivel nut to male rotalock fitting on TXV inlet (aligning Teflon seal first) and torque swivel nut to 10-30 ft. lbs.
8. Attach equalizer tubing with 1/4" female flare nut that includes depressor to the male Schrader port on the coil suction manifold and torque nut to 10-30 ft. lbs. clamps furnished with kit.
9. Install the TXV bulb to the suction line using the two bulb clamps furnished with kit.
  - a. The sensing bulb should be installed on a horizontal run of the suction line if possible and should be positioned between 10 o'clock and 2 o'clock as shown in Figure 9.
  - b. If the sensing bulb is installed on a vertical run of the suction line, the bulb should be located at least 6 inches away from any bend and on the side of the tube that is above the inside of the bend. On vertical run bulb installations, the bulb should be positioned with the bulb capillary tube at the top.
  - c. The bulb should be insulated using thermal insulation to protect it from the effect of the surrounding ambient temperature.
10. After completing the TXV installation, leak check all TXV fittings and thoroughly evacuate the coil through the service access valves prior to charging the system with refrigerant.

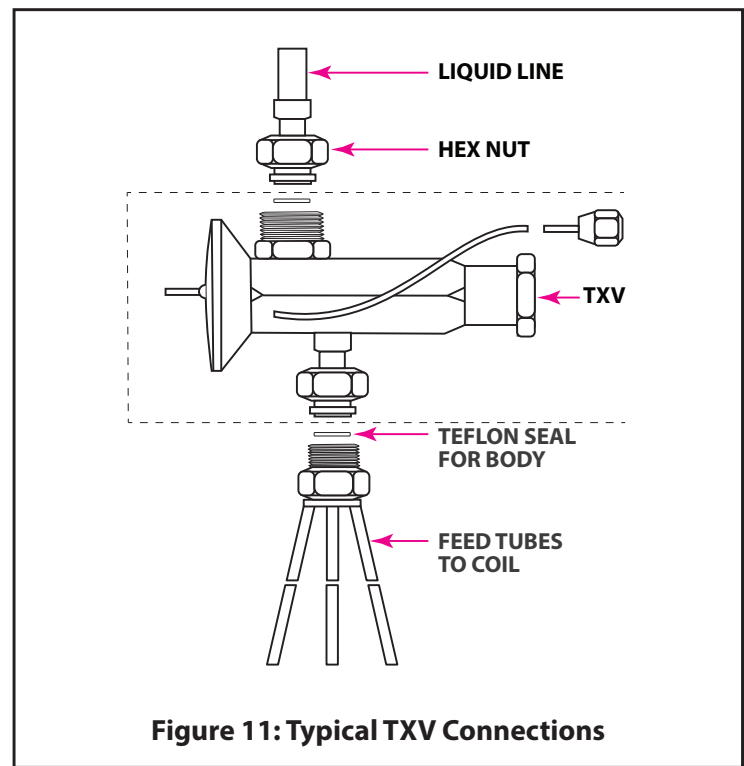

### SPECIAL INSTRUCTIONS FOR COILS WITH FLOWRATOR DISTRIBUTOR ASSEMBLIES

The sizing of the orifice piston should be based on the rated capacity of the outdoor unit and air handler match-up.


Summit provides capacity performance ratings that match both same size and upsized air handlers with specific manufacturer's outdoor units. Consult the local Summit distributor for the proper size orifice piston to be used for a specific outdoor unit model number. The factory installed orifice piston size is marked on the flowrator distributor assembly and the air handler carton.

Failure to install the proper size orifice piston can lead to poor system performance and possible compressor damage. A variation of one piston size smaller or larger is not normally critical. Mortex/Summit reserves the right to substitute a factory installed piston one size smaller or greater if the piston size ordered is out of stock. A selection of replacement orifice pistons is available from the local Summit distributor.

### ORIFICE PISTON REPLACEMENT

If the flowrator is being used instead of a TXV, the piston must be installed oriented as shown in Figure 12 in the distributor body and the existing liquid line attached to the flowrator distributor.

1. Remove the cap on Schrader valve port on coil manifold.
2. Depress the Schrader valve to relieve the pressure inside the coil.
3. Only after coil pressure has been relieved, turn the female swivel nut counter-clockwise to separate it from the distributor.
4. Replace the orifice piston with the correct size piston for the application. Make sure the tapered end of the piston is facing the feeder tubes on the distributor body.
5. Turn the female swivel nut clockwise on the flowrator 10-30 ft. lbs.
6. After completing the installation of the correct size orifice piston, leak check the flowrator distributor fitting and thoroughly evacuate the system through the service fittings on the outdoor unit liquid and suction service valves.

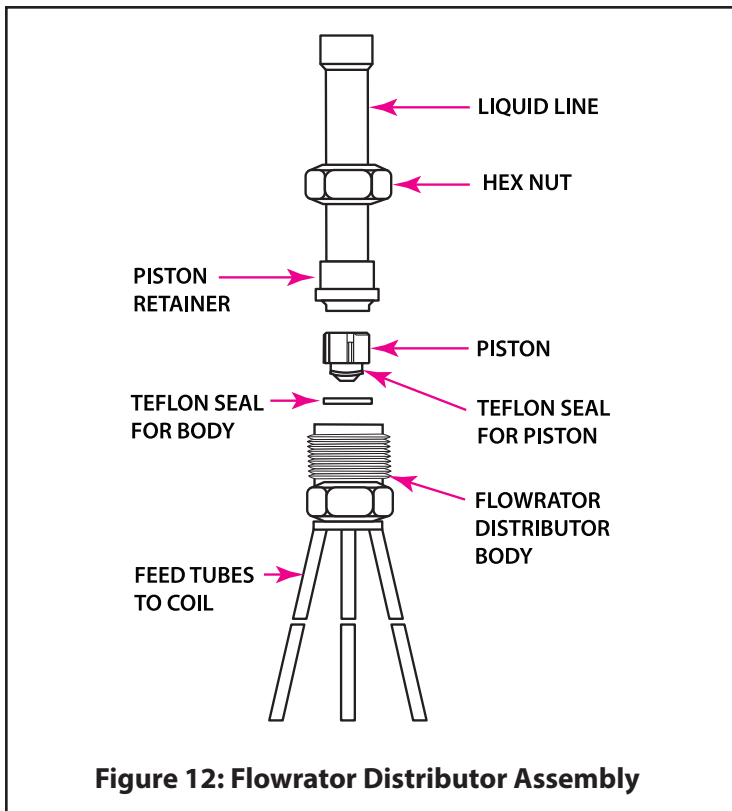

**Figure 12: Flowrator Distributor Assembly**

**FIELD INSTALLED SUPPLEMENTAL HEAT LOCKOUT (SHL) KIT**


A field installed supplemental heat lockout (SHL) kit must be used with SEHX and CEHX models equipped with electric heat when used in a heat pump system. The purpose of the SHL is to prevent excessive refrigerant pressures due to the indoor coil being located downstream of the electric heating elements. If the electric heater is energized while the heat pump is operating in the heat mode, the additional heat imparted to the indoor coil by the electric heater elements can cause the refrigerant pressures to be excessively high. The SHL temperature switch contacts will open and lock out the electric heat when the hot gas line temperature entering the indoor coil reaches approximately 120°F. The contacts will close when the hot gas line temperature falls to approximately 109°F which will allow the electric heat to operate.

**Installation of the SHL Kit**


After brazing and leak testing of the refrigerant lines is completed and the lines have sufficiently cooled, mount the SHL temperature sensor securely to the suction/hot gas refrigerant line that connects to the coil manifold (larger line; suction in cooling mode; hot gas in heating mode) with the 2 plastic wire ties provided in the kit assuring that the temperature switch has good contact with the refrigerant line and is not located where it may be damaged. Wrap the sensor on the refrigerant line using the insulation tape provided in the kit and secure with the insulation with the 2 plastic wire ties provided in the kit (See Figure 14).

**SHL Switch Wiring:**


One of the SHL switch pigtail leads is connected to the air handler white pigtail wire with a wire nut (See Figure 15). The other SHL switch pigtail lead is connected to the white thermostat wire from the thermostat W terminal and secured with a wire nut. Check the outdoor unit and thermostat wiring diagrams to assure the SHL will prevent the supplemental electric heat from being energized when the switch contacts are open.

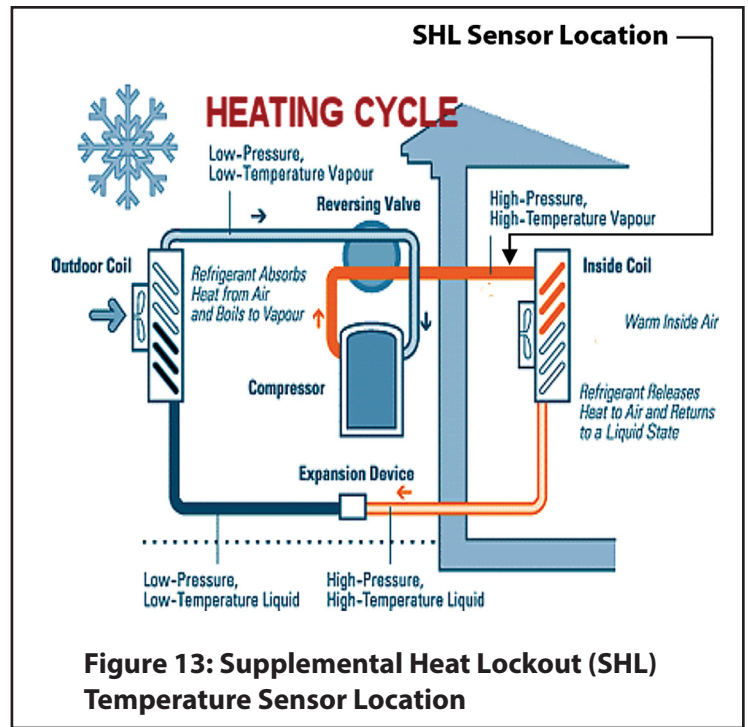

**Figure 13: Supplemental Heat Lockout (SHL) Temperature Sensor Location**

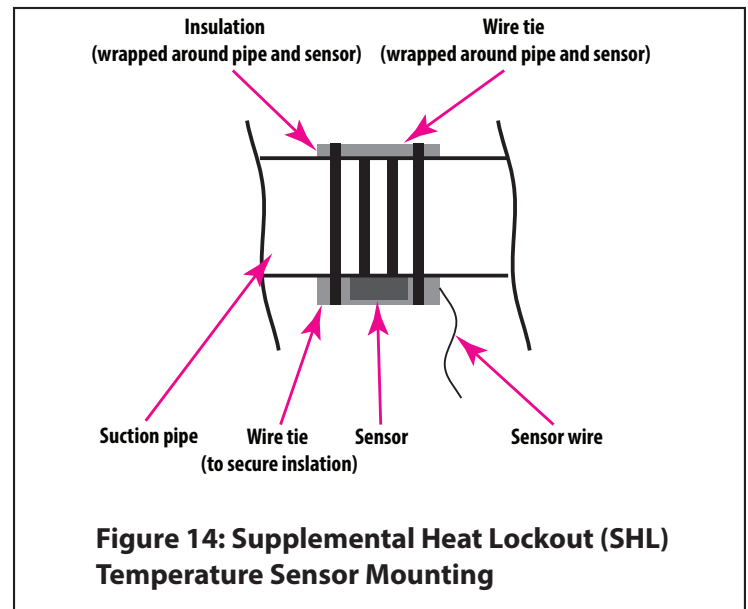

**Figure 14: Supplemental Heat Lockout (SHL) Temperature Sensor Mounting**

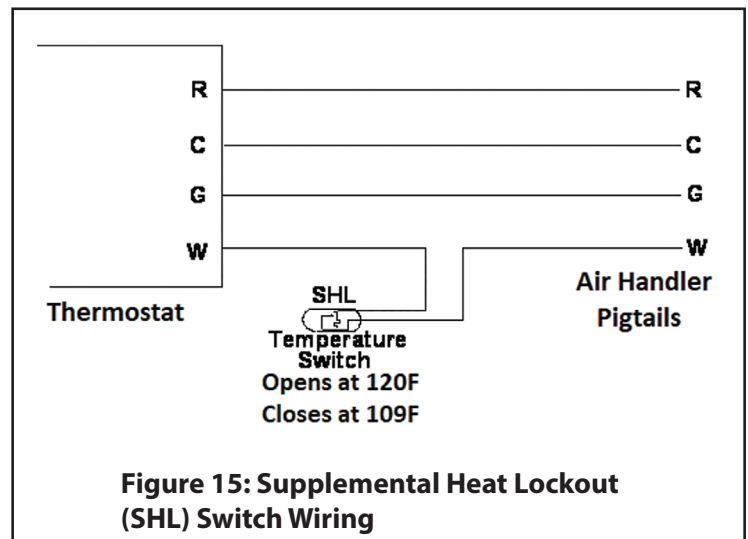

**Figure 15: Supplemental Heat Lockout (SHL) Switch Wiring**


## CONDENSATE DRAIN PIPING

The blow-through coil design of this air handler will create positive pressure in the condensate drain system. To prevent air from being blown out of the condensate drain, it is recommended that a trap with an anti-siphon air vent be installed as shown in Figure 16. Piping from the condensate drain connection must have a 2-inch minimum trap and must provide adequate slope for drainage to a visible area.

**NOTE:** A condensate trap may be required by local codes.

Installing a trapped secondary drain line is also recommended to prevent condensate pan overflow should the primary drain become clogged. A secondary drain float switch that will shut the cooling system off should the primary drain become clogged may be installed instead of a secondary drain line.


**NOTE:** Do not pipe the primary and secondary drains together. If the secondary drain is not used, it must be capped.

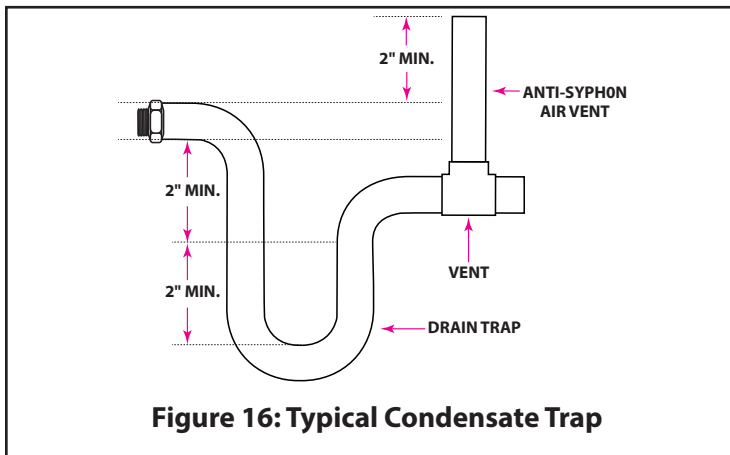

**Figure 16: Typical Condensate Trap**

The air handler cooling DX coil condensate drain pan has one  $\frac{3}{4}$ " NPT female primary and one  $\frac{3}{4}$ " NPT female secondary connection located on the same side as the refrigerant line connections (See Figure 17). The other side of the condensate drain pan has one  $\frac{3}{4}$ " NPT female primary drain connection and no secondary drain connection.

**NOTE:** The condensate drain connections are located on the condensate drain pan inside the cabinet of a cased air handler. Condensate drain piping must enter through the holes in the cabinet and then connect to the drain pan connections within the cabinet. Refer to Figures 1 and 3 or condensate drain pipe entrances.

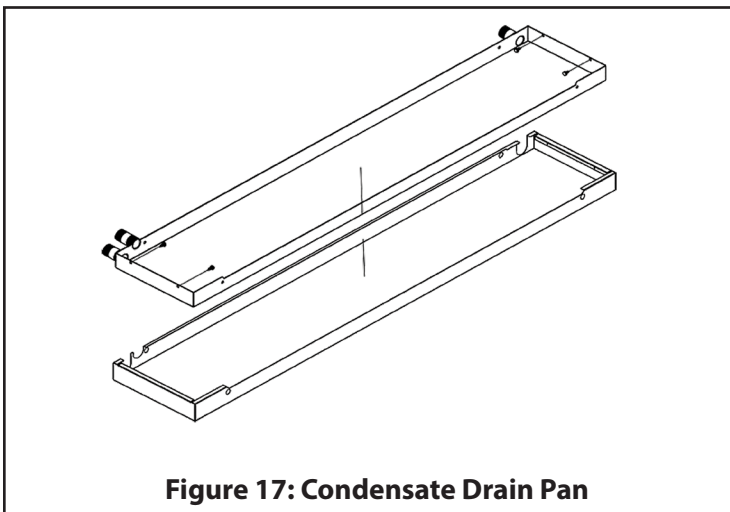

**Figure 17: Condensate Drain Pan**

## WARNING

**This air handler must not be located where water can cause damage to the adjacent area if the condensate drain pan should overflow or if any condensate drain connections should leak.**

**When such locations can't be avoided, a suitable auxiliary drain pan must be installed under the air handler and connected to an adequate drain. The auxiliary drain pan should be at least 2" greater in length and width than the air handler dimensions and should be at least 1.5" deep.**

**The manufacturer of this air handler is not liable for any water damage related to the air handler.**

## SECTION 7: HOT AND CHILLED WATER

### Hot Water Piping

All water piping must be supported independent of the air handler to prevent vibration and stress on the coil headers. Swing joints or flexible fittings must be provided to absorb expansion and contraction of the piping. Rigid piping reduces the effectiveness of vibration isolators. Water pipes must be adequately vented in order to prevent air binding. The air handler is equipped with manual air vents mounted on the coil manifold.

Total hot water piping length should not exceed 140 feet. All hot water piping to the coil should be  $\frac{3}{4}$  inch ID ( $\frac{7}{8}$  inch OD) copper. CPVC and PEX piping may also be used in applications where the water temperature does not exceed 150°F. It is recommended a water isolation valve and a union be placed in the water lines to and from the coil, near the coil, for serviceability, repair or replacement of the coil. A thermal expansion tank is recommended on any closed loop system to relieve thermal expansion due to pressure increase.

After piping has been installed, allow the system to fill with water and check connections for leaks. To ensure complete filling of the system, follow the Filling Hydronic Heating System With Water, Purging Air From System, and System Startup procedure found in **SECTION 11: Final System Checkout and Startup** in these instructions.

**IMPORTANT NOTE:** Massachusetts state code 780 CMR 61.00 requires an electronically controlled pump timer that activates the pump every 6 hours for 60 seconds and limits the distance between the water heater and the air handler to 50 feet maximum.

## WARNING

**Toxic chemicals used for treatment of boilers or non-potable water heating appliances shall never be introduced into a potable water space heating system.**

## ⚠ WARNING

Hot water from a boiler used to satisfy heating requirements can be heated to temperatures of 180°F. Parts containing water this hot can scald very quickly. Use extreme caution when servicing or performing maintenance on any parts containing hot water.

## ⚠ WARNING

Do not use Methanol water or Ethanol in any systems operating above 40°F as the flash point specified for these chemicals is only 54°F.

## ⚠ WARNING

Minimum Allowable Operating Temperatures – Water/Brine:  
Water = 36°F (2.22°C)  
Brine Solution = 3.2°F (-16°C)  
Maximum Allowable Operating Temperatures – Water/Brine:  
Water = 180°F (82.22°C)  
Brine Solution = 40°F (4.44°C)

## ⚠ WARNING

The air handler must not be located where water will cause damage to the adjacent area should any water connection leak.

When such locations can't be avoided, a suitable auxiliary drain pan must be installed under the air handler and connected to an adequate drain. The auxiliary drain pan should be at least 2 inches greater in length and width than the air handler dimensions and should be at least 1.5 inches deep.

The manufacturer of this air handler is not liable for any water damage related to the air handler.

## ⚠ WARNING

When system requires water at temperatures higher than required for other uses, a means such as a mixing valve must be installed to temper the water temperature for those uses in order to reduce the potential of a scald hazard.

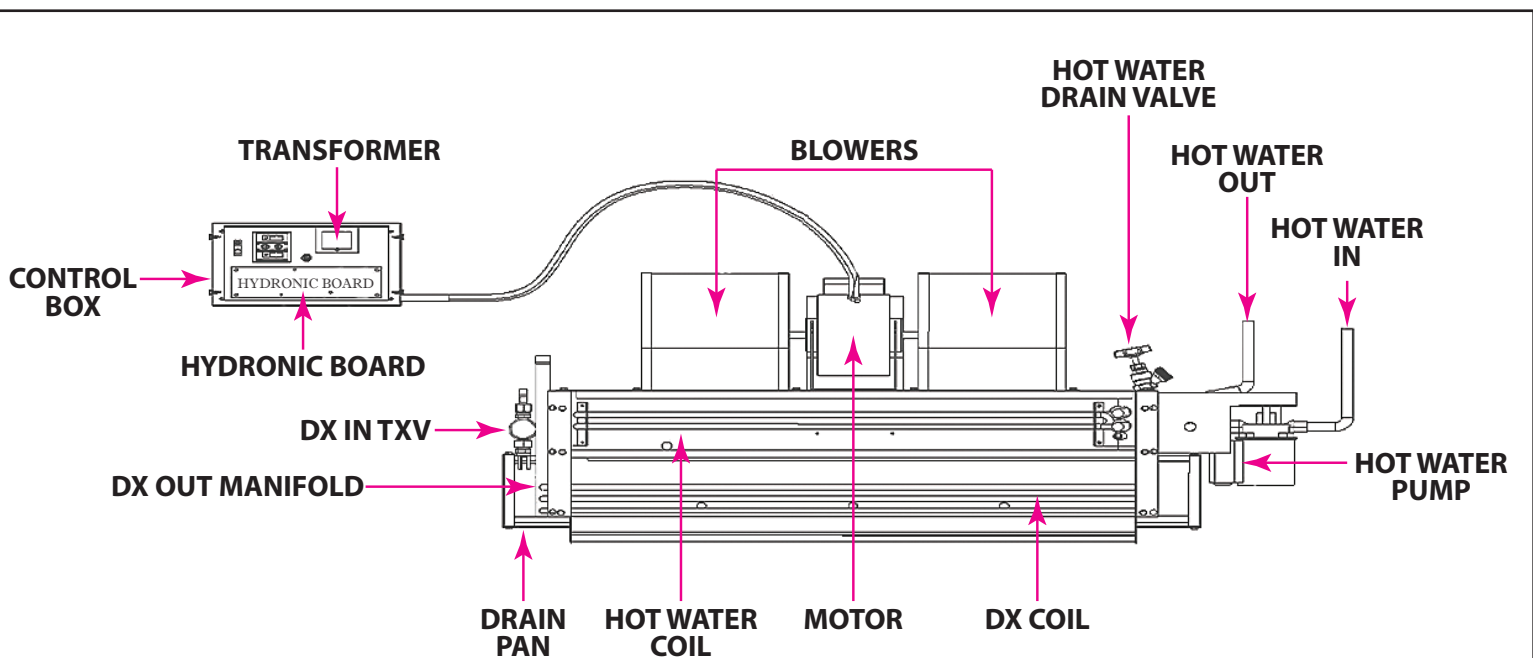


Figure 18: Components and Water Connections

### Chilled Water Piping

Supply and return chilled water piping to the coil should be ¾ inch ID for models with a capacity up to 42,000 BTU/H and 1 inch on models with a capacity greater than 42,000 BTU/H. Water piping must always be connected so that the entering water is on the leaving side of the coil for best performance.

Model Number	Evaporator Coil Number of Rows	Chilled Water Capacities @ Entering Water Temperatures				CFM	GPM	Pressure Drop Water ( Ft Water )	Pressure Drop Air ( IN WC )
		80° F/67° F/45° F		80° F/67° F/42° F					
		Total	Sensible	Total	Sensible				
CCWE/SCWE 18-XX-24	4	14,700	12,900	15,800	13,400	600	2.0	1.2	0.29
		18,100	14,600	19,700	15,300		3.0	2.6	
		20,600	15,800	22,700	16,600		4.0	4.4	
		22,600	16,700	25,000	17,600		5.0	6.8	
		24,200	17,300	26,822	18,400		6.0	9.6	
CCWE/SCWE 19-XX-25	5	17,900	14,500	19,400	15,000	600	2.0	2.1	0.35
		21,500	16,000	23,500	16,900		3.0	4.6	
		24,100	17,100	26,600	18,200		4.0	7.9	
		26,000	17,900	28,800	19,100		5.0	12.0	
		27,400	18,500	30,400	19,900		6.0	17.0	
CCWE/SCWE 24-XX-24	4	16,400	15,000	17,500	15,800	800	2.0	1.2	0.44
		20,400	17,500	22,100	18,300		3.0	2.6	
		23,500	19,000	26,000	20,000		4.0	4.4	
		25,800	20,100	28,300	21,200		5.0	6.8	
		27,700	21,000	30,600	22,200		6.0	9.7	
CCWE/SCWE 25-XX-25	5	20,300	17,200	21,800	18,000	800	2.0	2.1	0.55
		24,700	19,500	26,750	20,400		3.0	4.6	
		27,800	20,900	30,500	22,000		4.0	7.9	
		30,300	22,000	33,300	23,300		5.0	12.0	
		32,100	22,800	35,600	24,300		6.0	17.0	
CCWE/SCWE 30-XX-24	4	19,500	17,800	20,800	18,700	1000	2.0	1.3	0.40
		24,500	21,200	26,500	22,200		3.0	2.8	
		28,300	23,200	30,700	24,300		4.0	4.9	
		31,200	24,600	31,190	25,900		5.0	7.5	
		33,800	25,700	37,000	27,200		6.0	10.6	
CCWE/SCWE 31-XX-25	5	24,300	20,500	25,800	21,400	1000	2.0	2.4	0.53
		29,600	23,600	31,800	24,700		3.0	5.2	
		33,500	25,500	36,300	26,800		4.0	9.0	
		36,500	26,900	40,000	28,400		5.0	13.6	
		38,800	27,900	42,900	29,700		6.0	19.2	
CCWE/SCWE 34-XX-24	4	20,900	19,100	22,400	20,100	1200	2.0	1.4	0.41
		26,500	22,900	28,500	24,100		3.0	3.0	
		30,500	25,200	33,100	26,400		4.0	5.1	
		33,800	26,800	37,000	28,200		5.0	7.8	
		36,400	28,000	40,000	29,600		6.0	11.1	
CCWE/SCWE 35-XX-25	5	26,100	21,900	27,700	22,900	1200	2.0	2.6	0.52
		31,900	25,600	34,200	26,700		3.0	5.6	
		36,100	27,700	39,200	29,100		4.0	9.5	
		39,400	29,200	43,100	30,800		5.0	14.4	
		42,000	30,300	46,300	32,200		6.0	20.3	
CCWE/SCWE 36-XX-24	4	22,300	19,900	23,700	20,900	1200	2.0	1.5	0.31
		28,000	23,800	30,200	24,900		3.0	3.2	
		32,300	26,100	35,100	27,300		4.0	5.6	
		35,800	27,800	39,100	29,200		5.0	8.5	
		38,600	29,100	42,350	30,700		6.0	12.0	
CCWE/SCWE 37-XX-25	5	27,400	22,600	29,100	23,600	1200	2.0	2.9	0.40
		33,400	26,300	35,900	27,500		3.0	6.1	
		37,800	28,600	41,000	29,950		4.0	10.4	
		41,300	30,100	45,200	31,800		5.0	15.9	
		43,850	31,200	48,500	33,250		6.0	22.3	

**Table 8: CCWE/SCWE Chilled Water Capacity; 4 & 5 Row Chilled Water Coil; 18 - 37 BTU/H Models; 208/240 VAC With or Without Electric Heat**

**NOTE:** These models are capable of using the chilled water coil for hot water heat as well as chilled water cooling using a valve on the hot water line and a valve on the chilled water line to isolate the hot water from the chilled water.

**CAUTION:** Never operate air handler with hot water heat and electric heat energized at the same time.

Model Number	Evaporator Coil Number of Rows	Hot Water Capacities @ 65 °F Entering Model Number Water Temperature				CFM	GPM	Pressure Drop Water ( Ft Water )	Pressure Drop Air ( IN WC )
		140°F	160°F	170°F	180° F				
CCWE/SCWE 18-XX-24	4	33,998	41,000	45,400	49,850	600	2.0	1.2	0.29
		38,103	46,000	50,900	55,870		3.0	2.6	
		39,658	48,785	53,900	58,150		4.0	4.4	
		41,718	50,400	55,790	61,170		5.0	6.8	
		42,639	51,500	57,000	62,520		6.0	9.6	
CCWE/SCWE 19-XX-25	5	36,801	44,420	49,200	53,960	600	2.0	2.1	0.35
		41,108	49,690	54,980	60,275		3.0	4.6	
		43,307	52,370	57,935	63,500		4.0	7.9	
		44,596	53,945	59,660	65,390		5.0	12.0	
		45,428	54,950	60,780	66,610		6.0	17.0	
CCWE/SCWE 24-XX-24	4	39,154	47,200	52,300	57,410	800	2.0	1.2	0.44
		45,193	54,510	60,380	66,265		3.0	2.6	
		48,695	58,765	65,080	71,400		4.0	4.4	
		50,945	61,510	68,100	74,700		5.0	6.8	
		52,494	63,400	70,190	76,970		6.0	9.7	
CCWE/SCWE 25-XX-25	5	42,645	51,515	57,025	62,530	800	2.0	2.1	0.55
		49,288	59,550	65,910	72,270		3.0	4.6	
		52,974	64,020	70,845	77,675		4.0	7.9	
		55,249	66,740	73,900	81,010		5.0	12.0	
		56,766	68,640	75,940	83,235		6.0	17.0	
CCWE/SCWE 30-XX-24	4	45,183	54,530	60,390	66,250	1000	2.0	1.3	0.40
		53,517	64,600	71,530	78,470		3.0	2.8	
		58,509	70,640	78,210	85,790		4.0	4.9	
		61,769	74,600	82,580	90,570		5.0	7.5	
		64,036	77,365	85,630	93,895		6.0	10.6	
CCWE/SCWE 31-XX-25	5	48,695	58,880	65,140	71,400	1000	2.0	2.4	0.53
		58,048	70,170	77,640	85,115		3.0	5.2	
		63,494	76,750	84,910	93,100		4.0	9.0	
		66,904	80,900	89,501	98,100		5.0	13.6	
		69,216	83,715	92,600	101,490		6.0	19.2	
CCWE/SCWE 34-XX-24	4	49,281	59,500	65,880	72,260	1200	2.0	1.4	0.41
		59,617	72,020	79,745	87,415		3.0	3.0	
		66,120	79,835	88,390	96,950		4.0	5.1	
		70,437	85,075	94,175	103,280		5.0	7.8	
		73,492	88,785	98,270	107,760		6.0	11.1	
CCWE/SCWE 35-XX-25	5	52,804	63,880	70,660	77,425	1200	2.0	2.6	0.52
		64,592	78,100	86,410	94,710		3.0	5.6	
		71,787	86,800	96,030	105,260		4.0	9.5	
		76,466	92,470	102,300	112,120		5.01	4.4	
		79,692	96,380	106,615	116,850		6.0	20.3	
CCWE/SCWE 36-XX-24	4	50,563	61,100	67,620	74,140	1200	2.0	1.5	0.31
		61,448	74,220	82,150	90,100		3.0	3.2	
		68,173	82,370	91,160	99,960		4.0	5.6	
		72,633	87,780	97,140	106,500		5.0	8.5	
		75,770	91,585	101,340	111,100		6.0	12.0	
CCWE/SCWE 37-XX-25	5	53,731	65,045	71,920	78,785	1200	2.0	2.9	0.40
		66,031	79,890	88,350	96,820		3.0	6.1	
		73,506	88,925	98,350	107,780		4.0	10.4	
		78,324	94,760	104,800	114,845		5.0	15.9	
		81,612	98,740	109,200	119,665		6.0	22.3	

**Table 9: CCWE/SCWE Hot Water Capacity; 4 & 5 Row Chilled Water Coil; 18 - 37 BTU/H Models; 208/240 VAC With or Without Electric Heat**

**NOTE:** These models are capable of using the chilled water coil for hot water heat as well as chilled water cooling using a valve on the hot water line and a valve on the chilled water line to isolate the hot water from the chilled water.

**CAUTION:** Never operate air handler with hot water heat and electric heat energized at the same time.

Model Number	Coil Rows	CFM	Heating Capacities Entering Water Temperature						Heating GPM	(2) Max. Fuse
			130°F	140°F	150°F	160° F	170° F	180° F		
CCWW/SCWW 18-21	2	600	18,000	21,000	24,200	27,300	30,500	33,600	3.0	3.3
CCWW/SCWW 19-22	2	600	19,200	22,500	25,800	29,100	32,400	35,800	3.0	3.3
CCWW/SCWW 24-21	2	800	19,300	22,700	26,000	29,400	32,700	36,100	3.0	3.3
CCWW/SCWW 25-23	2	800	19,300	22,700	26,000	29,400	32,700	36,100	3.0	3.3
CCWW/SCWW 30-27	2	1000	23,700	27,800	32,000	36,000	40,100	44,300	3.0	3.7
CCWW/SCWW 31-27	2	1000	23,900	28,000	32,200	36,300	40,500	44,600	3.0	3.7
CCWW/SCWW 34-30	2	1200	25,300	29,600	33,900	38,300	42,700	47,100	3.0	3.7
CCWW/SCWW 35-30	2	1200	25,400	29,800	34,000	38,500	42,900	47,300	3.0	3.7
CCWW/SCWW 36-32	2	1200	27,200	31,800	36,500	41,200	45,900	50,600	3.0	4.2
CCWW/SCWW 37-32	2	1200	27,500	32,200	36,900	41,600	46,300	51,100	3.0	4.2

**Table 10: CCWW/SCWW Hot Water Capacity; 2 Row Hot Water Coil; 18 - 37 BTU/H Models**

**SECTION 8: REFRIGERANT LEAK DETECTION SYSTEM OPERATION AND SENSOR INSTALLATION**

**⚠ WARNING**

This air handler is equipped with a refrigerant leak mitigation system that energizes the air handler blower motor to deliver at least the required minimum airflow (See Tables 29 or 30) when the refrigerant leak detection system detects a leak. This will dilute the flammable A2L class refrigerant to a point that it no longer poses a risk of an explosion or fire. Follow the procedure “**Verifying Proper Functioning of Refrigerant Leak Mitigation System**” later in this section to confirm the refrigerant mitigation system is functioning as it should.

This air handler is equipped with a factory installed refrigerant leak detection system consisting of a refrigerant sensor with integral relays to perform the necessary leak mitigation if a refrigerant leak is detected by the sensor. Should a refrigerant leak occur in the indoor coil, the refrigerant leak detection system will energize the indoor blower and will open the 24VAC circuit to the outdoor unit compressor contactor. The circulation of air will disperse the leaked flammable refrigerant into the conditioned space where it will be diluted to point where it can no longer be ignited by an ignition source. The indoor blower will continue to operate until 5 minutes after the concentration of the refrigerant at the sensor drops below the sensor’s setpoint. Should the concentration of the refrigerant rise above the setpoint of the sensor, the mitigation cycle will repeat until the refrigerant concentration stays below the setpoint of the sensor. The sensor pigtail marked “ALARM” will normally be energized with 24VAC when no leak is detected and will be de-energized when a leak is detected for the purpose of notifying a building management system to issue a refrigerant leak alarm or to energize a leak warning light or audible alarm if a field supplied normally closed relay is installed (see Figure 25).


Should the sensor fail or if the sensor wiring is damaged or disconnected, the sensor will automatically enter the mitigation mode until the sensor is replaced or the wiring is reconnected or repaired.

**IMPORTANT NOTE:** The outdoor unit control wiring must be connected to the refrigerant sensor “Y-CC” pigtail and the “COM” on the air handler low voltage terminal strip for the refrigerant detection system to de-energize the compressor during the leak mitigation mode of operation.

**⚠ IMPORTANT**

Only refrigerant detection system sensors specified by Mortex Products, Inc. may be installed or used as a replacement for a failed sensor. Mortex may source sensors from various manufacturers that wire and function slightly different. Only replace the sensor with the exact brand and model as removed to assure the refrigerant detection system functions properly.

The refrigerant sensor wiring harness plug must be pointing down or horizontal. If the plug is pointing up, water could collect in the plug and result in operational issues.

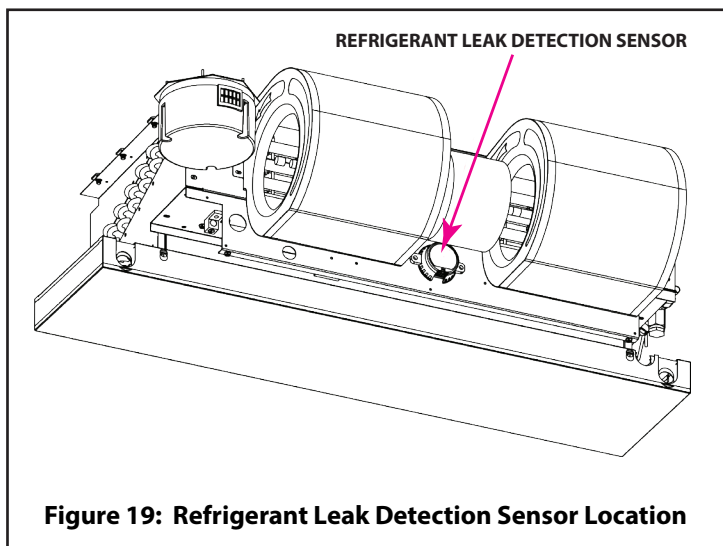

**Figure 19: Refrigerant Leak Detection Sensor Location**

**Verifying Proper Functioning of Refrigerant Leak Mitigation System**

Follow the steps below to verify the proper functioning of the Refrigerant Leak Mitigation System.

1. Open the ceiling access panel below the air handler.
2. Locate the black refrigerant sensor located below the blower motor (See Figure 19).

### Leak Detected During Cooling Cycle

3. Set the thermostat to "COOL" and the fan switch to "AUTO" and lower the temperature setpoint below the indoor temperature so the system enters the cooling mode.
4. Confirm the outdoor unit compressor is operating.
5. Within 30 seconds of the compressor starting, release a small amount of refrigerant on the refrigerant sensor to activate the leak mitigation mode.
6. Confirm the outdoor unit compressor and fan motor shut down and the indoor blower continues to operate.
7. Confirm the indoor blower is energized and 24V is not present at the air handler pigtail marked "ALARM".
8. Confirm the outdoor unit compressor and fan motor are re-energized approximately 5 minutes after the flow of refrigerant near the sensor has ended and that the indoor blower continues to operate.

### Leak Detected During the OFF Cycle

9. Set the thermostat to the "OFF" position and wait until the outdoor unit compressor and fan motor stop and indoor blower stops.
10. Release a small amount of refrigerant on the refrigerant sensor to activate the leak mitigation mode.
11. Confirm the indoor blower is energized and 24V is not present at the air handler pigtail marked "ALARM".
12. Confirm the indoor blower shuts down after approximately 5 minutes after the flow of refrigerant on the refrigerant sensor has ended.
13. If the Refrigerant Leak Mitigation System does not operate as stated above, check for loose wiring connections or replace the refrigerant sensor.
14. Close the ceiling access panel and secure it with the thumb screws.
15. Set the thermostat to the desired operating mode and temperature.

If the leak detection system does not function properly when subjected to the above procedure, check for miswiring of the system. If the wiring connections are found to be correct per the air handler wiring diagram, replace the sensor with an approved replacement from the manufacturer.

### Leak Detection Sensor Replacement

When the refrigerant leak detection system sensor fails or reaches the end of its life, the leak detection system will enter and remain in the leak mitigation mode even though there is no refrigerant leak present. If the leak detection system continues to operate in the mitigation mode even when a refrigerant leak isn't indicated by a portable refrigerant leak detector, replace the sensor with an approved replacement from the air handler manufacturer. Disconnect the wiring harness connector from the failed sensor and remove the sensor mounting screws. Discard the failed sensor. Mount the replacement sensor in the same location as the failed sensor that was removed and connect the sensor wiring harness connector to the sensor.

Only the following replacement refrigerant sensors may be used for Mortex products:

**R-32 Refrigerant: R68ALL001**

**R-454B Refrigerant: R68ALL002**

**R-32/R454B Refrigerant (Dual Refrigerant Sensor): R68ALL003**



## IMPORTANT

Mortex may source sensors from various manufacturers that have a different wiring harness connection. A wiring adapter may be necessary to allow the replacement sensor to connect the sensor wiring harness. The wiring adapter will be provided with the replacement sensor. Alternate mounting holes are provided to accommodate the various approved sensors. Only use a replacement sensor approved by and provided by Mortex to assure proper operating and compatibility.

### Minimum Circulating Airflow for Refrigerant Leak Mitigation

There is a minimum circulating airflow required when the refrigerant leak detection system is operating in the leak mitigation mode. This minimum depends on the total system refrigerant charge and can be found listed in Tables 29 and 30. The refrigerant mitigation system energizes the continuous fan speed on the air handler. The continuous fan CFM (l/s) may need to be increased to achieve the minimum leak mitigation circulating airflow level by changing to a different indoor blower motor speed tap or ECM motor setting that delivers the minimum mitigation airflow level. Refer to the blower performance tables and wiring diagrams in this manual to determine if this adjustment is necessary and if it is determined to be necessary to increase the continuous fan airflow level, follow the instructions in **SECTION 12: MOTOR SPEED SELECTION AND AIR HANDLER STARTUP** in this manual to make the necessary adjustment.

### Refrigerant Leak Alarm Output

The coil's refrigerant leak sensor has an alarm output signal that can be used as an input to a building management system or smart thermostat to alert the homeowner or user that the refrigerant detection system has detected a refrigerant leak and is in the leak mitigation mode. There is an ORANGE low voltage pigtail wire in the sensor harness labeled "ALARM". When the sensor is powered and no refrigerant leak is detected, the ORANGE "ALARM" pigtail wire is energized with 24 VAC indicating normal operation. When the refrigerant leak detection system detects a refrigerant leak and enters the leak mitigation mode (indoor blower energized and outdoor unit disabled), the ORANGE "ALARM" pigtail wire will be de-energized (0 VAC). The ORANGE "ALARM" pigtail wire is capped with a wire nut from the factory. Remove this wire nut and connect it to the building management system or smart thermostat as required if a refrigerant leak alert is desired. The building management system or smart thermostat shall be programmed to accept the reverse logic alarm signal (24 VAC – Normal; 0 VAC – Refrigerant Leak).

If a 24 VAC output when a refrigerant leak is detected is required to activate a warning light or audible alarm, the ORANGE "ALARM" pigtail wire shall be connected to the coil of a field supplied relay with normally closed contacts and a 24 VAC coil. An 18 AWG minimum wire from the furnace 24 VAC common circuit shall be connected to the other side of the relay coil. An 18 AWG minimum wire from the furnace 24 VAC "R" transformer circuit shall be connected to the terminal for one side of the normally closed relay contacts and an 18 AWG minimum wire to the warning light or audible alarm shall be connected to the other side of the normally closed relay contacts. All field supplied wiring shall be protected

from damage. When no refrigerant leak is detected, the relay will be energized and the relay contacts will be open, disconnecting the 24 VAC signal to the warning light or audible alarm. When a refrigerant leak is detected, the relay will be de-energized and the contacts will close sending a 24 VAC signal to the warning light or audible alarm. See Figure 25 for suggested field wiring connections.

## SECTION 9: LINE VOLTAGE WIRING

### Power Supply Wiring

General wire and breaker sizes are shown in Table 11. If sheathed cable is used, refer to NEC National Electrical Code (NFPA 70) or the Canadian Electrical Code, Part I (CSA C22.1) and local codes for additional requirements concerning supply circuit wiring. Electrical data can be found in Table 11.

### Line Voltage Wiring Connections

The air handler internal wiring is complete except for the power supply and the thermostat wires. See Table 11 for required wire size, fuse/circuit breaker size, and ground wire sizes. The use of cable connectors on incoming power supply wires to relieve strain on wiring is required. Follow the steps below to connect the power supply wires.

1. Remove the thumb screws that secure ceiling access panel and slowly swing the panel down to access the air handler.
2. Remove the control box cover.
3. Install the cable connector in the 7/8 inch diameter hole on the bottom right side of the control box.
4. Strip ½ inch of the insulation off the end of each wire.
5. Insert the wires through the cable connector located in the 7/8 inch diameter hole in the air handler control box.
6. Connect the power supply wires to the power supply terminal block or pigtails located on the right side of the control box as follows.
  - a. Insert the BLACK line voltage wire into the L1 screw terminal on the power supply terminal block and tighten the set screw to clamp down on the wire or connect it to the BLACK line voltage pigtail with a wire nut or suitable electrical connector rated for the wire size.
  - b. Insert the WHITE neutral (115 VAC) wire or RED line voltage wire (208/240 VAC) into the L2 screw terminal on the power supply terminal block and tighten the set screw to clamp down on the wire or connect the RED line voltage wire (208/240 VAC) to the RED line voltage pigtail with a wire nut or suitable electrical connector rated for the wire size.
7. Insert the GREEN ground wire into the ground lug inside the control box and tighten the set screw.

**NOTE:** Casing or cabinet must be permanently grounded in accordance with the National Electrical Code or other applicable codes.



## WARNING

To prevent accidental electrical shock, turn the electrical power "OFF" at the main electrical panel (circuit breaker box) and at the local service disconnect before removing maintenance and service on this air handler. Homeowners should never attempt to perform any maintenance which requires opening the ceiling access panel. Refer to Figures 4 and 5 for images of the ceiling access panel.



## IMPORTANT

All field wiring must be rated for 60°C or higher.

Refer to the wiring diagram on the air handler or the tables in these instructions for more information.

Refer to the NEC National Electrical Code (NFPA 70) or the Canadian Electrical Code, Part I (CSA C22.1) and local codes for wiring material requirements.

Refer to the NEC National Electrical Code (NFPA 70) or the Canadian Electrical Code, Part I (CSA C22.1) and local codes for wiring material requirements.




ELECTRICAL DATA - NO HEAT & ELECTRIC HEAT																						
Air Handler Model	Motor Data							Electric Heater Data						Unit Electrical Data			Min. Circuit Ampacity			Max Overcurrent Protection		
	Motor HP	Volts 1 Ph	Motor Type	Motor Code/ Blower Size (2) Blowers per Motor	Motor Amps 208V	Motor Amps 230V	Motor Amps 240V	KW 208V	KW 230V	KW 240V	Heater Amps 208V	Heater Amps 230V	Heater Amps 240V	Motor and Heater Amps 208V	Motor and Heater Amps 230V	Motor and Heater Amps 240V	MCA 208V	MCA 230V	MCA 240V	Max Fuse / Breaker Size 208V	Max Fuse / Breaker Size 240V	Max Fuse / Breaker Size 240V
SEHX-18/19/24 CEHX - 18/19/24 SCWE 18/19/24 CCWE 18/19/24 30" Discharge Opening	1/3	208/240	CT	80 / 7.00 x 8.00	1.71	1.54	1.48	0.0	0.0	0.0	0.0	0.0	0.0	1.71	1.54	1.48	2.13	1.93	1.85	15	15	15
								2.3	2.8	3.0	10.83	11.98	12.50	12.54	13.52	13.98	15.68	16.90	17.48	20	20	20
								3.8	4.6	5.0	18.06	19.97	20.83	19.76	21.51	22.31	24.70	26.89	27.89	25	30	30
								4.5	5.5	6.0	21.67	23.96	25.00	23.37	25.50	26.48	29.22	31.88	33.10	30	35	35
								6.0	7.3	8.0	28.89	31.94	33.33	30.60	33.49	34.81	38.25	41.86	43.52	40	45	45
								7.5	9.2	10.0	36.11	39.93	41.67	37.82	41.47	43.15	47.27	51.84	53.93	50	60	60
SEHX-18/19/24 CEHX - 18/19/24 SCWE 18/19/24 CCWE 18/19/24 30" Discharge Opening	1/2	208/240	CT	85 / 6.25 x 6.88	1.67	1.51	1.45	0.0	0.0	0.0	0.0	0.0	1.67	1.51	1.45	2.09	1.89	1.81	15	15	15	
								2.3	2.8	3.0	10.83	11.98	12.50	12.51	13.49	13.95	15.63	16.87	17.44	20	20	20
								3.8	4.6	5.0	18.06	19.97	20.83	19.73	21.48	22.28	24.66	26.85	27.85	25	30	30
								4.5	5.5	6.0	21.67	23.96	25.00	23.34	25.47	26.45	29.17	31.84	33.06	30	35	35
								6.0	7.3	8.0	28.89	31.94	33.33	30.56	33.46	34.78	38.20	41.82	43.48	40	45	45
								7.5	9.2	10.0	36.11	39.93	41.67	37.78	41.44	43.12	47.23	51.80	53.90	50	60	60
SEHX-25/30/31 CEHX - 25/30/31 SCWE 25/30/31 CCWE 25/30/31 38" Discharge Opening	1/2	208/240	CT	81 / 7.00 x 9.00	1.89	1.71	1.64	0.0	0.0	0.0	0.00	0.00	0.00	1.89	1.71	1.64	2.37	2.14	2.05	15	15	15
								2.3	2.8	3.0	10.83	11.98	12.50	12.73	13.69	14.14	15.91	17.11	17.68	20	20	20
								3.8	4.6	5.0	18.06	19.97	20.83	19.95	21.68	22.47	24.93	27.10	28.09	25	30	30
								4.5	5.5	6.0	21.67	23.96	25.00	23.56	25.67	26.64	29.45	32.09	33.30	30	35	35
								6.0	7.3	8.0	28.89	31.94	33.33	30.78	33.66	34.97	38.48	42.07	43.72	40	45	45
								7.5	9.2	10.0	36.11	39.93	41.67	38.00	41.64	43.31	47.50	52.05	54.13	50	60	60
SEHX-25/30/31 CEHX - 25/30/31 SCWE 25/30/31 CCWE 25/30/31 38" Discharge Opening	1/2	208/240	CT	86 / 6.25 x 6.88	1.79	1.62	1.55	0.0	0.0	0.0	0.00	0.00	0.00	1.79	1.62	1.55	2.24	2.02	1.94	15	15	15
								2.3	2.8	3.0	10.83	11.98	12.50	12.62	13.60	14.05	15.78	17.00	17.56	20	20	20
								3.8	4.6	5.0	18.06	19.97	20.83	19.84	21.58	22.38	24.81	26.98	27.98	25	30	30
								4.5	5.5	6.0	21.67	23.96	25.00	23.46	25.58	26.55	29.32	31.97	33.19	30	35	35
								6.0	7.3	8.0	28.89	31.94	33.33	30.68	33.56	34.88	38.35	41.95	43.60	40	45	45
								7.5	9.2	10.0	36.11	39.93	41.67	37.90	41.55	43.22	47.37	51.93	54.02	50	60	60
SEHX-34/35 CEHX - 34/35 SCWE 34/35 CCWE 34/35 42" Discharge Opening	1/2	208/240	CT	81 / 7.00 x 9.00	2.61	2.36	2.26	0.0	0.0	0.0	0.00	0.00	0.00	2.61	2.36	2.26	3.26	2.95	2.83	15	15	15
								2.3	2.8	3.0	10.83	11.98	12.50	13.44	14.34	14.76	16.80	17.92	18.45	20	20	20
								3.8	4.6	5.0	18.06	19.97	20.83	20.66	22.32	23.09	25.83	27.90	28.87	30	30	30
								4.5	5.5	6.0	21.67	23.96	25.00	24.27	26.32	27.26	30.34	32.90	34.08	35	35	35
								6.0	7.3	8.0	28.89	31.94	33.33	31.50	34.30	35.59	39.37	42.88	44.49	40	45	45
								7.5	9.2	10.0	36.11	39.93	41.67	38.72	42.29	43.93	48.40	52.86	54.91	50	60	60
SEHX-34/35 CEHX - 34/35 SCWE 34/35 CCWE 34/35 42" Discharge Opening	1/2	208/240	CT	86 / 6.25 x 8.00	1.79	1.62	1.55	0.0	0.0	0.0	0.00	0.00	0.00	1.79	1.62	1.55	2.24	2.02	1.94	15	15	15
								2.3	2.8	3.0	10.83	11.98	12.50	12.62	13.60	14.05	15.78	17.00	17.56	20	20	20
								3.8	4.6	5.0	18.06	19.97	20.83	19.84	21.58	22.38	24.81	26.98	27.98	25	30	30
								4.5	5.5	6.0	21.67	23.96	25.00	23.46	25.58	26.55	29.32	31.97	33.19	30	35	35
								6.0	7.3	8.0	28.89	31.94	33.33	30.68	33.56	34.88	38.35	41.95	43.60	40	45	45
								7.5	9.2	10.0	36.11	39.93	41.67	37.90	41.55	43.22	47.37	51.93	54.02	50	60	60
SEHX-36/37 CEHX - 36/37 SCWE 36/37 CCWE 36/37 49" Discharge Opening	1/2	208/240	CT	83 / 7.00 x 8.00	2.72	2.46	2.36	0.0	0.0	0.0	0.00	0.00	0.00	2.72	2.46	2.36	3.40	3.08	2.95	15	15	15
								2.3	2.8	3.0	10.83	11.98	12.50	13.56	14.44	14.86	16.95	18.05	18.58	20	20	20
								3.8	4.6	5.0	18.06	19.97	20.83	20.78	22.43	23.19	25.97	28.03	28.99	25	30	30
								4.5	5.5	6.0	21.67	23.96	25.00	24.39	26.42	27.36	30.49	33.03	34.20	30	35	35
								6.0	7.3	8.0	28.89	31.94	33.33	31.61	34.41	35.69	39.51	43.01	44.62	40	45	45
								7.5	9.2	10.0	36.11	39.93	41.67	38.83	42.39	44.03	48.54	52.99	55.03	50	60	60
SEHX-36/37 CEHX - 36/37 SCWE 36/37 CCWE 36/37 49" Discharge Opening	1/2	208/240	CT	86 / 6.25 x 8.00	1.79	1.62	1.55	0.0	0.0	0.0	0.00	0.00	0.00	1.79	1.62	1.55	2.24	2.02	1.94	15	15	15
								2.3	2.8	3.0	10.83	11.98	12.50	12.62	13.60	14.05	15.78	17.00	17.56	20	20	20
								3.8	4.6	5.0	18.06	19.97	20.83	19.84	21.58	22.38	24.81	26.98	27.98	25	30	30
								4.5	5.5	6.0	21.67	23.96	25.00	23.46	25.58	26.55	29.32	31.97	33.19	30	35	35
								6.0	7.3	8.0	28.89	31.94	33.33	30.68	33.56	34.88	38.35	41.95	43.60	40	45	45
								7.5	9.2	10.0	36.11	39.93	41.67	37.90	41.55	43.22	47.37	51.93	54.02	50	60	60

ELECTRICAL DATA - HOT WATER HEAT											
Air Handler Model	Motor Code	Blower Size (2 Blowers Per Motor)	Volts 1 Ph	Motor Type	Motor HP	Motor Amps 115V	Pump Amps 115V	Unit Amps 115V	MCA 115V	MOP (Max Fuse / Breaker Size)	
SDXW, CDXW, SCWW, CCWW -18/19/24	82	7.00 x 8.00	115	CT	1/3	3.40	0.52	3.92	4.90	15	
SDXW, CDXW, SCWW, CCWW -18/19/24	84	6.25 x 6.88	115	CT	1/3	3.00	0.52	3.52	4.40	15	
SDXW, CDXW, SCWW, CCWW -25/30/31	83	7.00 x 9.00	115	CT	1/2	5.00	0.52	5.52	6.90	15	
SDXW, CDXW, SCWW, CCWW -25/30/31	87	6.25 x 8.00	115	CT	1/2	4.50	0.52	5.02	6.28	15	
SDXW, CDXW, SCWW, CCWW -34/35	83	7.00 x 9.00	115	CT	1/2	5.00	0.52	5.52	6.90	15	
SDXW, CDXW, SCWW, CCWW -34/35	87	6.25 x 8.00	115	CT	1/2	4.50	0.52	5.02	6.28	15	
SDXW, CDXW, SCWW, CCWW -36/37	83	7.00 x 9.00	115	CT	1/2	5.00	0.52	5.52	6.90	15	
SDXW, CDXW, SCWW, CCWW -36/37	87	6.25 x 8.00	115	CT	1/2	4.50	0.52	5.02	6.28	15	

**Table 11: Electrical Data – Electric and Hot Water Heat**  
Note: Circuit breakers must be HACR type

		ELECTRIC HEATER SIZES				
		3 kW	5 kW	6 kW	8 kW	10 kW
240 VAC, 60 HZ, 1 PH	BTU	10,236	17,061	20,473	27,297	34,121
	Kw	3	5	6	8	10
230 VAC, 60 HZ, 1 PH	BTU	9,401	15,669	18,802	25,070	31,337
	Kw	2.76	4.59	5.51	7.35	9.18
220 VAC, 60 HZ, 1 PH	BTU	8,601	14,336	17,203	22,937	28,671
	Kw	2.52	4.20	5.04	6.72	8.40
HEATING ELEMENT CAPACITY	BTU	10,236	17,061	20,473	27,297	34,121
	Kw	3	5	6	8	10

**Table 12: Electric Heater Heating Capacity**

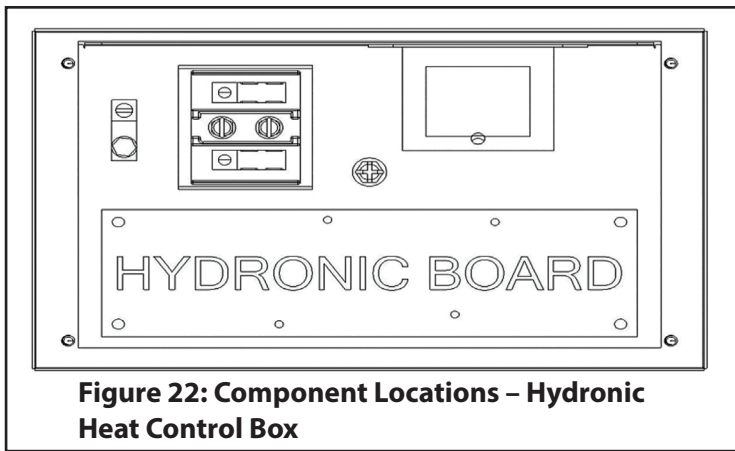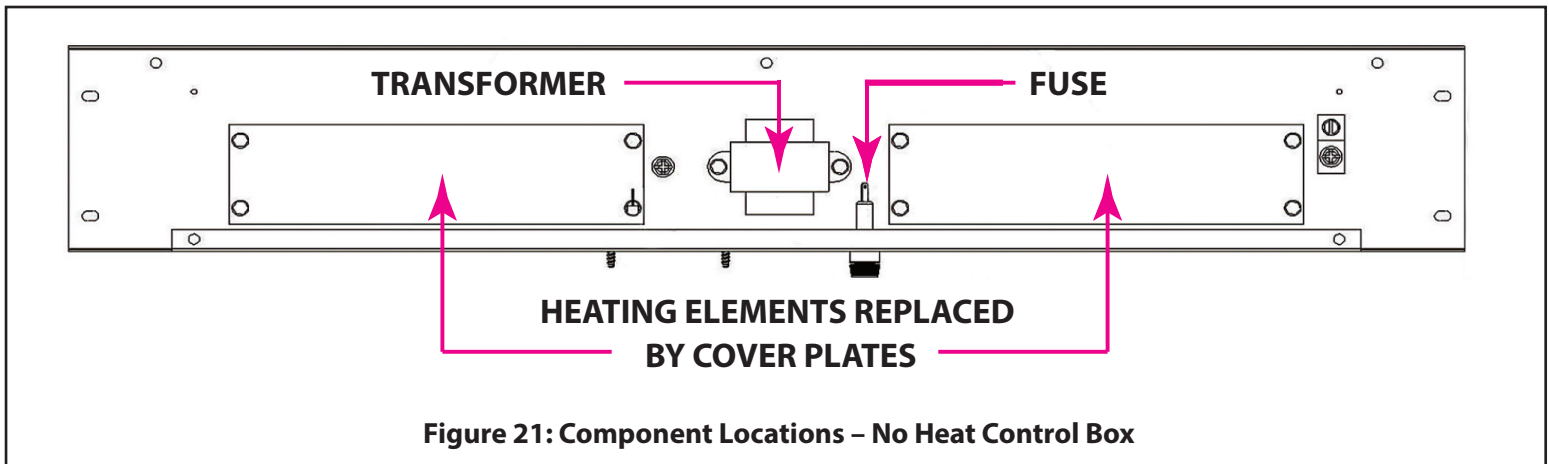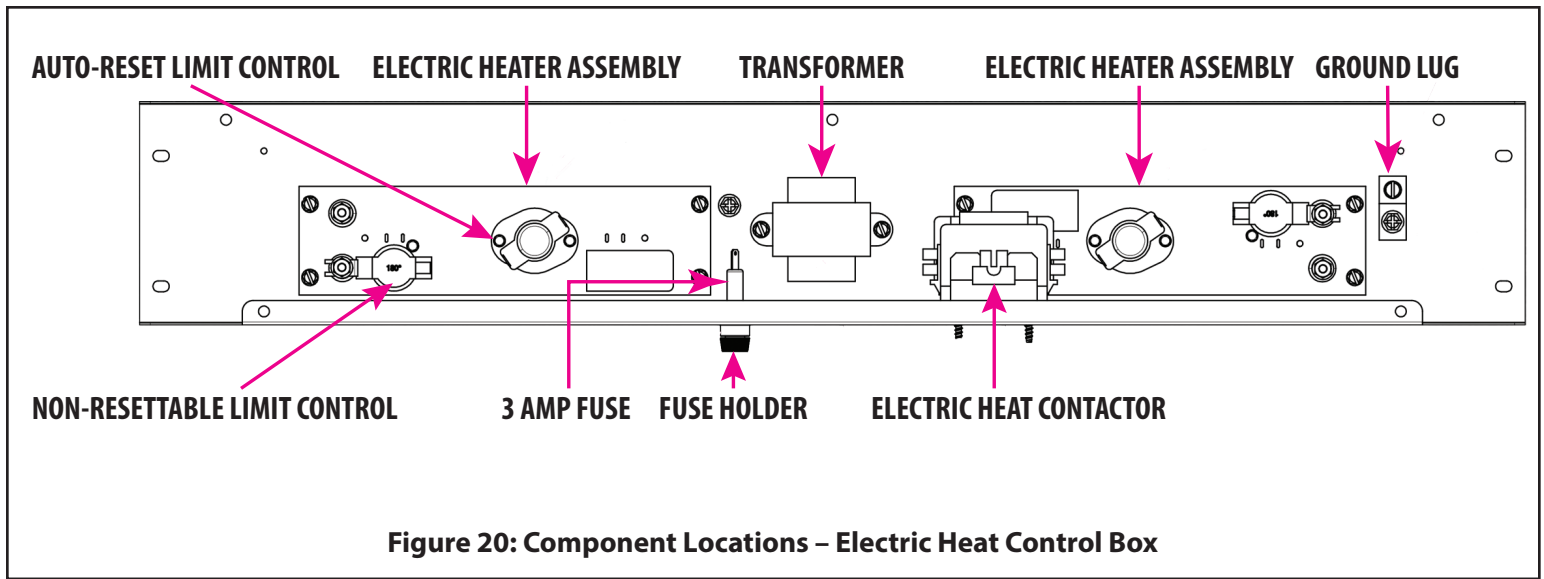

**SECTION 9: THERMOSTAT WIRING AND CONNECTIONS**

Max. Thermostat Wire Length	Thermostat Wire Gauge	Thermostat Wire Maximum Current
0 - 100 Feet	22	3.0 Amps
0 - 125 Feet	20	3.0 amps
0 - 250 Feet	18	3.0 amps

**Table 13: Low Voltage Wire Gauge and Max Lengths**

**Thermostat Wiring**

Thermostat wires must be no smaller than 22 gauge. Refer to Table 13 for recommended wire gauge, lengths and maximum current for each wire gauge. Thermostat wires enter through the side of a cased air handler. Cable connectors must be installed when bringing wiring through the side of a cased air handler to hold the wiring in place and to relieve strain on the wiring.

A five conductor cable from the thermostat to the air handler and a two or three conductor cable from the air handler to the outdoor unit is recommended for typical heating/cooling applications. Typical heat/cool thermostat wire colors and connections are shown in Table 15.

A seven conductor cable from the thermostat to the air and a five conductor cable from the air handler to the outdoor unit is recommended for a typical heat pump application. Typical heat pump thermostat wire colors and connections are shown in Table 16.

**Thermostat Installation**

The thermostat heat anticipator must be set at 0.4 amps if the thermostat has a manual heat anticipator adjustment. This setting should be checked at the time of installation. The thermostat may be a “self-setting” type in which no heat anticipator setting will be found on the thermostat, eliminating the need for field adjustment.


The thermostat should be located on an inside wall in an open area or hallway to more closely sense average room air, preferably where there is air movement back to air handler. The thermostat should not be located within 3 feet of from any windows or supply air registers and should be 52 to 66 inches above the floor.

Maintenance, operating, and/or programming instructions are in the envelope shipped with the thermostat. The envelope should be given to the homeowner or user after the thermostat installation is completed.


## IMPORTANT

Do not locate thermostat within three feet of any of the following items:


1. Supply air registers
2. Lights or heat lamps
3. Aquariums
4. Televisions, stereo, amplifiers, surround sound systems
5. Stoves or any cooking appliance
6. Refrigerator
7. Washer and/or dryer
8. Hot water tank
9. Sink or near any hot water
10. Within 15 feet of any electric space heater
11. With two feet of sunlight

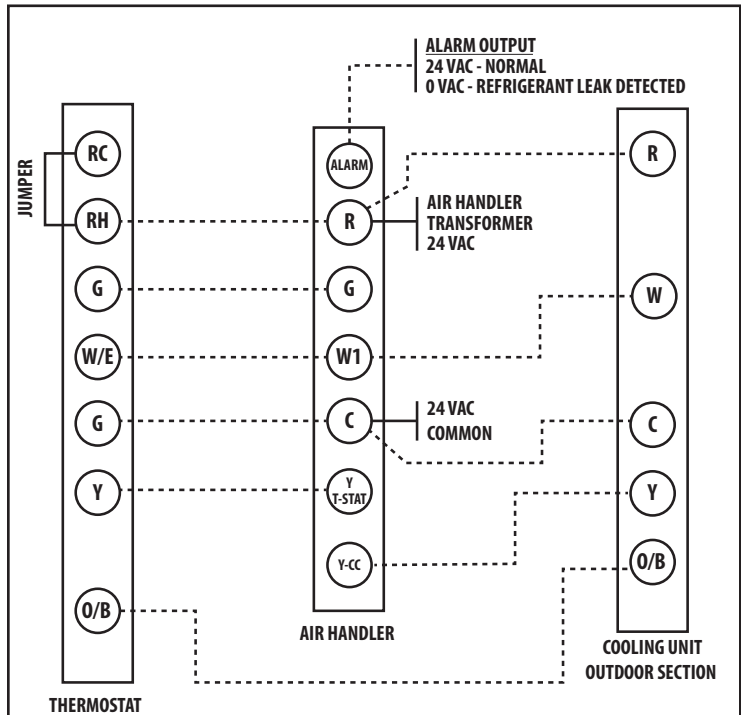

**Figure 24: Typical Low Voltage Connections-Heat Pump with Electric or Hydronic Heat**

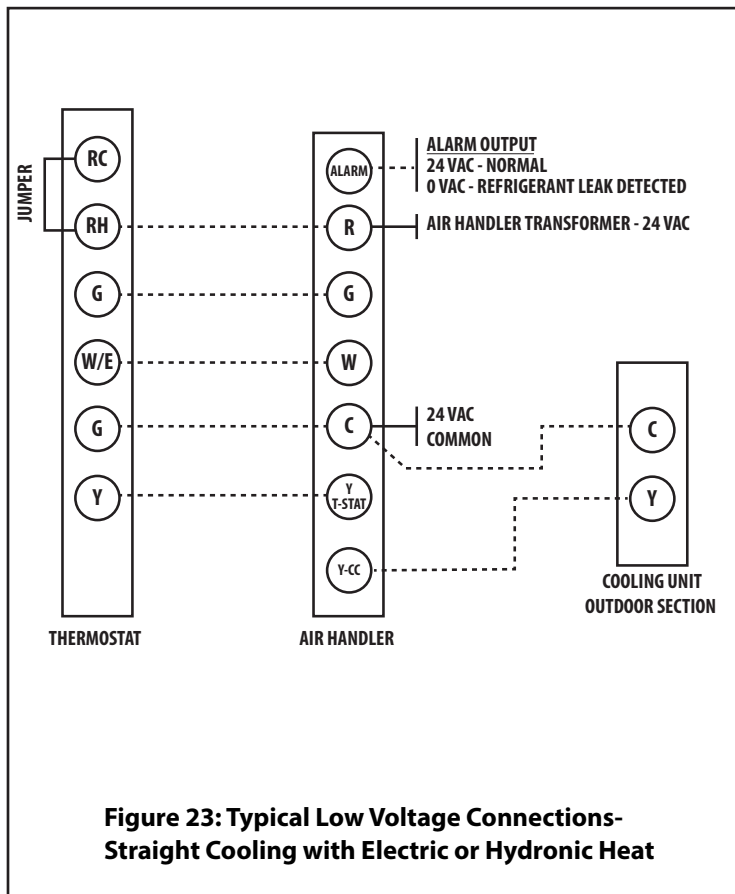

**Figure 23: Typical Low Voltage Connections-Straight Cooling with Electric or Hydronic Heat**

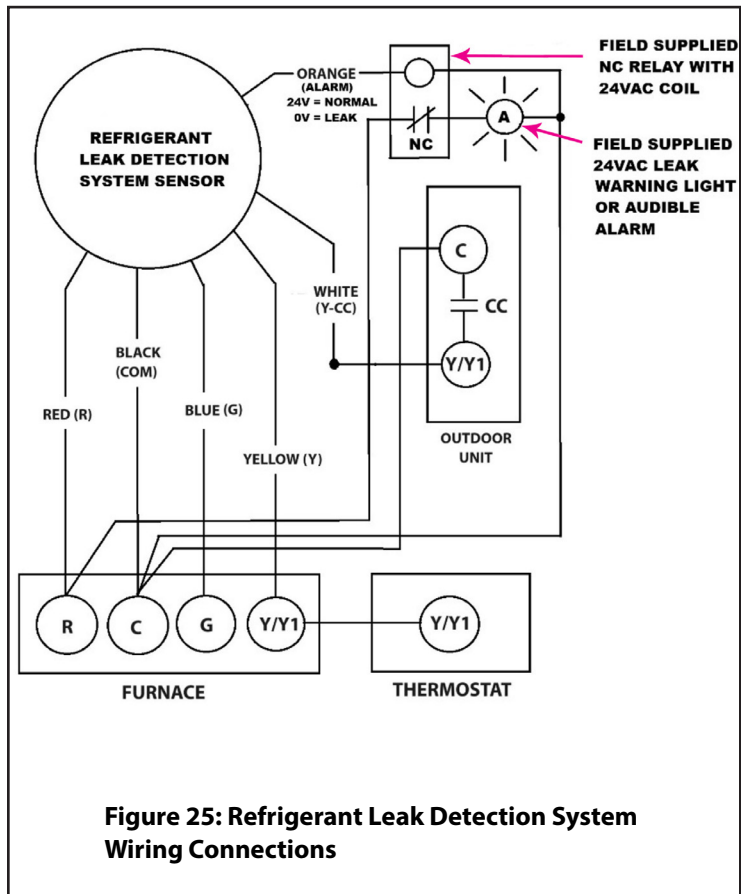

**Figure 25: Refrigerant Leak Detection System Wiring Connections**

WIRE COLOR	DESCRIPTION	LETTER CODE	THERMOSTAT CONNECTION
RED	24 VAC	RED / R	R
WHITE	Heat	WHT / W	W or W 1
GREEN	Indoor Fan	GRN / G	G
BLACK	24 VAC Common	BLK / C	C
WHITE	Y-CC (Compressor Contactor Output)	WHITE / Y-CC	N/A – Connects to Outdoor Unit CC
ORANGE	Refrigerant Leak Alarm - 24VAC = NO LEAK 0 VAC = LEAK	ORN / BK	See Refrigerant Leak Alarm Output Section on Page 25

**Table 14: Air Handler Low Voltage Pigtail Wire Colors and Connections**

WIRE COLOR	DESCRIPTION	LETTER CODE	THERMOSTAT CONNECTION
RED	24 VAC	RED / R	R
WHITE	Heat (1st Stage Heat)	WHT / W	W or W 1
GREEN	Indoor Fan	GRN / G	G
YELLOW	Cooling	YEL / C	Y or Y1
BROWN	24 VAC Common	BRN / C	C

**Table 15: Typical Heat/Cooling Outdoor Unit Thermostat Wire Color Codes and Connections**

WIRE COLOR	DESCRIPTION	LETTER CODE	THERMOSTAT CONNECTION
RED	24 VAC	RED / R	R
WHITE	Heat (1st Stage Heat)	WHT / W	W or W 1
GREEN	Indoor Fan	GRN / G	G
YELLOW	Cooling	YEL / C	Y or Y1
BROWN	24 VAC Common	BRN / C	C
ORANGE	Heat Pump Reversing Valve Solenoid (Most Brands)	ORN / O	O
BLUE	Heat Pump Reversing Valve Solenoid (Some Brands)	BLU / B	B

**Table 16: Typical Heat Pump Outdoor Unit Thermostat Wire Color Codes and Connections**

### Typical Heating/ Cooling Wiring Connections

1. Open the ceiling access panel.
2. Remove the control box cover.
3. Install a grommet or a strain relief in the 9/16 inch diameter hole on the top and the left side of the air handler to protect the thermostat wire cable.
4. Strip 1/2 inch of the insulation off the end of each wire.
5. Insert the wire cable from the thermostat thru the 9/16 inch hole into the control box and place the thermostat wire cable next to the low voltage pigtails. Secure the thermostat wire cable with a strain relief to prevent wire connections from being pulled apart.
6. Connect the RED (24 VAC) thermostat wire to the RED air handler pigtail with a wire nut.
7. Connect the WHITE (1st stage heating) thermostat wire to the WHITE air handler low voltage pigtail wire with a wire nut.
8. Connect the GREEN (indoor fan) thermostat wire to the GREEN air handler low voltage pigtail wire with a wire nut.
9. Connect the YELLOW (cooling) wire from the thermostat "Y" terminal to the YELLOW air handler pigtail wire with a wire nut.
10. Connect the WHITE air handler pigtail labeled "Y-CC" to the wire from the outdoor unit compressor contactor coil with a wire nut.
11. Connect the BROWN (24VAC common) wire from the thermostat to the BROWN air handler low voltage pigtail wire and to the BROWN (24 VAC common) wire from the compressor contactor on the outdoor unit. Fasten the 3 wires together securely with a wire nut.
12. If a refrigerant leak alert is desired and a building management system or smart thermostat capable of providing that alert is being used, removed the wire nut from the end of the ORANGE pigtail wire labeled "ALARM" and connect it to the appropriate building management system or smart thermostat connections.
13. See "Refrigerant Leak Alarm Output" on page 25 for additional information.

## Typical Heat Pump Wiring Connections

1. Open the ceiling access panel.
2. Remove the control box cover.
3. Install a grommet or a strain relief in the 9/16 inch diameter hole on the top and the left side of the air handler to protect the thermostat wire cable.
4. Strip 1/2 inch of the insulation from the end of each wire.
5. Insert the wire cable from the thermostat thru the 9/16 inch hole into the control box and place the thermostat wire cable next to the low voltage pigtailed wires. Secure the thermostat wire cable with a strain relief to prevent wire connections from being pulled apart.
6. Connect the RED (24 VAC) wire from the thermostat to the RED air handler low voltage pigtail wire and the RED wire from the "R" terminal on the outdoor unit. Fasten the three wires together securely with a wire nut.
7. Connect the WHITE (1st stage heating) wire from the thermostat to the WHITE air handler low voltage pigtail wire and the WHITE wire from the "E" terminal on the outdoor unit. Fasten the three wires together securely with a wire nut.
8. Connect the GREEN (indoor fan) wire from the thermostat to the GREEN air handler low voltage pigtail wire with a wire nut.
9. Connect the YELLOW (cooling) wire from the thermostat "Y" terminal to the YELLOW air handler pigtail wire with a wire nut.
10. Connect the WHITE air handler pigtail labeled "Y-CC" to the wire from the outdoor unit compressor contactor coil with a wire nut.
11. Connect the BROWN (24 VAC common) wire from the thermostat to the air handler BROWN low voltage pigtail wire and to the BROWN (24 VAC common) wire from the "C" terminal on the outdoor unit. Fasten the 3 wires together securely with a wire nut.
12. Connect the BROWN (24 VAC common) wire from the thermostat to the BROWN air handler low voltage pigtail wire and to the BROWN (24 VAC common) wire from the "C" terminal on the outdoor unit. Fasten the 3 wires together securely with a wire nut.
13. Connect the ORANGE (reversing valve solenoid) wire from the thermostat "O" terminal to the ORANGE wire from the "O" terminal on the outdoor unit. Fasten the two wires together securely with a wire nut.

**NOTE:** If the outdoor unit has a "B" terminal instead of an "O" terminal, connect the BLUE (reversing valve solenoid) wire from the thermostat "B" terminal to the BLUE wire from the "B" terminal on the outdoor unit.

14. If a refrigerant leak alert is desired and a building management system or smart thermostat capable of providing that alert is being used, removed the wire nut from the end of the ORANGE pigtail wire labeled "ALARM" and connect it to the appropriate building management system or smart thermostat connections. A field supplied normally closed relay and warning light or audible alarm may also be connected to the ORANGE sensor wire labeled "ALARM" as shown in Figure 25. See "Refrigerant Leak Alarm Output" on page 25 for additional information

### IMPORTANT NOTES FOR HYDRONIC AIR HANDLERS:

- 1) The YELLOW wire from the thermostat "Y" terminal must connect to the YELLOW air handler thermostat pigtail or the "Y" terminal on the electronic hydronic control board and the "Y" signal wire

(typically YELLOW) from the outdoor unit compressor contactor must connect to the "CC" terminal on the control board. The thermostat "Y" signal is passed from the "CLin" terminal to the "CLout" terminal with a factory installed jumper wire or the Compressor Lockout Switch which may be factory or field installed on the hot water coil. The CLout terminal is connected to the "CC" terminal internally in the control board. The jumper between the CLin and CLout terminals allows the "Y" signal to reach the CC terminal on applications without a compressor lockout switch. For applications where a compressor lock-out switch has been installed, this jumper is replaced with the two wires from the lock-out switch.

- 2) If the YELLOW wire from the thermostat "Y" terminal on a hydronic air handler is not connected to the YELLOW air handler thermostat pigtail (Y), the indoor blower motor will not operate in the cooling or heat pump heating mode which will result in no cooling and frosting up of the indoor coil in the cooling mode or no heating and excessive compressor head pressures in the heat pump heating mode.

**SECTION 11: BLOWER PERFORMANCE**

Minimum CFM for Electric Heat: 3kW = 195 CFM; 5kW = 325 CFM; 6kW = 390 CFM; 8kW = 520 CFM; 10kW = 650 CFM

CEHX / SEHX / CCWE / SCWE	Blower Motor			No. of Blowers	Blower Wheel Size	CFM@ 0.10" W.C.	CFM@ 0.20" W.C.	CFM@ 0.25" W.C.	CFM@ 0.30" W.C.	CFM@ 0.40" W.C.	CFM@ 0.50" W.C.
	HP	Type	Volts								
18-24-**-**-1C80	1/3	C. T	208/240	2	7.00 x 8.00	921	876	859	842	788	742
25-31-**-**-1C81	1/2	C. T.	208/240	2	7.00 x 9.00	1110	1047	1005	993	925	873
34-35-**-**-1C81	1/2	C. T.	208/240	2	7.00 x 9.00	1369	1307	1262	1226	1157	1089
36-37-**-**-1C81	1/2	C. T.	208/240	2	7.00 x 9.00	1415	1364	1321	1287	1220	1155

**Table 17: \*DXW/\*CWW Blower Performance – Constant Torque Motor – Speed Tap 5**

CEHX / SEHX / CCWE / SCWE	Blower Motor			No. of Blowers	Blower Wheel Size	CFM@ 0.10" W.C.	CFM@ 0.20" W.C.	CFM@ 0.25" W.C.	CFM@ 0.30" W.C.	CFM@ 0.40" W.C.	CFM@ 0.50" W.C.
	HP	Type	Volts								
18-24-**-**-1C80	1/3	C.T.	208/240	2	7.00 x 8.00	821	777	754	738	689	640
25-31-**-**-1C81	1/2	C.T.	208/240	2	7.00 x 9.00	1010	932	896	877	821	758
34-35-**-**-1C81	1/2	C.T.	208/240	2	7.00 x 9.00	1262	1200	1162	1135	1077	1010
36-37-**-**-1C81	1/2	C.T.	208/240	2	7.00 x 9.00	1277	1215	1204	1166	1098	1045

**Table 18: \*DXW/\*CWW Blower Performance – Constant Torque Motor – Speed Tap 4**

CCEHX / SEHX / CCWE / SCWE	Blower Motor			No. of Blowers	Blower Wheel Size	CFM@ 0.10" W.C.	CFM@ 0.20" W.C.	CFM@ 0.25" W.C.	CFM@ 0.30" W.C.	CFM@ 0.40" W.C.	CFM@ 0.50" W.C.
	HP	Type	Volts								
18-24-**-**-1C80	1/3	C.T.	208/240	2	7.00 x 8.00	761	722	697	676	626	578
25-31-**-**-1C81	1/2	C.T.	208/240	2	7.00 x 9.00	896	818	789	777	694	641
34-35-**-**-1C81	1/2	C.T.	208/240	2	7.00 x 9.00	1173	1095	1065	1035	965	889
36-37-**-**-1C81	1/2	C.T.	208/240	2	7.00 x 9.00	1177	1122	1093	1063	1001	934

**Table 19: \*DXW/\*CWW Blower Performance – Constant Torque Motor – Speed Tap 3**

CEHX / SEHX / CCWE / SCWE	Blower Motor			No. of Blowers	Blower Wheel Size	CFM@ 0.10" W.C.	CFM@ 0.20" W.C.	CFM@ 0.25" W.C.	CFM@ 0.30" W.C.	CFM@ 0.40" W.C.	CFM@ 0.50" W.C.
	HP	Type	Volts								
19-**-**-1C80	1/3	C.T.	208/240	2	7.00 x 8.00	640	583	557	530	478	465
25-**-**-1C81	1/2	C.T.	208/240	2	7.00 x 9.00	749	680	646	625	550	492
35-**-**-1C81	1/2	C.T.	208/240	2	7.00 x 9.00	1059	971	951	910	822	749
37-**-**-1C81	1/2	C.T.	208/240	2	7.00 x 9.00	1069	1001	961	920	855	777

**Table 20: \*DXW/\*CWW Blower Performance – Constant Torque Motor – Speed Tap 2**

CEHX / SEHX / CCWE / SCWE	Blower Motor			No. of Blowers	Blower Wheel Size	CFM@ 0.10" W.C.	CFM@ 0.20" W.C.	CFM@ 0.25" W.C.	CFM@ 0.30" W.C.	CFM@ 0.40" W.C.	CFM@ 0.50" W.C.
	HP	Type	Volts								
18-24-**-**-1C80	1/3	C.T.	208/240	2	7.00 x 8.00	562	502	478	453	402	352
25-31-**-**-1C81	1/2	C.T.	208/240	2	7.00 x 9.00	611	540	497	486	410	352
34-35-**-**-1C81	1/2	C.T.	208/240	2	7.00 x 9.00	978	896	852	814	732	677
36-37-**-**-1C81	1/2	C.T.	208/240	2	7.00 x 9.00	987	913	870	840	760	698

**Table 21: \*DXW/\*CWW Blower Performance – Constant Torque Motor – Speed Tap 1**

CDXW / SDXW / CCWW / SCWW	Blower Motor			No. of Blowers	Blower Wheel Size	CFM@ 0.10" W.C.	CFM@ 0.20" W.C.	CFM@ 0.25" W.C.	CFM@ 0.30" W.C.	CFM@ 0.40" W.C.	CFM@ 0.50" W.C.
	HP	Type	Volts								
18-21-**-1A82	1/3	C.T.	120	2	7.00 x 8.00	917	881	861	840	792	746
19-21-**-1A82	1/3	C.T.	120	2	7.00 x 8.00	917	881	861	840	792	746
24-23-**-1A82	1/3	C.T.	120	2	7.00 x 8.00	917	881	861	840	792	746
25-33-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1075	1023	1000	973	919	862
30-27-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1072	1023	1000	973	919	862
31-28-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1072	1023	1000	973	919	862
34-30-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1294	1245	1214	1182	1117	1041
35-30-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1294	1245	1214	1182	1117	1041
36-35-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1362	1311	1287	1253	1202	1142
37-32-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1362	1311	1287	1253	1202	1142

**Table 22: \*DXW/\*CWW Blower Performance – Constant Torque Motor - Speed Tap 5**

CDXW / SDXW / CCWW / SCWW	Blower Motor			No. of Blowers	Blower Wheel Size	CFM@ 0.10" W.C.	CFM@ 0.20" W.C.	CFM@ 0.25" W.C.	CFM@ 0.30" W.C.	CFM@ 0.40" W.C.	CFM@ 0.50" W.C.
	HP	Type	Volts								
18-21-**-1A82	1/3	C.T.	120	2	7.00 x 8.00	810	773	758	734	696	657
19-21-**-1A82	1/3	C.T.	120	2	7.00 x 8.00	810	773	758	734	696	657
24-23-**-1A82	1/3	C.T.	120	2	7.00 x 8.00	810	773	758	734	696	657
25-33-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	976	922	900	869	813	756
30-27-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	976	922	900	869	813	756
31-28-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	976	922	900	869	813	756
34-30-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1239	1181	1154	1127	1070	1009
35-30-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1239	1181	1154	1127	1070	1009
36-35-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1301	1253	1223	1197	1150	1099
37-32-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1301	1253	1223	1197	1150	1099

**Table 23: \*DXW/\*CWW Blower Performance – Constant Torque Motor – Speed Tap 4**

CDXW / SDXW / CCWW / SCWW	Blower Motor			No. of Blowers	Blower Wheel Size	CFM@ 0.10" W.C.	CFM@ 0.20" W.C.	CFM@ 0.25" W.C.	CFM@ 0.30" W.C.	CFM@ 0.40" W.C.	CFM@ 0.50" W.C.
	HP	Type	Volts								
18-21-**-1A82	1/3	C.T.	120	2	7.00 x 8.00	765	725	700	683	638	595
19-21-**-1A82	1/3	C.T.	120	2	7.00 x 8.00	765	725	700	683	638	595
24-23-**-1A82	1/3	C.T.	120	2	7.00 x 8.00	765	725	700	683	638	595
25-33-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	888	829	800	769	704	647
30-27-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	888	829	800	769	704	647
31-28-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	888	829	800	769	704	647
34-30-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1144	1040	1162	1027	967	916
35-30-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1144	1040	1162	1027	967	916
36-35-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1178	1156	1133	1104	1052	997
37-32-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1178	1156	1133	1104	1052	997

**Table 24: \*DXW/\*CWW Blower Performance Chart – Constant Torque Motor – Speed Tap 3**

CDXW / SDXW / CCWW / SCWW	Blower Motor			No. of Blowers	Blower Wheel Size	CFM@ 0.10" W.C.	CFM@ 0.20" W.C.	CFM@ 0.25" W.C.	CFM@ 0.30" W.C.	CFM@ 0.40" W.C.	CFM@ 0.50" W.C.
	HP	Type	Volts								
18-21-**-1A82	1/3	C.T.	120	2	7.00 x 8.00	616	585	562	540	492	446
19-21-**-1A82	1/3	C.T.	120	2	7.00 x 8.00	616	585	562	540	492	446
24-23-**-1A82	1/3	C.T.	120	2	7.00 x 8.00	616	585	562	540	492	446
25-33-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	746	678	647	604	561	504
30-27-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	746	678	647	604	561	504
31-28-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	746	678	647	604	561	504
34-30-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1052	987	957	925	860	799
35-30-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1052	987	957	925	860	799
36-35-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1084	1022	1000	969	906	852

**Table 25: \*DXW/\*CWW Blower Performance Chart – Constant Torque Motor – Speed Tap 2**

CDXW / SDXW / CCWW / SCWW	Blower Motor			No. of Blowers	Blower Wheel Size	CFM@ 0.10" W.C.	CFM@ 0.20" W.C.	CFM@ 0.25" W.C.	CFM@ 0.30" W.C.	CFM@ 0.40" W.C.	CFM@ 0.50" W.C.
	HP	Type	Volts								
18-21-**-1A82	1/3	C.T.	120	2	7.00 x 8.00	554	505	481	455	403	356
19-21-**-1A82	1/3	C.T.	120	2	7.00 x 8.00	554	505	481	455	403	356
24-23-**-1A82	1/3	C.T.	120	2	7.00 x 8.00	554	505	481	455	403	356
25-33-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	613	536	500	466	398	337
30-27-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	613	536	500	466	398	337
31-28-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	613	536	500	466	398	337
34-30-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	946	883	852	812	751	684
35-30-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	946	883	852	812	751	684
36-35-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1004	943	911	881	819	754
37-32-**-1A83	1/2	C.T.	120	2	7.00 x 9.00	1004	943	911	881	819	754

**Table 26: \*DXW/\*CWW Blower Performance Chart – Constant Torque Motor – Speed Tap 1**

## SECTION 12: BLOWER MOTOR SPEED SELECTION

**NOTICE:** The factory blower motor speed tap settings are appropriate for most applications. Refer to Section 11: Blower Performance before changing the motor speed from the factory setting.

### WARNING


To avoid personal injury or property damage, make certain that the motor leads cannot come into contact with non-insulated metal components of the air handler.

### WARNING

This air handler is equipped with a refrigerant leak mitigation system that energizes the air handler blower motor to deliver at least the required minimum airflow (See Tables 29 or 30) when the refrigerant leak detection system detects a leak. This will dilute the flammable A2L class refrigerant to a point that it no longer poses a risk of an explosion or fire. Follow the procedure “Verifying Proper Functioning of Refrigerant Leak Mitigation System” later in this section to confirm the refrigerant mitigation system is functioning as it should.

### CONSTANT TORQUE MOTOR

The high efficiency constant torque motor operates on 208/240 VAC for electric heat models and 115 VAC for hydronic heat models. The motor speed tap inputs are 24 VAC. The speed taps can be changed by removing the BLACK wire from the blower motor control module terminal 5 or the RED wire from the blower motor control module terminal 1 and connecting the wires to blower motor terminals 2, 3 or 4. . Figure 26, Table 27, and Table 28 show the constant torque motor terminals and the connection definitions.

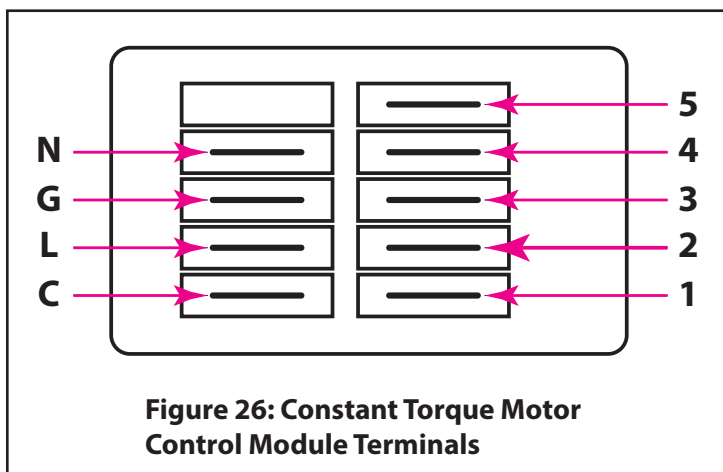

TERMINAL	CONNECTION
C	Speed Tap Common - 24 VAC Common
L	Supply Voltage – 208/240 VAC – Line 1
G	Ground Connection
N	Supply Voltage – 208/240 VAC – Line 2
1	Low Speed Tap - 24 VAC Input
2	Medium - Low Speed Tap - 24 VAC Input
3	Medium Speed Tap - 24 VAC Input
4	Medium - High Speed Tap - 24 VAC Input
5	High Speed Tap - 24 VAC Input

**Table 27: Constant Torque Motor Terminals – Electric Heat Models**

TERMINAL	CONNECTION
C	Speed Tap Common - 24 VAC Common
L	Supply Voltage - 115 VAC
G	Ground Connection
N	Supply Voltage - Neutral
1	Low Speed Tap - 24 VAC Input
2	Medium - Low Speed Tap - 24 VAC Input
3	Medium Speed Tap - 24 VAC Input
4	Medium - High Speed Tap - 24 VAC Input
5	High Speed Tap - 24 VAC Input

**Table 28: Constant Torque Motor Terminals – Hydronic Heat Models**

### Changing Motor Speeds – Constant Torque Motor


1. Turn off all electrical supply circuits to the air handler at the main electrical panel (circuit breaker box) and turn the local air handler service disconnect to the OFF position.
2. Loosen the ceiling access panel thumbscrews and lower access panel.
3. Disconnect the speed tap wire(s) connected to blower motor and reconnect to the desired terminal(s).

#### Constant Torque Motor Speed Tap Wire Color Code:

**ORANGE** - Cooling Speed; **WHITE** - Heating Speed; **YELLOW** – Continuous Fan Speed

**NOTE:** Motor speed tap terminal 1 is the lowest speed and 5 is the highest speed. The cooling speed should be higher than the heating speed.

4. Close the ceiling access panel and secure the panel with the thumb screws.
5. Turn on all electrical supply circuits to the air handler at the main electrical panel (circuit breaker box) and turn the local air handler service disconnect to the ON position.
6. Set the thermostat to the desired operating mode and temperature.

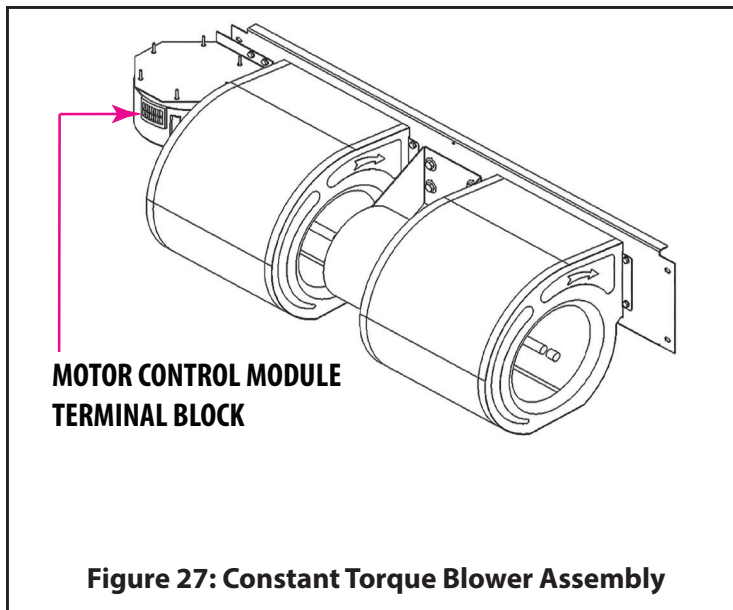

## SECTION 13: FINAL SYSTEM CHECKOUT AND STARTUP

1. Refer to appropriate wiring diagram and recheck all wiring connections. Ensure that all wiring connections are tight.
2. Check blower motor connectors to make sure they are not damaged or loose.
3. If the control box cover was removed; reinstall control box cover.
4. Swing the service access panel into place and secure with the thumbscrews.
5. Switch the air handler circuit breakers in the main electrical panel to the ON position.
6. Switch the air handler service disconnect switch to the ON position.
7. Set the thermostat FAN Switch to the ON position to enable the continuous fan mode.
8. Check for air leaks at all duct connections and seal any leaks that are found.
9. Set the thermostat FAN switch to the AUTO position.
10. Set the thermostat HEAT/COOL switch to the COOL position and adjust the set point below the room temperature to enable the cooling mode.
11. Check for proper cooling operation per the outdoor unit installation and operating instructions.
12. **Electric Heat Models Only:** Switch the thermostat HEAT/COOL switch to the HEAT position and adjust the set point above the room temperature to enable the heating mode.
  - a. Check for proper heating operation.
  - b. Set the thermostat to the desired operating mode and adjust the temperature setting for comfort conditions.
13. **Hydronic Heat Models Only:** Switch the thermostat HEAT/COOL switch to the OFF position. The heating mode in models with hydronic heating system should not be switched on until system is filled and air is purged from hot water coil using the following procedure.

### Filling Hydronic Heating System With Water, Purging Air From System, and System Startup

1. The thermostat HEAT/COOL switch must be in the OFF position.
2. Fill and pressurize the water heater and water coil.
3. Check for water leaks and seal any leaks that are found.

4. Turn the water heater on and set water temperature at 130°F for now.
5. Vent air from the water tank by opening a hot water spigot or faucet.
6. Vent and flush the supply and return water lines by attaching a hose to the volume purge valve and running purge water to a safe location. Run approximately 5 gallons of water at a high flow rate to purge.
7. Switch the air handler circuit breaker in the main electrical panel to the ON position if it is not already in the ON position.
8. Switch the air handler service disconnect switch to the ON position if it is not already in the ON position.
9. Set the thermostat HEAT/COOL switch to the HEAT position and adjust the set point above the room temperature to call for heat. The fan and water pump (provided a water pump is present) should start simultaneously. The water coil should be warm after a few minutes of operation.
10. The air handler is rated for water temperatures of 130°-180°F. Set water heater temperature at design temperature and take proper safeguards for water usage at supply points per local codes and safety considerations.

**NOTE:** If CPVC or PEX hot water tubing is used, do not set the water temperature above 150°F.

11. Set thermostat HEAT/COOL switch to the desired operating mode and temperature

### Verifying Proper Functioning of Refrigerant Leak Mitigation System

A test to confirm the proper functioning of the refrigerant leak mitigation system must be performed at the final system check-out. Follow the procedure below to perform that test.

1. Open the ceiling access panel below the air handler.
2. Locate the black refrigerant sensor located below the blower motor (see Figure 19).

### Leak Detected During Cooling Cycle

3. Set the thermostat to "COOL" and the fan switch to "AUTO" and lower the temperature setpoint below the indoor temperature so the system enters the cooling mode.
4. Confirm the outdoor unit compressor is operating.
5. Within 30 seconds of the compressor starting, release a small amount of refrigerant on the refrigerant sensor to activate the leak mitigation mode.
6. Confirm the outdoor unit compressor and fan motor shut down and the indoor blower continues to operate.
7. Confirm the indoor blower is energized and 24V is not present at the air handler pigtail marked "ALARM".
8. Confirm the outdoor unit compressor and fan motor are re-energized approximately 5 minutes after the flow of refrigerant near the sensor has ended and that the indoor blower continues to operate.

### Leak Detected During the OFF Cycle

9. Set the thermostat to the "OFF" position and wait until the outdoor unit compressor and fan motor stop and indoor Release a small amount of refrigerant on the refrigerant sensor to activate the leak mitigation mode.
10. Confirm the indoor blower is energized and 24V is not present at the air handler pigtail marked "ALARM".
11. Confirm the indoor blower shuts down after approximately 5 minutes after the flow of refrigerant on the refrigerant sensor has ended.

12. If the Refrigerant Leak Mitigation System does not operate as stated above, check for loose wiring connections or replace the refrigerant sensor.
13. Close the ceiling access panel and secure it with the thumb screws.
14. Set the thermostat to the desired operating mode and temperature.

If the leak detection system does not function properly when subjected to the above procedure, check for miswiring of the system. If the wiring connections are found to be correct per the air handler wiring diagram, replace the sensor with an approved replacement from the manufacturer using the following procedure.

#### **Leak Detection Sensor Replacement**

When the refrigerant leak detection sensor fails or reaches the end of its life, the leak detection sensor will enter and remain in the leak mitigation mode even though there is no refrigerant leak present. If the leak detection system continues to operate in the mitigation mode even when a refrigerant leak isn't indicated by a portable refrigerant leak detector, replace the sensor with an approved replacement from the air coil manufacturer. Disconnect the wiring harness connector from the failed sensor and remove the sensor mounting screws. Discard the failed sensor. Mount the replacement sensor in the same location as the failed sensor that was removed and connect the sensor wiring harness connector to the sensor. Verify the proper function of the refrigerant leak mitigation system using the **"Verifying Proper Functioning of Refrigerant Leak Mitigation System"** above.



## **IMPORTANT**

Mortex may source sensors from various manufacturers that have a different wiring harness connection. A wiring adapter may be necessary to allow the replacement sensor to connect the sensor wiring harness. The wiring adapter will be provided with the replacement sensor. Alternate mounting holes are provided to accommodate the various approved sensors. Only use a replacement sensor approved by and provided by Mortex to assure proper operating and compatibility.

Only the following refrigerant sensors may be used for Mortex products:

Only the following refrigerant sensors may be used for Mortex products:

**R-32 Refrigerant: R68ALL001**

**R-454B Refrigerant: R68ALL002**

**R-32/R454B Refrigerant (Dual Refrigerant Sensor): R68ALL003**

**IMPORTANT:** The sensor wiring harness plug must be pointing down or horizontal. If the plug is pointing up, water could collect in the plug and result in operational issues.

SECTION 14: WIRING DIAGRAMS

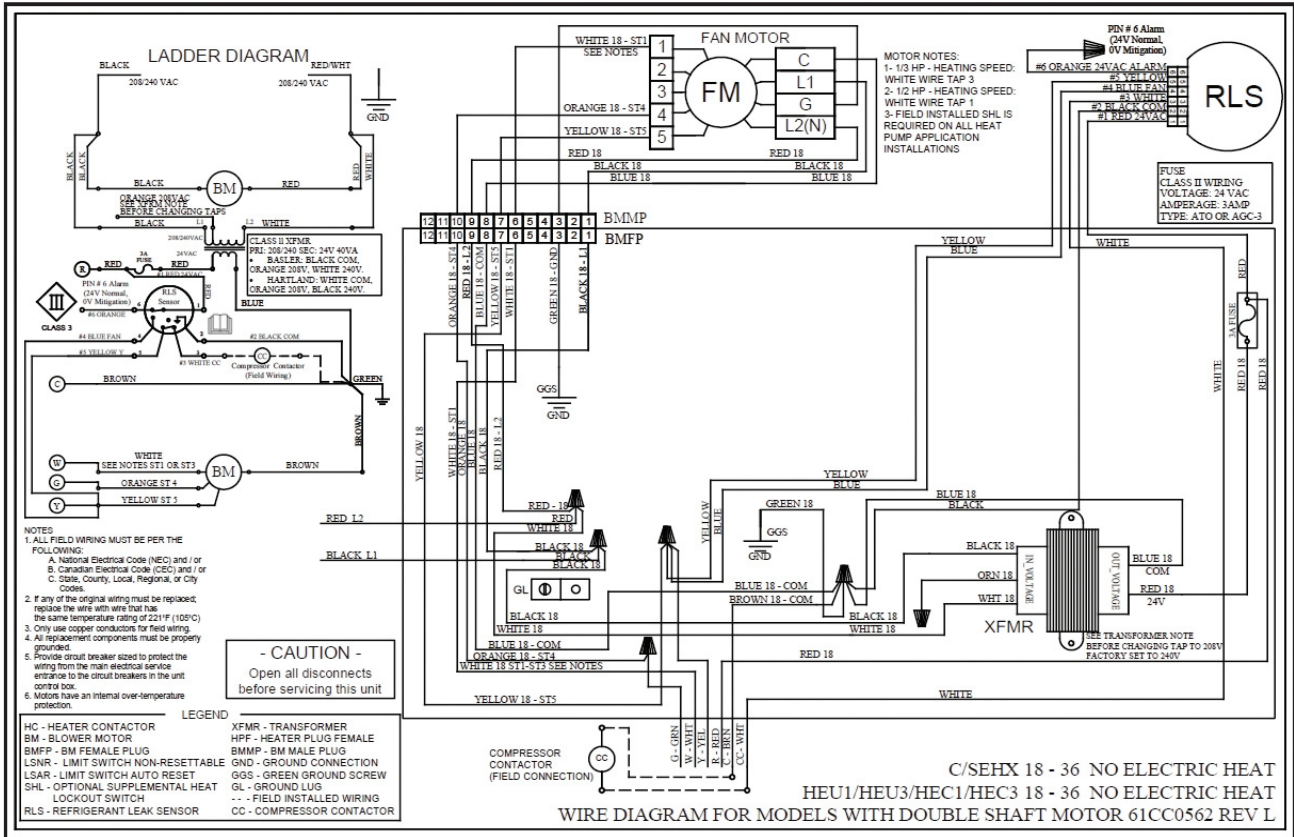


Figure 27: CEHX/SEHX/CCWE/SCWE; 18 – 37 BTU/H; No Electric Heat; Constant Torque Blower Motor



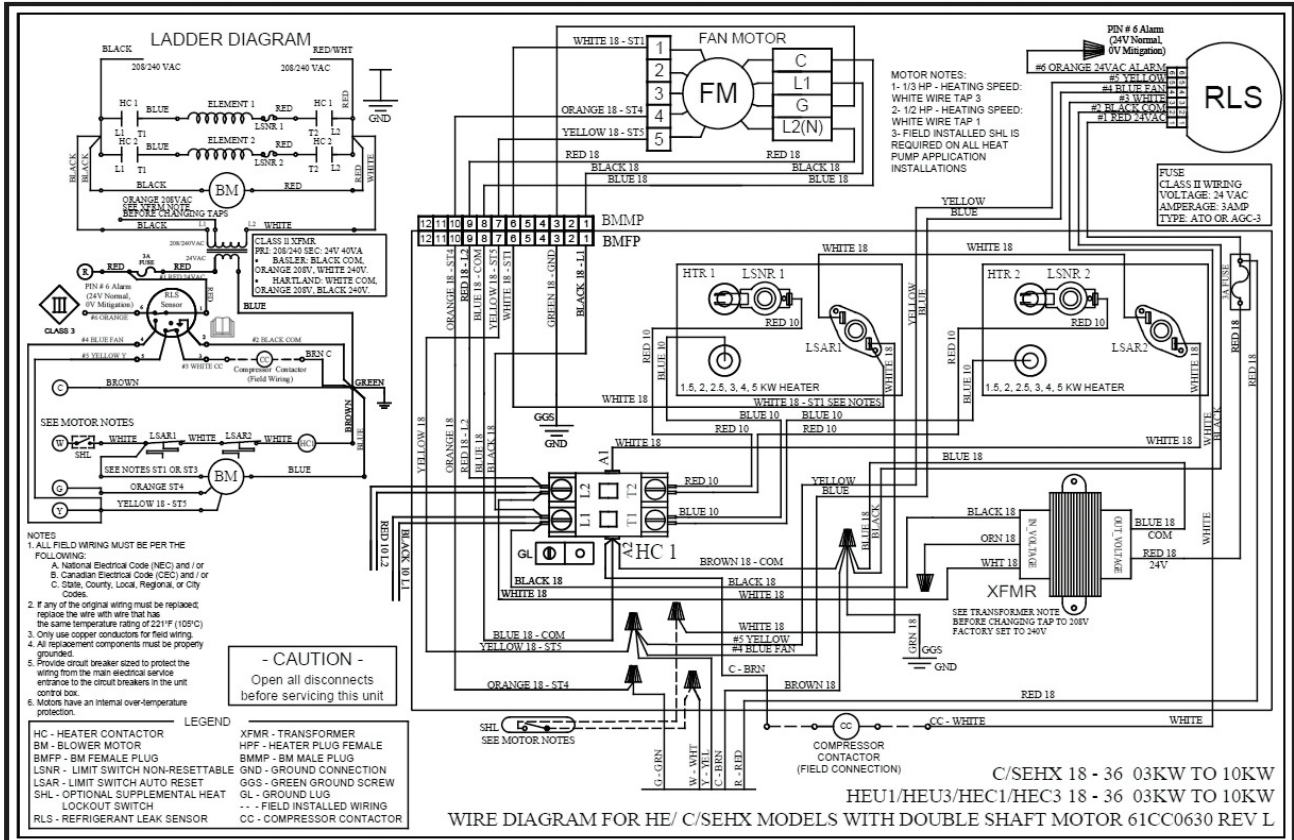


Figure 28: CEHX/SEHX/CCWE/SCWE; 18 – 37 BTU/H; 03kW - 10kW Electric Heat; Constant Torque Blower Motor; With Field Installed Electric Heat Lockout Switch

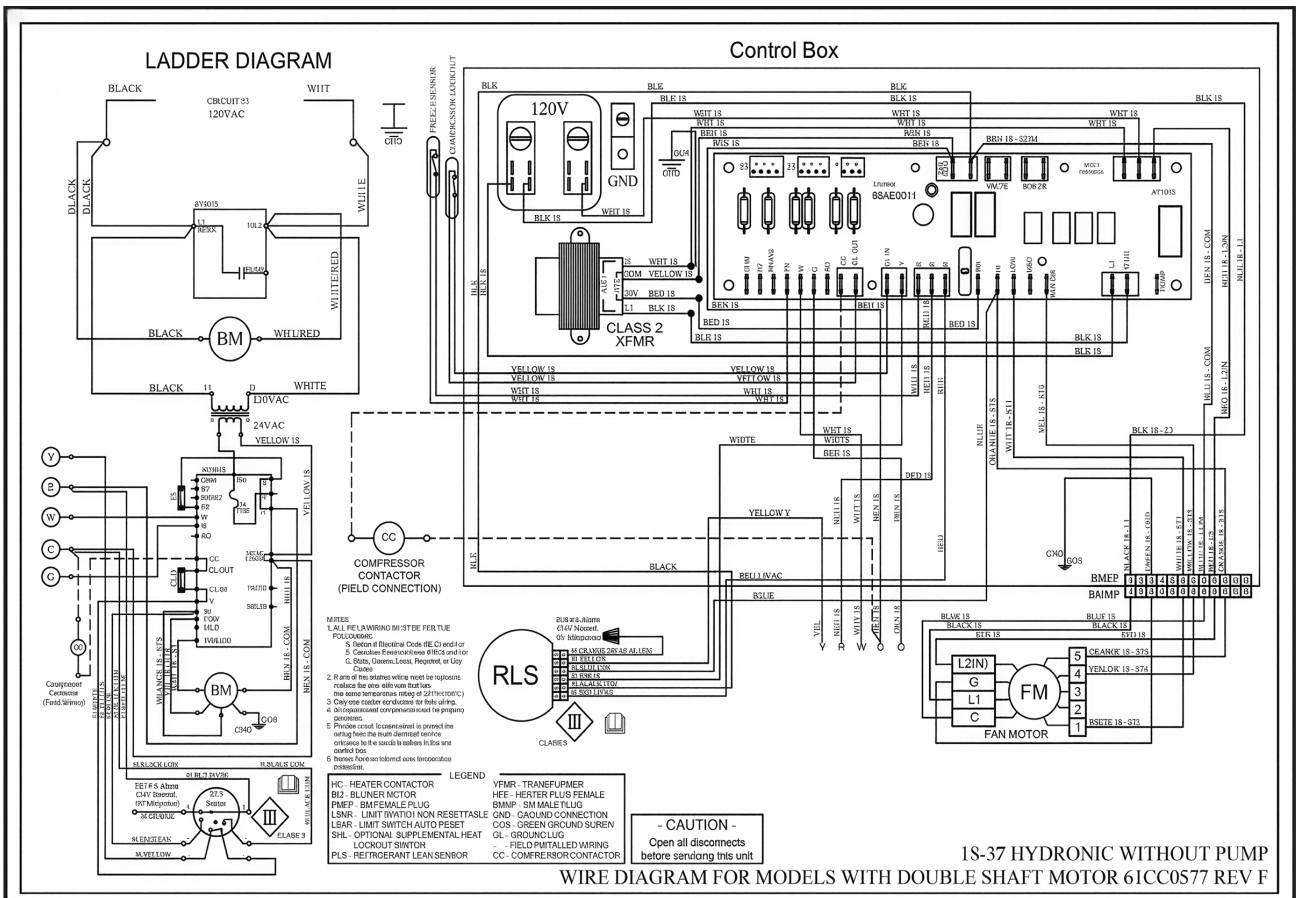

**Figure 29: CEHX/SEHX/CCWE/SCWE; 18 - 37 BTU/H; Hydronic Heat; Constant Torque Blower Motor; With Freeze Switch; No Water Pump**

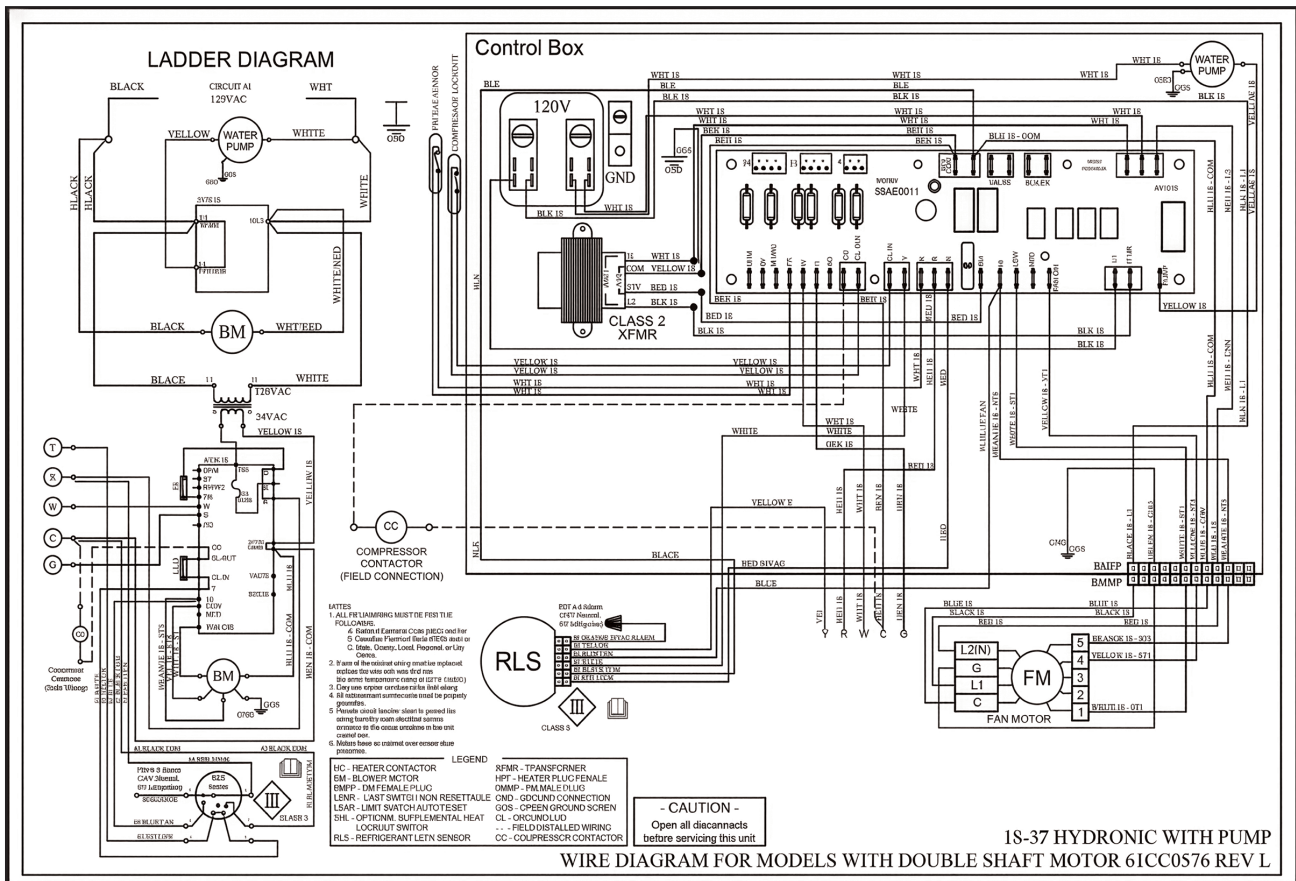

**Figure 30: CEHX/SEHX/CCWE/SCWE; 18 - 37 BTU/H; Hydronic Heat; Constant Torque Blower Motor; With Freeze Switch and Water Pump**

**SECTION 15: MINIMUM CONDITIONED SPACE AND AIR FLOW TABLES**

Total System Refrigerant Charge (kg)	Total System Refrigerant Charge (oz)	Total System Refrigerant Charge (lb)	Min. Area of Conditioned Space (m <sup>2</sup> )	Min. Area of Conditioned Space (ft <sup>2</sup> )	Min. Air-Flow (meter <sup>3</sup> /hr)	Min. Air-Flow (liter/s)	Min. Air-Flow (CFM)
1.776 kg or less	62.6 oz or less	3.91 lb or less	No Minimum	No Minimum	No Minimum	No Minimum	No Minimum
1.78	63	3.92	5.47	59	180	50	106
1.92	68	4.22	5.88	63	194	54	114
2.05	72	4.52	6.30	68	208	58	122
2.19	77	4.82	6.72	72	222	62	131
2.32	82	5.12	7.14	77	236	65	139
2.46	87	5.42	7.56	81	249	69	147
2.60	92	5.72	7.97	86	263	73	155
2.73	96	6.02	8.39	90	277	77	163
2.87	101	6.32	8.81	95	291	81	171
3.00	106	6.62	9.23	99	305	85	179
3.14	111	6.92	9.65	104	318	88	187
3.28	116	7.22	10.06	108	332	92	195
3.41	120	7.52	10.48	113	346	96	204
3.55	125	7.82	10.90	117	360	100	212
3.69	130	8.12	11.32	122	374	104	220
3.82	135	8.42	11.74	126	387	108	228
3.96	140	8.73	12.15	131	401	111	236
4.09	144	9.03	12.57	135	415	115	244
4.23	149	9.33	12.99	140	429	119	252
4.37	154	9.63	13.41	144	442	123	260
4.50	159	9.93	13.83	149	456	127	269
4.64	164	10.23	14.24	153	470	131	277
4.77	168	10.53	14.66	158	484	134	285
4.91	173	10.83	15.08	162	498	138	293
5.05	178	11.13	15.50	167	511	142	301
5.18	183	11.43	15.92	171	525	146	309
5.32	188	11.73	16.33	176	539	150	317
5.45	192	12.03	16.75	180	553	154	325
5.59	197	12.33	17.17	185	567	157	333
5.73	202	12.63	17.59	189	580	161	342
5.86	207	12.93	18.01	194	594	165	350
6.00	212	13.23	18.42	198	608	169	358
6.14	216	13.53	18.84	203	622	173	366
6.27	221	13.83	19.26	207	636	177	374
6.41	226	14.13	19.68	212	649	180	382
6.54	231	14.43	20.10	216	663	184	390
6.68	236	14.73	20.51	221	677	188	398
6.82	240	15.03	20.93	225	691	192	407
6.95	245	15.33	21.35	230	705	196	415
7.09	250	15.63	21.77	234	718	200	423
7.22	255	15.93	22.19	239	732	203	431
7.36	260	16.23	22.60	243	746	207	439
7.50	264	16.53	23.02	248	760	211	447
7.63	269	16.83	23.44	252	774	215	455
7.77	274	17.13	23.86	257	787	219	463
7.90	279	17.43	24.28	261	801	223	471
8.04	284	17.73	24.69	266	815	226	480
8.18	288	18.03	25.11	270	829	230	488
8.31	293	18.33	25.53	275	843	234	496
8.45	298	18.63	25.95	279	856	238	504
8.59	303	18.93	26.37	284	870	242	512
8.72	308	19.23	26.78	288	884	246	520
8.86	312	19.53	27.20	293	898	249	528
8.99	317	19.83	27.62	297	911	253	536

**TABLE 29: MINIMUM CONDITIONED SPACE AREA & AIR-FLOW FOR R-454B REFRIGERANT INSTALLATIONS**

**NOTES: 1. Applies to fixed ducted systems with continuous air-flow or refrigerant detection systems only.  
 2. Based on LFL of 0.296 kg/m<sup>3</sup>**

Total System Refrigerant Charge (kg)	Total System Refrigerant Charge (oz)	Total System Refrigerant Charge (lb)	Min. Area of Conditioned Space (m <sup>2</sup> )	Min. Area of Conditioned Space (ft <sup>2</sup> )	Min. Air-Flow (meter <sup>3</sup> /hr)	Min. Air-Flow (liter/s)	Min. Air-Flow (CFM)
1.836 kg or less	64.6 oz or less	4.04 lb or less	No Minimum	No Minimum	No Minimum	No Minimum	No Minimum
1.84	65	4.06	5.47	59	180	50	106
1.98	70	4.36	5.87	63	194	54	114
2.11	75	4.66	6.28	68	207	58	122
2.25	79	4.96	6.68	72	220	61	130
2.38	84	5.26	7.08	76	234	65	138
2.52	89	5.56	7.49	81	247	69	145
2.66	94	5.86	7.89	85	260	72	153
2.79	99	6.16	8.30	89	274	76	161
2.93	103	6.46	8.70	94	287	80	169
3.06	108	6.76	9.11	98	300	83	177
3.20	113	7.06	9.51	102	314	87	185
3.34	118	7.36	9.91	107	327	91	193
3.47	123	7.66	10.32	111	341	95	200
3.61	127	7.96	10.72	115	354	98	208
3.75	132	8.26	11.13	120	367	102	216
3.88	137	8.56	11.53	124	381	106	224
4.02	142	8.86	11.94	128	394	109	232
4.15	147	9.16	12.34	133	407	113	240
4.29	151	9.46	12.74	137	421	117	248
4.43	156	9.76	13.15	142	434	121	255
4.56	161	10.06	13.55	146	447	124	263
4.70	166	10.36	13.96	150	461	128	271
4.83	171	10.66	14.36	155	474	132	279
4.97	175	10.96	14.77	159	487	135	287
5.11	180	11.26	15.17	163	501	139	295
5.24	185	11.56	15.57	168	514	143	302
5.38	190	11.86	15.98	172	527	146	310
5.51	195	12.16	16.38	176	541	150	318
5.65	199	12.46	16.79	181	554	154	326
5.79	204	12.76	17.19	185	567	158	334
5.92	209	13.06	17.60	189	581	161	342
6.06	214	13.36	18.00	194	594	165	350
6.20	219	13.66	18.41	198	607	169	357
6.33	223	13.96	18.81	202	621	172	365
6.47	228	14.26	19.21	207	634	176	373
6.60	233	14.56	19.62	211	647	180	381
6.74	238	14.86	20.02	216	661	184	389
6.88	243	15.16	20.43	220	674	187	397
7.01	247	15.46	20.83	224	687	191	405
7.15	252	15.76	21.24	229	701	195	412
7.28	257	16.06	21.64	233	714	198	420
7.42	262	16.36	22.04	237	727	202	428
7.56	267	16.66	22.45	242	741	206	436
7.69	271	16.96	22.85	246	754	209	444
7.83	276	17.26	23.26	250	767	213	452
7.96	281	17.56	23.66	255	781	217	460
8.10	286	17.86	24.07	259	794	221	467
8.24	291	18.16	24.47	263	808	224	475
8.37	295	18.46	24.87	268	821	228	483
8.51	300	18.76	25.28	272	834	232	491
8.65	305	19.06	25.68	276	848	235	499
8.78	310	19.36	26.09	281	861	239	507
8.92	315	19.66	26.49	285	874	243	514
9.05	319	19.96	26.90	290	888	247	522

**TABLE 30: MINIMUM CONDITIONED SPACE AREA & AIR-FLOW FOR R-32 REFRIGERANT**

**NOTES: 1. Applies to fixed ducted systems with continuous air-flow or refrigerant detection systems  
2. Based on LFL of 0.306 kg/m<sup>3</sup>**