

**MULTI-POSITION MODULAR, DX, & CHILLED WATER COOLING  
WITH ELECTRIC OR HOT WATER HEATING  
MODELS: MS & MM SERIES**

**For Installation In:**  
**1. Modular Homes & Buildings**  
**2. Residential Homes**

## LIST OF SECTIONS - USERS INFORMATION MANUAL

1 – General.....	1	4 – Startup and Shutdown Instructions.....	5
2 – Safety.....	2	5 – Owner Maintenance.....	5
3 – Owner’s Information and Seasonal Information.....	3		

## LIST OF SECTIONS -SERVICE AND MAINTENANCE MANUAL

1 – Safety.....	7	7 – Refrigerant Leak Detection System & Sensor Replacement.....	22
2 – Air Handler Maintenance.....	11	8 – Blower Performance.....	24
3 – Air Handler Controls.....	12	9 – ECM Motor Climate Profiles.....	29
4 – Sequence of Operation.....	15	10 – Accessories and Replacement Parts.....	30
5 – Troubleshooting.....	17	11 – Decommissioning & Disposal of the Air Handler.....	37
6 – Special Piping Instructions For A2L Class Flammable Refrigerants.....	21		

## LIST OF FIGURES

1 – Air Handler Examination Check Points.....	4	13 – Component Locations – Hydronic Heat Models.....	16
2 – Front Access Panel Circuit Breaker Locations.....	4	14 – Hydronic Heat Control Box - No Pump.....	16
3 – Homeowner / Users Cleaning Points.....	5	15 – ECM Motor Control Pin Positions.....	17
4 – Accessory Air Filter Base.....	6	16 – Constant Torque Motor Terminals.....	18
5 – Accessory Filter Base – Adjustment for 1” and 2” Filters.....	6	17 – Electric Heater Contactor.....	19
6 – Return Air Filter Grille.....	6	18 – Blower Mounting Plate and Screw Locations.....	20
7 – Blower Assembly and Mounting Screw Locations.....	11	19 – ECM Control Board Layout.....	29
8 – Component Locations – Electric Heat Models.....	12	20 – North America Climate Map.....	29
9 – Electric Heat Control Box.....	13	21 – ECM Climate Profiles for Cooling.....	29
10 – ECM Control Board.....	13	22 – ECM Climate Profiles for Heating.....	29
11 – Refrigerant Leak Mitigation System.....	13	23 – M*V* Electric Heat Replacement Parts Schematic.....	31
12 – Hydronic Control Board for C.T. & ECM Motors.....	13	24 – M*V* Hydronic Heat Replacement Parts Schematic.....	34

## LIST OF TABLES

1 – ECM Motor Control Connector Terminal Descriptions.....	17	11 – M*VT Blower Performance – 2-Stage Cooling/HP - Hydronic Heat.....	27
2 – C.T. Motor Terminal Descriptions – 1 Stage Cooling/HP - Elect Heat...	18	12 – M*VE Blower Performance – ECM Motors – Electric & Hydronic Heat...	28
3 – C.T. Mtr Terminal Descriptions - 2 Stage Cooling/HP - Elect Heat.....	18	13 – Accessory List.....	30
4 – 208 / 240 VAC Blower Motor Full Load Amperage (FLA) Chart.....	18	14 – M*V* 18-24 Electric Heat Replacement Parts List.....	31
5 – C.T. Motor Terminal Descriptions – 1 Stage Cooling/HP - Hyd Heat.....	20	15 – M*V* 25-36 Electric Heat Replacement Parts List.....	32
6 – C.T. Mtr Terminal Descriptions - 2 Stage Cooling/HP - Hyd Heat.....	20	16 – M*V* 37-72 Electric Heat Replacement Parts List.....	33
7 – 115 VAC Blower Motor Full Load Amperage (FLA) Chart.....	20	17 – M*V* 18-24 Hydronic Heat Replacement Parts List.....	34
8 – M*VT Blower Performance – 1-Stage Cooling/HP - Electric Heat.....	24	18 – M*V* 25, 30, 36 Hydronic Heat Replacement Parts List.....	35
9 – M*VT Blower Performance – 1- Stage Cooling/HP - Hydronic Heat...	25	19 – M*V* 37-72 Hydronic Heat Replacement Parts List.....	36
10 – M*VT Blower Performance – 2-Stage Cooling/HP - Electric Heat.....	26		

## CONTACT INFORMATION

Manufactured and Distributed by:

Mortex Products, Inc.  
501 Terminal Rd  
Fort Worth, TX 76106

www.mortex.com

## SECTION 1: GENERAL

The following list includes important facts and information regarding the air handler models covered in this manual.

1. Electric heat air handlers are rated for 208 - 240 VAC at 60 Hz and hydronic air handlers are rated for 115 VAC at 60 Hz.
2. Air handler models are available in a small, medium, or large cabinet.
3. All air handlers are designed for A/C or heat pump operation.
4. Air handlers are designed for upflow, downflow and horizontal applications.
5. The air handler must not be operated without the access panels installed.
6. This air handler and its components are listed by ETL in the United States and Canada.

**USERS MUST READ ALL INSTRUCTIONS IN THIS MANUAL.**  
**THIS MANUAL MUST BE SAVED FOR FUTURE REFERENCE.**



This is a safety alert symbol. When this symbol is seen on labels or in manuals, be alert to the potential for personal injury. Understand and pay particular attention to the signal words **DANGER**, **WARNING**, or **CAUTION**.

**DANGER:** Indicates an imminently hazardous situation, which if not avoided, **will result in death or serious injury**.

**WARNING:** Indicates a potentially hazardous situation, which if not avoided, **could result in death or serious injury**.

**CAUTION:** Indicates a potentially hazardous situation, which if not avoided, **may result in minor or moderate injury**. It is also used to alert against unsafe practices and hazards involving property damage.

## WARNING

### FIRE OR ELECTRICAL HAZARD

Failure to follow the safety warnings exactly could result in serious injury, death, or property damage.

A fire or electrical hazard may result causing property damage, personal injury or loss of life.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this air handler or any other appliance.

## WARNING

Any adjustment, service or maintenance by the homeowner and/or user may create a condition where the operation of the product could cause personal injury or property damage.

Only qualified service personnel, a contractor, or an installer may refer to the service and maintenance section of this manual for assistance or for additional service or repair information on this air handler.

## CAUTION

This product requires periodic routine maintenance and cleaning of the exterior surfaces by the homeowner or user to remove dust and debris. Any additional service must be performed by qualified personnel. This air handler must be serviced and maintained as specified in these instructions and/or to any applicable local, state, and national codes including, but not limited to building, electrical, and mechanical codes.

## WARNING

Minimum Allowable Operating Temperatures – Water/Brine:

Water = 36°F (2.22°C)

Brine Solution = 3.2°F (-16°C)

Maximum Allowable Operating Temperatures – Water/Brine:

Water = 180°F (82.22°C)

Brine Solution = 40°F (4.44°C)

## WARNING

### RISK OF FIRE

This unit is equipped with a refrigerant leak detection system for safety and with electrically powered safety measures. To be effective, the unit must be electrically powered at all times after installation, other than when servicing.

## DANGER

Do not use this air handler if any part has been under water. A flood damaged air handler is extremely dangerous. Attempts to use the air handler can result in a fire. A qualified contractor, installer, or service agency must be contacted to inspect the air handler for any water damage and replace all components, control system parts, or electrical parts that have been damaged. If enough damage is present, the air handler may need to be replaced.

### SAFETY REQUIREMENTS

1. This air handler must be kept clear and free of combustible materials, gasoline and other flammable vapors and liquids.
2. Never store flammable materials of any kind near this air handler. Gasoline, solvents and other volatile liquids should be stored only in approved containers outside the home.
3. These materials vaporize easily and are extremely dangerous. Insulating materials may be combustible. The air handler must be kept free and clear of insulating materials. The air handler area must be examined when installed in an insulated space or when insulation is added to be sure that the insulation material has been kept away from the air handler.
4. Follow the instructions exactly as shown in **Section 4: Startup and Shutdown Instructions** in this manual to properly start up or shut down this air handler.
5. If overheating occurs, turn the power off to the air handler and contact a qualified contractor, installer, or service agency.
6. Never store cleaning materials such as bleaches, detergents, powder cleaners, etc. near the air handler. These chemicals can cause corrosion of the air handler sheet metal and the electric heaters, the blower and the electrical controls.
7. Never use the area around the air handler as a storage area for items which could block or obstruct air-flow the space around the air handler. This flow of air is required for safe and proper operation. Never block or obstruct air openings used for ventilation and cooling of the air handler electrical components.
8. Refer to the air handler rating plate for requirements for safe operation.
9. Provide clearance for service access to the control box, electric heat elements or hydronic coil, and blower.
10. Failure to carefully read and follow all instructions in this manual can result in malfunction of the air handler, death, personal injury, and/or property damage.
11. If the air handler is installed in a residential garage, it must be installed so that the electric heaters are located no less than 18 inches above the floor and the air handler must be located or protected to avoid physical damage by vehicles.
12. These instructions cover minimum requirements and conform to existing national standards and safety codes.

13. In some cases, these instructions exceed certain local codes and ordinances, especially those who have not kept up with changing modular home and residential home construction practices. These instructions are to be followed and are the minimum requirement to perform service or repairs on this air handler
14. Installation, servicing and maintenance must only be performed by qualified service personnel that are licensed by the state to install, service, and repair HVAC equipment and those who have successfully completed a course in handling, installing, commissioning, maintenance, servicing, repairing, decommissioning, and disposal of equipment using a flammable refrigerant offered by an accredited national training organization or the manufacturer of the equipment.
15. This air handler is for use at elevations of 10,000 ft (3,048m) or less.
16. This air handler is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this air handler by a person responsible for their safety. Children must not be allowed to play with this air handler.



## WARNING

Do not use Methanol water or Ethanol in any systems operating above 40°F as the flash point specified for these chemicals is only 54°F.



## WARNING

### FIRE OR ELECTRICAL HAZARD

Servicing heating/cooling equipment can be hazardous due to electrical components.

Only trained and qualified personnel can service or repair heating/cooling equipment. The homeowner must never try to perform service, repair or maintenance on this air handler.

Untrained service personnel can perform only basic maintenance functions such as cleaning of exterior surfaces and replacing the air filters only!

Observe all precautions in the manuals and on the attached labels when working on this air handler.

## SECTION 3: OWNERS INFORMATION AND SEASONAL INFORMATION

### How The Air Handler Works – Heating Cycle Electric Heat Models:

When the thermostat calls for heat on the electric heat models, the heater contactor is energized, sending 208/240 VAC through to the electric heaters causing them to heat up. The indoor fan motor is then energized on the selected heating speed tap after an “ON” time delay which causes the circulating blower to draw air from the living space, passes it across the heater coils, and circulates the warmed air through the duct system to the living space. When the thermostat is satisfied, the electric heaters are de-energized and

the blower is de-energized after an “OFF” time delay. The heating cycle has ended and the air handler is now in the stand-by mode awaiting the next call for heat.

### Hydronic Heat Models:

When the thermostat calls for heat on the hydronic heat models, a pump relay will be energized causing a flow of hot water through the hot water coil which heats the coil. The indoor fan motor is energized on the heating speed tap after an “ON” time delay which causes the circulating blower to draw air from the living space, passes it across the hot water coil, and circulates the warmed air through the duct system to the living space. When the thermostat is satisfied, the circulating pump is de-energized and the blower is de-energized after an “OFF” time delay. The heating cycle has ended and the air handler is now in the stand-by mode awaiting the next call for heat.

### How The Air Handler Works – Cooling Cycle

When the thermostat calls for cooling operation, 24 VAC is sent to the compressor contactor coil causing it to close which energizes the compressor and outdoor fan motor. The indoor fan motor is also energized on the selected cooling speed tap which causes the circulating blower to draw air from the living space, passes it across the cooling coil in the air handler, and circulates the cooled air through the duct system to the living space. When the thermostat is satisfied, the compressor contactor is de-energized which turns off the compressor and outdoor fan motor. The blower is de-energized after an “OFF” time delay. The cooling cycle has ended and the air handler is now in the stand-by mode awaiting the next call for cooling.


### How The Air Handler Works – Heat Pump Heating Cycle

When the thermostat calls for heat pump heating operation, 24 VAC is sent to the compressor contactor causing it to close which energizes the compressor and outdoor fan motor. If not already in the heating position from a previous heating cycle, the reversing valve in the outdoor unit switches position causing the flow of the refrigerant to reverse and heat the coil inside the air handler. The indoor fan motor is energized on the selected heat pump heating speed tap which causes the circulating blower to draw air from the living space, passes it across the coil in the air handler, and circulates the warmed air through the duct system to the living space. When the thermostat is satisfied, the compressor contactor is de-energized which turns off the compressor and outdoor fan motor. The blower is also de-energized after an “OFF” time delay. The heat pump heating cycle has ended and the air handler is now in the stand-by mode awaiting the next call for heat pump heating.

### Examination of the Air Handler

The homeowner should perform a visual examine the air handler every month for any defects or problems. The items to be inspected are:

1. The physical support of the air handler is sound without sagging cracks, gaps, etc. around the base to provide a seal between the support and the base.
2. The air handler casing for any signs of deterioration from rust or corrosion.
3. The return and supply duct connections are physically sound and are sealed to the air handler casing.
4. The air handler must be serviced by qualified personnel annually, preferably at the start of each heating season.

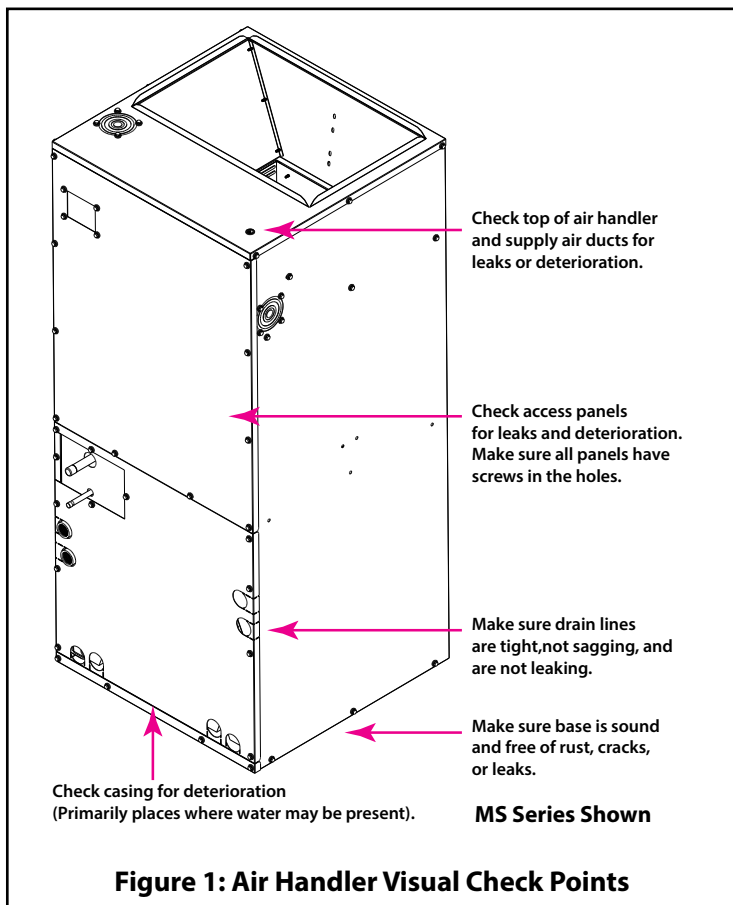

**Figure 1: Air Handler Visual Check Points**

### The Service Technician

If the air handler gives any indication of improper operation, the homeowner or user should call a qualified service technician. The service technician is qualified to perform the normal routine care of the air handler and can detect potential problems and make corrections before trouble develops. Preventative maintenance of this type will allow the air handler to operate with minimal concerns to the homeowner and will add years of comfort. The homeowner or user must not attempt to service or repair this air handler except for the cleaning and filter maintenance tasks presented in **"Section 5: Owner Maintenance"** of this **User Information Manual**.

### Warranty and Responsibilities

It is the sole responsibility of the homeowner to make certain the air handler has been properly installed and adjusted to operate properly.

The manufacturer warrants the air handler to be free from defects in material or workmanship for a stated time in the warranty agreement. The manufacturer will not be responsible for any repair costs to correct problems due to improper setup, improper installation, improper adjustments, installing parts or components on the air handler that are not listed for use with this air handler, improper operating conditions, or repairs performed by the air handler user or homeowner.

Specific examples of service calls which will be excluded from warranty reimbursement are:

1. Correcting faulty duct system in the home. This can be due to not enough ducts or ducts that are too small to provide proper air-flow through the air handler.
2. Correcting electrical wiring problems in the supply wiring to the air handler.
3. Resetting circuit breakers or on/off switches used for servicing.
4. Problems caused by installation and operation of any outdoor unit or air quality devices which are not approved for use with this air handler.

5. Improper thermostat settings or calibrating the thermostat.
6. Problems caused by construction debris which has fallen into the air handler.
7. Replacement of fuses.
8. Insufficient air-flow problems caused by dirty air filters.
9. Air handler malfunction or component premature failure caused by restrictions in the return or supply ducts causing low air-flow.

The homeowner should establish a clear understanding of these responsibilities with the installer and /or service company so there will be no misunderstanding of what will be covered under warranty later.

### While Homeowner or User is Away


The air handler is equipped with safety shutoff devices which are designed to prevent it from overheating in case of a malfunction. For this reason, it is never practical to assume the air handler will operate unattended for a long period of time. Examples of a malfunction that can cause significant damage to the home would be:

1. The air handler blower motor fails and the heater elements cycle on the safety shutoff devices while the temperature inside the home continues to drop. Water pipes will freeze and could burst once their temperature falls below 32°F resulting in significant damage to the structure.
2. The air handler blower motor or outdoor unit fails in the summer resulting in the temperature inside the home to rise above the setpoint. If the temperature of the home rises above the rated temperature of the air handler, failure can occur.
3. If the homeowner to be away from home for a long period of time, they should have someone check on the home every day, especially when the outside temperatures will be below 35°F or above 75°F to ensure the air handler is operating properly. This will help prevent the water pipes from freezing and the air handler from failing.

### The Air Handler Fails to Operate Properly

If any abnormalities are observed while the air handler is operating normally, perform the following checks:

1. Check the setting on the thermostat to make sure the thermostat is set above the room temperature.
2. Check to see if the electrical power is turned on at the circuit breakers at the main service circuit breaker box or check any on/off switches that may be used for service disconnect switches, especially ON/OFF switches used for servicing the air handler. These are often mistaken for light switches and are turned off.
3. Check any inline fuses that may have been installed on the air handler to determine if one has blown.
4. Make sure the air filters are clean, return grilles clean, are not obstructed, and supply air registers are open.

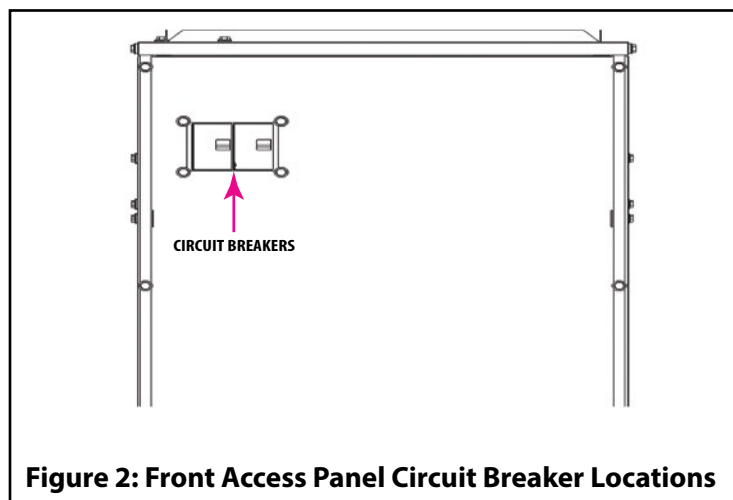

**Figure 2: Front Access Panel Circuit Breaker Locations**

# ! WARNING

## AIR HANDLERS WITH ELECTRIC HEATERS

Should overheating occur, turn the circuit breakers on the control box and the main electrical service entrance (Home Circuit Breaker Box) to the off position. Call qualified service personnel to troubleshoot and repair the air handler. Do not allow the air handler to continue to cycle on the over temperature limit controls.

### When to Call for Service Assistance

Very often time can be saved if the homeowner provides the service agency the information about the air handler ahead of time. This will enable the service agency to determine the specific components used and possibly identify the problem, allowing them to arrive with the correct parts to fix the problem. Write down the model number, serial number and be prepared to describe what the air handler is or is not doing and what has already been checked prior to calling the service agency.

### SERVICE AGENCY INFORMATION

Fill in Below

MODEL NUMBER: \_\_\_\_\_

SERIAL NUMBER: \_\_\_\_\_

SERVICE COMPANY: \_\_\_\_\_

ADDRESS: \_\_\_\_\_

TELEPHONE (DAYTIME): \_\_\_\_\_

TELEPHONE (EMERGENCY) \_\_\_\_\_

NOTES: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

## SECTION 4: STARTUP AND SHUTDOWN INSTRUCTIONS

# ! WARNING

Failure to follow the instructions below exactly may result in a fire causing property damage, personal injury, and/or loss of life.

Read the instructions below before trying to start the air handler.

- BEFORE OPERATING:** Check around perimeter of the air handler to make sure there are no flammable materials in the area. If vapors of any kind are smelled, do not turn on the power to the air handler until vapors have been ventilated and removed from the area of the air handler.
- VISUALLY CHECK THE AIR HANDLER:** Visually check the air handler for loose screws and/or panels that may be missing or have fallen off.
- CHECK DUCT CONNECTIONS:** Visually check the connections of the ducts to the air handler to make sure there are no gaps or holes and ducts are securely fastened to the air handler.

### Turning On / Starting the Air Handler

- STOP!** Read the safety information above before proceeding.
- Set the thermostat mode to the "OFF" setting.
- Turn the circuit breakers for the air handler in the main electrical panel to the "ON" position.
- Turn the circuit breaker(s) located on the front panel of an electric heat air handler to "ON" position (See Figure 2).
- Turn the service disconnect switch near the air handler (if one is present) to the "ON" position.
- Set the thermostat to the desired mode and temperature.

### Shutting Down / Turning Off the Air Handler

- Set the thermostat mode to the "OFF" mode.
- If the air handler is operating at the time the thermostat is turned to the OFF position, wait until the air handler has completed its cycle and has shut down before turning off the power to the air handler.
- Turn the circuit breaker(s) for the air handler in the main electrical panel to the "OFF" position.
- Turn the circuit breakers on the front of an electric heat air handler to the "OFF" position (See Figure 2).
- Turn the service disconnect switch near the air handler (if one is present) to the "OFF" position.

## SECTION 5: OWNER MAINTENANCE

All air handlers need annual maintenance in order to operate properly. The annual service must be performed by qualified service personnel. The homeowner is expected to perform general cleaning of the exterior surfaces and replacement of the air filters. Air filters must be checked every month and replaced as needed. Figures 4 and 6 indicate the location of the air filters in either an accessory air filter base or return air filter grille.

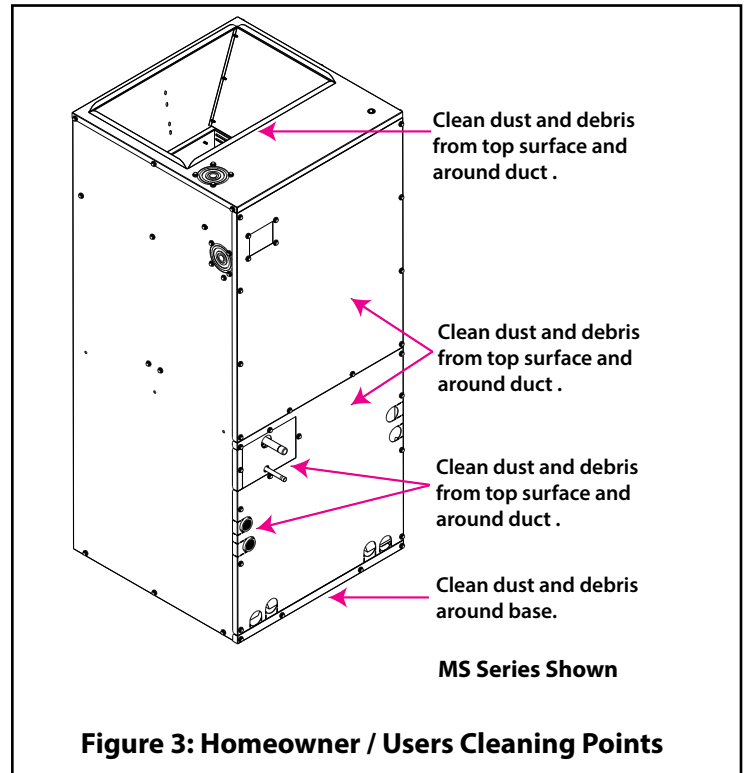


Figure 3: Homeowner / Users Cleaning Points

### Air Filter Replacement – Accessory Filter Base Kit

Follow these easy steps to replace the air filters.

1. Remove the white handled thumb screws on the front of the accessory filter box kit located just below the air handler.
2. Let the top of the hinged access panel rotate outward.
3. Remove the air filter. The air filter is a disposable filter. Do not attempt to clean the filter and reuse it.
4. Check the size of the air filter that was removed to make sure it is replaced with a filter that is the same size.

### Air Filter Replacement – Accessory Filter Base Kit

Follow these easy steps to replace the air filters.

1. Remove the white handled thumb screws on the front of the accessory filter box kit located just below the air handler.
2. Let the top of the hinged access panel rotate outward.
3. Remove the air filter. The air filter is a disposable filter. Do not attempt to clean the filter and reuse it.
4. Check the size of the air filter that was removed to make sure it is replaced with a filter that is the same size. Clean any excess dirt or debris around the front area where the air filter is located. Be careful not to use any small vacuum cleaner parts or any small brushes to clean inside the filter box, around the filter track. These parts or brushes can fall off or drop into the return duct causing a restriction of the return air-flow.
5. Slide the air filter into the filter rack, push the hinged access panel closed and tighten the thumb screw.

**NOTE:** Make sure the flow arrows on the air filter are pointing towards the coil.

### Downflow / Horizontal Air Filter Replacement

Air handlers that are installed in a downflow or horizontal position generally have filters in one or more filter grilles located in the ceiling and/or wall. Use the following procedure to replace the air filter in a filter grille.

1. Remove the thumb screw(s) on the filter grille or pull down on the latches on each side of the grille to release the hinged grille from the frame (See Figure 6). **Caution:** If the grille is mounted in the ceiling, do not stand under the hinged grille when releasing the thumb screws(s) or latches and support the grille until it has been lowered.
2. Carefully allow the hinged grille to rotate downward (ceiling mount) or outward (wall mount) and let it hang open.
3. Remove the air filter. If the air filter is a disposable filter. **Do not attempt to clean the filter and reuse it.**
4. Check the size of the air filter that was removed to make sure it is replaced with the same size filter.
5. Clean any dust or debris from both sides for the louvers and around the area where the filter is placed before the new air filter is installed.
6. Place the new air filter into the grille assembly and push the hinged grille closed. Tighten the thumb screw(s) or push the latches in on each side of the hinged grille until the grille is securely fastened to the frame.

**NOTE:** Make sure the flow arrows on the air filter are pointing towards the air handler.

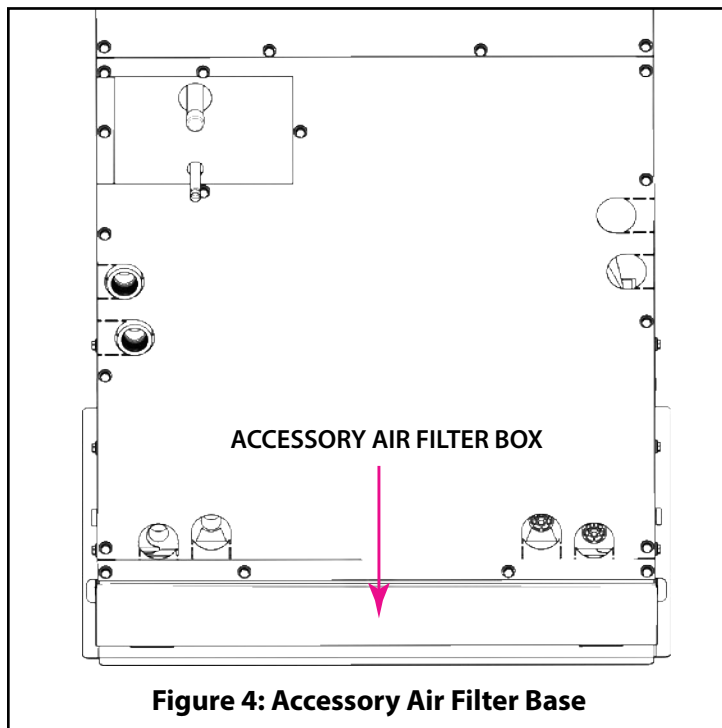


Figure 4: Accessory Air Filter Base

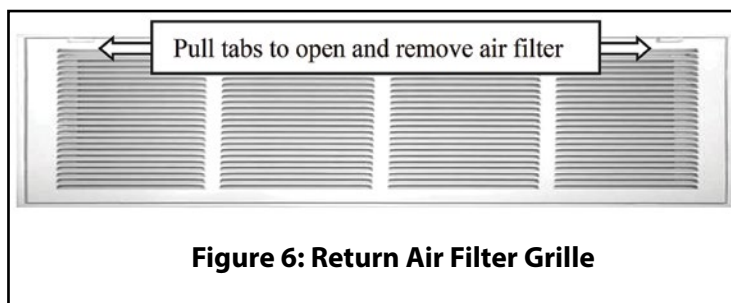
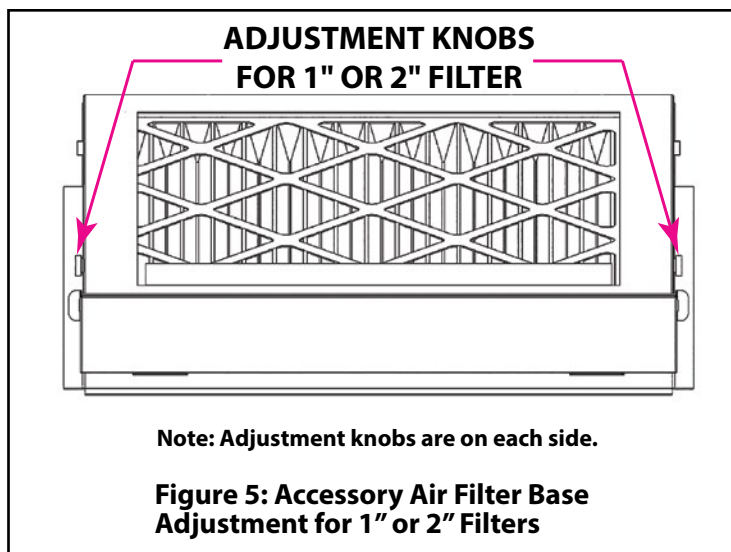


Figure 6: Return Air Filter Grille

# SERVICE AND MAINTENANCE MANUAL

## SECTION 1: SAFETY

### THE HOMEOWNERS AND AIR HANDLER USERS MUST STOP HERE!

This section has been designed to assist a qualified service technician in performing service and maintenance on this air handler.

The homeowner and/or air handler user must never attempt to perform any service or maintenance on the air handler, especially when it involves the removal or adjustment of any parts and/or components.

## DANGER

The manufacturer or distributor will not be responsible for any repairs due to removal of parts or improper parts changes, improper maintenance, improper adjustments or improper modifications to this air handler that were performed by the homeowner and/or the air handler user. The manufacturer will not be responsible if the homeowner and/or air handler user use this section of the instructions to perform maintenance or repairs to the air handler. This practice is very dangerous and may result in a fire causing property damage, personal injury, loss of life and/or will void the air handler warranty.



This is a safety alert symbol. When this symbol is seen on labels or in manuals, be alert to the potential for personal injury. Understand and pay particular attention to the signal words **DANGER**, **WARNING**, or **CAUTION**.

**DANGER:** Indicates an imminently hazardous situation, which if not avoided, **will result in death or serious injury**.

**WARNING:** Indicates a potentially hazardous situation, which if not avoided, **could result in death or serious injury**.

**CAUTION:** Indicates a potentially hazardous situation, which if not avoided, **may result in minor or moderate injury**. It is also used to alert against unsafe practices and hazards involving property damage.

### SAFETY REQUIREMENTS

1. Air-handlers with electric heaters may have a dual electrical supply circuit. Check each electrical circuit with a meter to be sure the power has been disconnected before servicing.
2. Insulating materials may be combustible. The air handler must be kept free and clear of insulating materials.
3. Follow the instructions exactly as shown in the **Startup and Shutdown Section** in the **Users Information Manual** section of this manual to properly start up or shut down this air handler.
4. Make sure all moving parts have come to a complete stop before attempting to perform any work once the air handler access panels have been removed. Moving parts can cause serious injury if clothing or body parts get caught in the moving part.

## WARNING

Improper adjustment, service or maintenance may create a condition where the operation of the product could cause personal injury or property damage.

Refer to this manual for assistance or for additional information consult the Technical Support Group.

## CAUTION

This product must be serviced and maintained as specified in these instructions and/or to any applicable local, state, and national codes including, but not limited to building, electrical, and mechanical codes.

## WARNING

### FIRE OR ELECTRICAL HAZARD

Failure to follow the safety warnings exactly could result in serious injury, death, or property damage.

A fire or electrical hazard may result causing property damage, personal injury or loss of life.

## WARNING

### ELECTRICAL SHOCK, FIRE HAZARD

Failure to follow the safety warnings exactly or improper servicing could result in dangerous operation, serious injury, property damage, and/or death.

- Before servicing, disconnect all electrical power to the air handler. Make sure to disconnect both power supplies if the air handler has a dual power supply circuit. Dual circuits may be used on the 15kW and 20kW models.
- When servicing controls, label all wires prior to disconnecting to aid in proper reconnection of wires.
- Verify proper operation after servicing by turning the thermostat above the room temperature for a brief period of time to ensure proper air handler operation.

## WARNING

### FIRE HAZARD

#### NEVER PLACE A JUMPER BETWEEN "R" & "W"

Placing jumper wire between the RED and WHITE thermostat wires at the air handler to override the thermostat and energize the heater elements is an extremely dangerous practice that can result in damage to the thermostat, dangerous operation, serious injury, property damage and/or death.

5. Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.
6. Initial safety checks shall include:
  - that capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
  - that no live electrical components and wiring are exposed while charging, recovering or purging the system;
  - that there is continuity of earth bonding.
7. Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.
8. Installation, servicing and maintenance must only be performed by qualified service personnel that are licensed by the state to install, commission, service, repair, decommission, and dispose of HVAC equipment and those who have successfully completed a course in handling, installing, maintenance, servicing, and repairing equipment using a flammable refrigerant offered by an accredited national training organization or the manufacturer of the equipment.
9. Sealed electrical components must be replaced when they fail.
10. Intrinsically safe components must be replaced when they fail.

### **Maximum Operating Temperature for Heat Pump Applications**

For heat pump applications, the maximum outdoor temperature recommended by the manufacturer while the system is operating in the heating mode is 70°F/23.9°C.

### **Proper Safe Working Procedures for Equipment Using Flammable Refrigerants**

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized. For repair to the refrigerating system, the following steps must be completed prior to conducting work on the system.

1. Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapour being present while the work is being performed.
2. All maintenance staff and others working in the local area shall be instructed on the nature of work being performed. Work in confined spaces shall be avoided.
3. The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.
4. If any hot work is to be conducted on the refrigerating equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO<sub>2</sub> fire extinguisher adjacent to the charging area.
5. No person performing work in relation to a refrigerating system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette

smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

6. Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is performed. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.
7. Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt, consult the manufacturer's technical department for assistance.
8. The following checks shall be applied to installations using flammable refrigerants:
  - the actual refrigerant charge is in accordance with the room size within which the refrigerant containing parts are installed;
  - marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
  - refrigerating pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

### **9. Detection of Flammable Refrigerants**

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

The following leak detection methods are deemed acceptable for all refrigerant systems.

Electronic leak detectors may be used to detect refrigerant leaks but, in the case of flammable refrigerants, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.)

Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used.

Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25 % maximum) is confirmed.

Leak detection fluids are also suitable for use with most refrigerants, but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

**NOTE:** Examples of leak detection fluids are:

- bubble method,
- fluorescent method agents.

If a leak is suspected, all naked flames shall be removed/ extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated by

means of shut off valves) in a part of the system remote from the leak. Removal of refrigerant shall be according to Step 10 below.

## 10. Removal and Evacuation

When breaking into the refrigerant circuit to make repairs – or for any other purpose – conventional procedures shall be used. However, for flammable refrigerants it is important that best practice be followed, since flammability is a consideration. The following procedure shall be adhered to:

- safely remove refrigerant following local and national regulations;
- evacuate;
- purge the circuit with inert gas (optional for A2L);
- evacuate (optional for A2L);
- continuously flush or purge with inert gas when using flame to open circuit; and
- open the circuit.

The refrigerant charge shall be recovered into the correct recovery cylinders if venting is not allowed by local and national codes. For appliances containing flammable refrigerants, the system shall be purged with oxygen-free nitrogen to render the appliance safe for flammable refrigerants. This process might need to be repeated several times. Compressed air or oxygen shall not be used for purging refrigerant systems. (Also see **Refrigerant Recovery Requirements** below.)

For appliances containing flammable refrigerants, purging shall be achieved by breaking the vacuum in the system with oxygen-free nitrogen and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum (optional for A2L). This process shall be repeated until no refrigerant is within the system (optional for A2L). When the final oxygen-free nitrogen charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.

The outlet for the vacuum pump shall not be close to any potential ignition sources, and ventilation shall be available.

## 11. Charging Procedures

In addition to conventional charging procedures, the following requirements shall be followed.

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
- Cylinders shall be kept in an appropriate position according to the instructions.
- Ensure that the refrigerating system is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the refrigerating system.

Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas. The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be performed prior to leaving the site.

## 12. Refrigerant Recovery Requirements

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge is available. All cylinders to be used are designated for the recovered refrigerant and labeled for that refrigerant (i.e: special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of the flammable refrigerant. If in doubt, the manufacturer should be consulted. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition.

The recovered refrigerant shall be processed according to local legislation in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The compressor body shall not be heated by an open flame or other ignition sources to accelerate this process. When oil is drained from a system, it shall be performed safely.

## 13. Commissioning of the System

- Ensure that the floor area is sufficient for the refrigerant charge or that the ventilation duct is assembled in a correct manner.
- Connect the pipes and perform a leak test before charging with refrigerant.
- Check safety equipment before putting into service.

## 14. Maintenance of the Air Handler

- Ensure sufficient ventilation at the repair place.
- Be aware that malfunction of the equipment may be caused by refrigerant loss and a refrigerant leak is possible.
- Discharge capacitors in a way that won't cause any spark. The standard procedure to short circuit the capacitor terminals usually creates sparks.
- Reassemble sealed enclosures accurately. If seals are worn, replace them.
- Check safety equipment before putting the air handler into service.

## 15. Repair of the Air Handler

- Ensure sufficient ventilation at the repair place.
- Be aware that malfunction of the equipment may be caused by refrigerant loss and a refrigerant leak is possible.
- Discharge capacitors in a way that won't cause any spark.
- When brazing is required, the following procedures shall be performed in the following order:
  - Safely remove the refrigerant following local and national regulations. If the recovery is not required by national regulations, drain the refrigerant to the outside. Take care that the drained refrigerant will not cause any danger. In doubt, one person should guard the outlet. Take special care that drained refrigerant will not float back into the building;

- Purge the refrigerant circuit with oxygen free nitrogen;
- Evacuate the refrigerant circuit;
- Remove parts to be replaced by cutting or brazing.
- Purge the braze point with nitrogen during the brazing procedure required for repair.
- Perform a leak test before charging with refrigerant.
- Reassemble sealed enclosures accurately. If seals are worn, replace them.
- Check safety equipment before putting the system back into service.

**16. Decommissioning of the Air Handler (Refer to Section 11 of this manual for additional information)**

- If the safety is affected when the equipment is put out of service, the refrigerant charge shall be removed before decommissioning.
- Ensure sufficient ventilation at the equipment location.
- Be aware that malfunction of the equipment may be caused by refrigerant loss and a refrigerant leak is possible.
- Remove the refrigerant. If the recovery is not required by national regulations, drain the refrigerant to the outside. Take care that the drained refrigerant will not cause any danger. In doubt, one person should guard the outlet. Take special care that drained refrigerant will not float back into the building.

**17. Disposal of the Air Handler (Refer to Section 11 of this manual for additional information)**

- Ensure sufficient ventilation at the working place.
- Remove the refrigerant. If the recovery is not required by national regulations, drain the refrigerant to the outside. Take care that the drained refrigerant will not cause any danger. In doubt, one person should guard the outlet. Take special care that drained refrigerant will not float back into the building.
- When flammable refrigerants are used,
  - evacuate the refrigerant circuit.
  - purge the refrigerant circuit with oxygen free nitrogen.



## WARNING

### FIRE HAZARD

For air handlers using A2L refrigerants connected via an air duct system to one or more rooms, auxiliary devices which may be a potential ignition source shall not be installed in the duct work. Examples of such potential ignition sources are hot surfaces with a temperature exceeding 1290°F (700°C) and electric switching devices.



## WARNING

**RISK OF FIRE – FLAMMABLE REFRIGERANT APPLICATIONS**  
The ductwork connected to this air-handler shall not contain an ignition source.

Auxiliary devices which may be a potential ignition source shall not be installed in the duct work. Examples of such potential ignition sources are hot surfaces with a temperature exceeding 1292°F (700°C) and electric switching devices.

Only auxiliary devices approved by the air-handler manufacturer or declared suitable with the refrigerant shall be installed in connecting ductwork. See Table 13 in Section 10 for approved auxiliary devices that can be installed within the ductwork.



## WARNING

### FIRE HAZARD

For air handlers using A2L refrigerants connected via an air duct system to one or more rooms, only auxiliary devices approved by the air handler manufacturer or declared suitable with the refrigerant shall be installed in connecting ductwork.



## WARNING

ALWAYS SHUT OFF ELECTRICITY AT THE DISCONNECT SWITCH OR TURN OFF THE CIRCUIT BREAKERS IN THE MAIN ELECTRICAL ENTRANCE BEFORE PREFORMING ANY SERVICE ON THE AIR HANDLER.



## WARNING

### FIRE HAZARD

For air handlers using A2L refrigerants connected via an air duct system to one or more rooms with a floor area less than shown in the "Minimum Conditioned Space & Minimum Airflow" tables found in the installation Instructions for this air handler, those rooms shall be without continuously operating open flames (e.g.: an operating gas appliance) or other potential ignition sources (e.g.: an operating electric heater, hot surfaces). A flame-producing device may be installed in the same space if the device is provided with an effective flame arrest.



## WARNING



### RISK OF FIRE

Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.

The appliance shall be stored in a room without continuously operating ignition sources (e.g.: an open flames, an operating gas appliance, or an operating electric heater).

Do not pierce or burn.

Be aware that refrigerants may not contain an odor.

# ⚠️ WARNING

## RISK OF FIRE – FLAMMABLE REFRIGERANT APPLICATIONS

If any refrigerating circuit contains more than 62.6 oz (1.776 kg) of R-454B refrigerant or more than 64.6 oz (1.836 kg) of R-32 refrigerant, an unventilated area where the air handler using a flammable refrigerant is installed shall be so constructed that should any refrigerant leak, it will not stagnate and create a fire or explosion hazard.

If the air duct system connected to one or more rooms with an area less than the minimum conditioned space floor area shown in the Minimum Conditioned Space and Airflow tables in the installation instructions for this air handler based on the total system refrigerant charge, that room shall be without continuously operating open flames (e.g.: an operating gas appliance) or other potential ignition sources (e.g.: an operating electric heater, hot surfaces). A flame-producing device may be installed in the same space if the device is provided with an effective flame arrest.

## SECTION 2: AIR HANDLER MAINTENANCE


The interior sections of the air handler must be cleaned and adjusted by a qualified service contractor once a year or before the start of each heating or cooling season. The following items must be checked:

1. The blower wheel and motor for excessive dirt.
2. The electric heaters for wear, damage or corrosion.
3. The electrical components for excessive dust, dirt, wear, or deterioration.
4. The supply air duct system for excessive dust, dirt or debris.
5. The return air duct system for excessive dust, dirt or debris.
6. All electrical wiring for wear, insulation cracks and/or damage.
7. Check the indoor coil for dust, debris or damage.
8. Check the indoor coil drain pan for proper drainage to prevent water backup into the air handler.
9. The air handler casing and all interior sheet metal panels or dividers.

### Air Handler Cleaning Procedure

1. Follow the instructions exactly as shown in the **Section 4: Startup and Shutdown Section** in the **Users Information Manual** section of this manual to properly shut down the air handler.
2. Remove the upper access panel on the front of the air handler.
3. Remove the lower access panel on the front of the indoor coil compartment.
4. Unplug the wire harnesses from the blower motor.
5. Remove the two screws on the left and right side and the center screw on the bracket in front of the blower mounting plate and slide the blower out (See Figure 7).
6. Place a piece of cardboard on top of the indoor coil to prevent dirt or debris from falling onto the coil. Use a vacuum cleaner and a small brush to remove any dirt and debris from the blower and indoor coil compartments.
7. Check the indoor coil condensate drain pan for any debris and ensure the drain pan is properly draining by pouring water into the drain pan.
8. Remove any excess water that may have spilled from checking the indoor coil condensate drain.

9. Check in the area above the blower compartment where the heater elements are located and remove any dust, dirt or debris from around the heater elements. Be careful not to damage the heater elements with the vacuum hose or the brush.
10. Check the blower wheel for dust and debris. Use the brush and the vacuum cleaner to remove any dust or debris from the wheel. Be careful not to move or accidentally remove the blower wheel balance weight(s) located on the wheel blade. Moving or removing a balance weight will cause the blower wheel to vibrate. If the blower wheel is vibrating, it must be replaced.
11. Check the blower motor for dust and debris. Be sure to clean the openings on the motor housing as these openings are used for cooling the motor. If the dust, dirt or debris has not been removed from these openings, the motor could run hotter than normal which could shorten the life of the motor.
12. Check and clean any dust in the supply and return ducts with the brush and vacuum cleaner as far as can be reached. If the ducts look like they have an excessive amount of dust, dirt or debris, recommend that the homeowner or user call a professional to properly clean the duct system.
13. Check and clean any dust, dirt, or debris from all controls and all surfaces in the control box. If dust or dirt is left on the components, they could operate at a much hotter temperature than normal causing premature component failure.
14. Reinstall the blower assembly and secure the assembly to the blower mounting plate by using the screws that were removed in step 5.
15. Reinstall the lower access panel on the front of the indoor coil compartment.
16. Reinstall the upper access panel on the air handler.
17. Follow the instructions as shown in **Section 4: Startup and Shutdown Section** in the **Users Information Manual** section of this manual to properly start up the air handler.

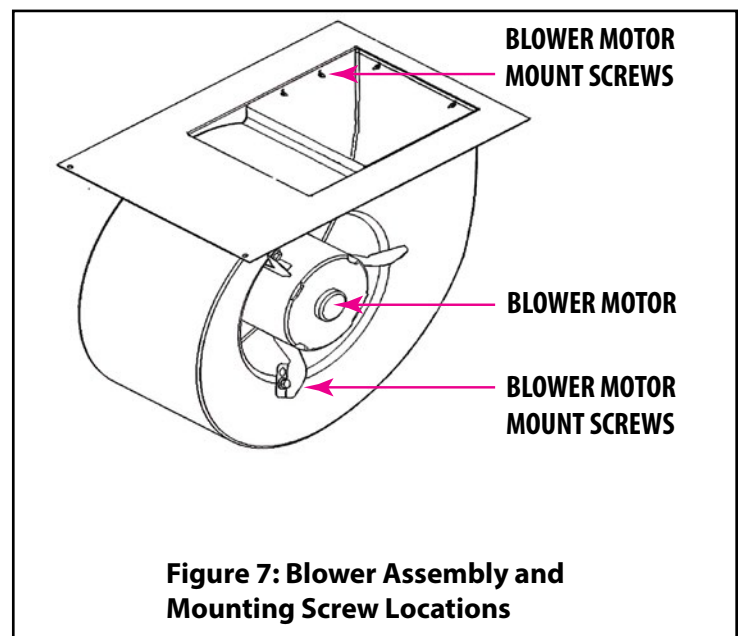

**Figure 7: Blower Assembly and Mounting Screw Locations**

## SECTION 3: AIR HANDLER CONTROLS

### Electric Heat Models

This section discusses the air handler controls and how they operate. Refer to Figures 8 and 9 for component locations.

**Limit Control(s)** – Each electric heater element has an over temperature limit control directly in front of it to sense overheating of the element. The limit electrical contacts open if the temperature rises above the set point of the limit control and interrupts the 24 VAC signal to the heater contactor coil which de-energizes the heater element. When the temperature of the element cools sufficiently for the limit control to reset, the heater elements are re-energized and the heater cycles until the cause for the overheating is corrected.

In addition to the automatic reset limit switch, each heating element has a non-resettable (one-shot) limit switch that will interrupt 208/240VAC to the heating element should the automatic reset limit switch fail to function properly in an over temperature situation.


**Heater Contactor(s)** – The electric heater contactor turns the heater elements on and off. The contactor is controlled by the thermostat. On a call for heat by the thermostat, 24 VAC is applied to the 24 VAC coil of the contactor causing the electrical contacts of the contactor to close which energizes the heater elements. When the call for heat has been satisfied, the 24 VAC signal is removed from the 24VAC coil on the contactor causing the electrical contacts of the contactor to open which de-energizes the heater elements. Models with 5kw and 10kw heaters have a single contactor and 15kw and 20kw heaters have two contactors.

**Circuit Breaker(s)** – The circuit breakers provide over-current protection for the air handler internal electrical components. Circuit breakers or fuses in the home's breaker box and must be sized to protect the line voltage wires connected to the air handler circuit breakers. Models with 5kw and 10kw heaters have a single circuit breaker and 15kw and 20kw heaters have two circuit breakers.

**Transformer** – The transformer is used to reduce line voltage from 208 – 240 VAC to 24 VAC. The transformer provides the required 24 VAC for the system control circuit.

**Refrigerant Leak Detection System** – A refrigerant sensor is located on the coil's front delta plate just above the vertical drain pan. Should a refrigerant leak occur in the coil itself or tubing, the sensor will detect the leak and energize the indoor blower, disable the outdoor unit compressor. The leak detection system consists of a single device that houses a refrigerant sensor and internal relays. Refer to Figure 11 for the location of the refrigerant leak sensor.

**ECM Control Board** – Models with ECM motors have an electronic control board that controls the heating and cooling blower CFM, blower ON and OFF delays, +/- blower CFM adjustment, cooling dehumidification, and climate profiles using jumper pins on the control board. The motor program for each air handler model resides in the motor's control module.

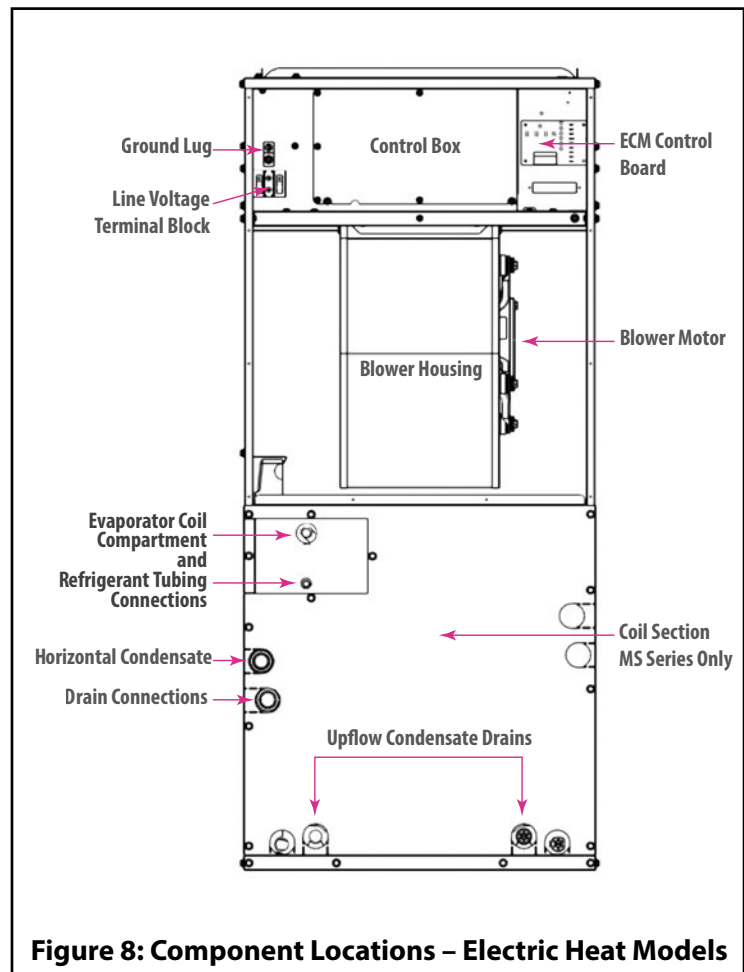

**Figure 8: Component Locations – Electric Heat Models**



## Hydronic Control Board Terminals and Descriptions

The terminals and functions are explained below.

### Line Voltage Terminals

**L1** – Supply Voltage (115 VAC) to the control

**L2** – Supply Neutral (115 Neutral) to the control

**XFMR and L2** – 115 VAC supply to transformer

**Pump and L2** – 115 VAC to the water pump

### 24 VAC Terminals

**Rin** – 24 VAC supply from the transformer

**24V COM** – 24 VAC common from the transformer

**R** – Fused 24 VAC output connections

**Y** – Connect to the thermostat Y terminal

**CC** – Connect **CC** and **24V COM** to the compressor contactor on the outdoor unit.

**CLin & Clout** – connections for compressor lockout switch on hot water coil or jumper wire.

**AQ** – 24 VAC from aquastat temperature switch

**G** – 24 VAC from thermostat G terminal

**W** – 24 VAC from thermostat W terminal

**FR** – 24 VAC from freeze protection switch

**RH/W2** – 24 VAC from thermostat W2 terminal

**BY** – 24 VAC from the priority switch on tank less heater

**DHM** – 24 VAC from thermostat DHM terminal

**VALVE** – 24 VAC and 24V COM to zone valve

**BOILER** – switch, connect to "T" terminals on boiler aquastat

### Hydronic Control Board Terminal Functions

**HI & COM** – 24 VAC cooling speed tap to blower motor (constant torque models only)

**MED & COM** - 24 VAC dehumidification speed tap to blower motor (constant torque models only)

**LOW & COM** - 24 VAC heating speed tap to blower motor (constant torque models only)

**FAN CIR & COM** – 24 VAC continuous fan speed tap to blower motor (constant torque models only)

**CLin and Clout** – These terminals must be connected to transfer 24 VAC from the Y terminal to the CC terminal. When the compressor lockout switch is used, the switch is secured to the water coil. The two yellow wires are connected to the CLin and the CLout terminals. When the temperature of the water coil reaches 38°F, the switch opens which de-energizes the CC terminal on the control board. When the water temperature has risen above 42°F the compressor lockout switch will close. The control will send 24 VAC to the CC terminal on the control board.

**NOTE:** If the compressor lockout switch is not used, place a jumper wire between CLin and CLout to get 24 VAC from the Y terminal to the CC terminal. The indoor blower will not be energized in the cooling mode until the CC terminal has 24 VAC at the terminal.

**AQ** – The aquastat switch is placed on the hot water line exiting side of the air handler coil. The aquastat is connected to the R terminal and the AQ terminal on the control board. The AQ jumper pin shown in Figure 12 must be in the ON position to use this feature. When there is a call for heat (24 VAC on the W terminal) and the water line temperature reaches the aquastat switch setting, the switch will close sending 24 VAC to the AQ terminal turning on the blower motor. The blower motor will not energize until the aquastat switch is closed. When the call for heat has been satisfied, the indoor blower will be de-energized after the selected OFF delay.

**VALVE** – There are two terminals used to power a 24 VAC zone valve or solenoid valve. The terminal closest to the 24V COM terminals is a 24VAC common terminal to the valve. See Figure 12. The other terminal is the 24 VAC output to the valve. When there are 24 VAC to the W terminal the control board will send 24 VAC to the valve terminals. The VALVE terminals de-energize when the 24 VAC is removed from the W terminal.

**BOILER** - There are two terminals that are connected to a switch. The terminals do not output any voltage and are dry contacts. The BOILER switch is designed to be connected to the "T" terminals on a boiler aquastat to energize the boiler when the control board has a call for heat (24 VAC on W).

**G** – When 24 VAC is placed on the G terminal the control will energize the indoor blower by the FAN CIR terminal with NO delay. When the 24 VAC signal has been removed from the G terminal, the indoor blower will be de-energized with NO delay.

If there is a call for heat (24 VAC on the W terminal) while 24 VAC is present on the G terminal, the control will energize the pump, valve and boiler and the indoor fan motor will be de-energized. The indoor fan motor will be energized by the LOW terminal after the selected ON delay. When the call for heat has been satisfied, the control will de-energize the valve, pump and boiler and the indoor fan motor will switch to the FAN CIR speed terminal after the selected OFF delay.

If there is a call for cooling while there is 24 VAC on the G terminal, the control will switch the indoor blower speed to the HI terminal. When the call for cooling has been satisfied, the control will switch the indoor blower back to the FAN CIR speed.

**W** – When 24 VAC is present on the W terminal, the control will energize the pump, valve and boiler and the indoor fan will be energized by the LOW terminal after the selected ON delay. When the call for heat has been satisfied, the control will de-energize the valve, pump and boiler and the indoor fan motor will be de-energized after the selected OFF delay.

**FR** – The FR terminal energizes the control board freeze protection. The freeze protection switch is secured to the water coil. The two white wires are connected to the R terminal and to the FR terminal on the control board. When the temperature of the coil is below 38°F, the freeze protection switch closes and sends 24 VAC to the FR terminal. The control will energize the pump, valve, boiler, and indoor fan motor on the LOW speed terminal. The control will not energize the indoor fan motor even when there is a call for heat with 24 VAC on the W terminal. When the water temperature has risen above 42°F, the freeze protection switch will open. The control will de-energize the pump, valve, boiler, and the LOW speed terminal providing there is not a call for heat. If there is a call for heat at the time FR is de-energized, the pump, valve and boiler will remain ON and the control will keep the LOW speed terminal energized.

**W2/RH** – When W2/RH is energized, the control will de-energize the LOW-speed terminal and will energize the MED speed terminal with no delay. When the W2 Terminal is de-energized, the MED speed terminal will be de-energized and the LOW speed terminal will be energized with no delay.

**BY** – Bypass terminal is used when the heating and domestic hot water system are managed with the same tankless hot water system. The domestic water line has a normally open flow switch that is connected to the R and the BY terminals on the control board. When the domestic water flow switch detects the flow of

water, the switch closes sending 24 VAC to the BY terminal. The control will de-energize the PUMP, VALVE, BOILER terminals and the indoor blower. When the domestic water flow has stopped the domestic water flow switch will open and the PUMP, VALVE, and BOILER terminals will resume normal operation. The indoor blower will be energized after the selected ON delay.

**Y** – When there is a call for cooling (24 VAC is placed on the Y terminal), the control will energize the indoor blower with the HI terminal after the selected ON delay. When the call or cooling has been satisfied, the indoor blower will be de-energized after the selected OFF delay.

**DHM – IMPORTANT NOTE:** M\*VT air handlers are not set up for cooling mode dehumidification. Connecting a humidistat to the DHM terminal will cause the indoor blower to shut off in the cooling mode upon a call for dehumidification resulting in the indoor coil freezing up and outdoor unit compressor failure. Cooling dehumidification may be enabled on M\*VE air handlers using the ECM control board.

## SECTION 4: SEQUENCE OF OPERATION

### Continuous Blower – Electric Heat Models

The thermostat has a manual fan switch that can be moved to the “ON” position for continuous fan position. This setting causes the thermostat to complete the circuit between “R” and “G” thermostat terminals. For models with constant torque motors, this sends 24 VAC to the selected indoor blower motor speed tap for the cooling mode (BLACK motor speed tap wire). The indoor blower will operate continuously until the fan switch on the thermostat is switched from “ON” to the “AUTO” setting which will cause the constant torque blower motor to be de-energized after a 30 second OFF time delay that is programmed into the motor’s control module.

Models with ECM motors operate similarly except the thermostat inputs go to the ECM control board which will energize the ECM motor to deliver the continuous fan CFM programmed into the motor’s control module.

### Continuous Blower – Hydronic Heat Models

The thermostat has a manual switch that can be moved to the “ON” position for continuous fan operation. For models with constant torque motors, this setting causes the thermostat to complete the circuit between “R” and “G” thermostat terminals sending 24 VAC to the “G” terminal on the hydronic control board. The hydronic control board will then energize the “FAN CIR” terminal which sends 24 VAC to the selected indoor blower motor speed tap for the continuous fan mode (BLUE motor speed tap wire). The indoor blower will operate continuously until the fan switch on the thermostat is switched from “ON” to the “AUTO” setting. When the thermostat is switched back to “AUTO”, the blower motor motor’s control module.

Models with ECM motors operate similarly except the thermostat inputs go to the ECM control board which will energize the ECM motor to deliver the continuous fan CFM programmed into the motor’s control module.

### Intermittent Blower – Cooling - Electric Heat Models

The thermostat has a manual fan switch that can be moved to the “AUTO” position for intermittent fan operation. When the thermostat calls for cooling on models with constant torque

motors, the circuit is completed between the “R”, “Y” and “G” terminals causing the motor to operate on the selected speed tap for the cooling mode (BLACK motor speed tap wire).

When the thermostat is satisfied, the circuit between “R”, “Y” and “G” will open, the blower motor will shut down after a 30 second OFF delay which is programmed into the motor control module.

Special 2-stage M\*VT models are designed to accommodate 2-stage cooling/heat pump operation by providing 2 levels of airflow based on the “Y1” and “Y2” signals from a 2-stage thermostat. Airflow for “Y1” is approximately 75% of “Y2” airflow.

M\*VE models with ECM motors operate similarly except the motor speed controls are built into the ECM control board which will energize the ECM motor to deliver the cooling CFM selected by the COOL jumper on the ECM control board. M\*VE models are designed to accommodate 2-stage cooling/heat pump heating operation by providing 2 levels of airflow based on the “Y1” and “Y2” signals from a 2-stage thermostat. Airflow for “Y1” is approximately 70% of “Y2” airflow. Single-stage cooling/heat pump heating applications with a M\*VE air handler require the wire from the thermostat “Y” terminal to be connected to both the “Y1” and “Y2” air handler low voltage pigtailed for full nominal airflow to be delivered.

### Intermittent Blower – Cooling - Hydronic Heat Models

The thermostat has a manual fan switch that can be moved to the “AUTO” position for intermittent fan operation. When the thermostat calls for cooling, the circuit is completed between the “R”, “Y” and “G” terminals sending 24 VAC to the hydronic control board through the “Y” and “G” terminals. The blower motor will be energized on the selected cooling speed (BLACK motor speed tap wire) through the “HI” terminal on the control board after the selected ON time delay.

When the thermostat is satisfied, the circuit between “R”, “Y” and “G” opens. The hydronic control board will de-energize the “HI” terminal on the control board after the selected OFF time delay on the hydronic control board and the blower motor will shut down. The blower is now in the stand-by mode awaiting the next cooling cycle.

Special 2-stage M\*VT models are designed to accommodate 2-stage cooling/heat pump operation by providing 2 levels of airflow based on the “Y1” and “Y2” signals from a 2-stage thermostat. Airflow for “Y1” is approximately 75% of “Y2” airflow.

M\*VE models with ECM motors operate similarly except the motor speed controls are built into the ECM control board which will energize the ECM motor to deliver the cooling CFM selected by the COOL jumper on the ECM control board. M\*VE models are designed to accommodate 2-stage cooling/heat pump heating operation by providing 2 levels of airflow based on the “Y1” and “Y2” signals from a 2-stage thermostat. Airflow for “Y1” is approximately 70% of “Y2” airflow. Single-stage cooling/heat pump heating applications with a M\*VE air handler require the wire from the thermostat “Y” terminal to be connected to both the “Y1” and “Y2” air handler low voltage pigtailed for full nominal airflow to be delivered.

### Intermittent Blower - Heating - Electric Heat Models

When the thermostat is set to the HEAT mode and the fan switch on the thermostat is set to AUTO, the call for heat closes the thermostat circuit between the “R” and “W” terminals. 24 VAC is sent from the “W” terminal on the thermostat, through the white thermostat wire, the white pigtail wire on the air handler to the 24 VAC coil on the first heater contactor. This signal energizes the

heater contactor, closing the contacts and sending 208 - 240 VAC to the heaters. The 24 VAC signal from the "W" thermostat terminal will also energize the motor's selected heating speed tap (RED motor speed tap wire). When the call for heat has ended, the "W" thermostat terminal is de-energized which will de-energize the motor and open the heater contactor contacts. The air handler is now in the stand-by mode awaiting the next heating cycle.

Some models have a "W2" terminal that is connected to the 24 VAC coil on the second heater contactor. This terminal is to be used for second stage heat and is connected to the wire from the thermostat "W2" terminal. A thermostat that has a second stage heating feature (W2 terminal) is required to use this feature. The second stage heat cycle is typically enabled when the room temperature typically falls more than 3 degrees below the thermostat heating set point. The thermostat energizes the second stage heater to aid in heating the room back to the thermostat set point. Once the room temperature is within one degree of the thermostat heating set point, the second stage heater is de-energized until the thermostat calls for second stage heat again.


Models with ECM motors operate similarly except the motor speed controls are built into the ECM control board which will energize the ECM motor to deliver the heating CFM selected by the HEAT jumper on the ECM control board.

#### Intermittent Blower - Heating - Hydronic Heat Models


When the thermostat is in the HEAT mode and the fan switch on the thermostat is set to AUTO, a call for heat closes the thermostat circuit between the "R" and "W" terminals. 24 VAC is sent from the "W" terminal on the thermostat through the white thermostat wire that is connected to the "W" terminal on the air handler hydronic control board. The hydronic control board then energizes the water pump relay on the control board which sends 115 VAC to the PUMP terminal. This will energize the water pump and start the circulation of hot water through the water coil. The hydronic control board energizes the motor on the selected heating speed (RED motor speed tap wire) through the "LOW" terminal on the control board after the selected ON time delay.

When the call for heat has ended, the "W" terminal is de-energized which opens the control board pump relay contacts shutting down the pump. The blower motor will shut down after the selected OFF time delay. The air handler is now in the stand-by mode awaiting the next heating cycle.

Models with ECM motors operate similarly except the motor speed controls are built into the ECM control board which will energize the ECM motor to deliver the heating CFM selected by the HEAT jumper on the ECM control board.

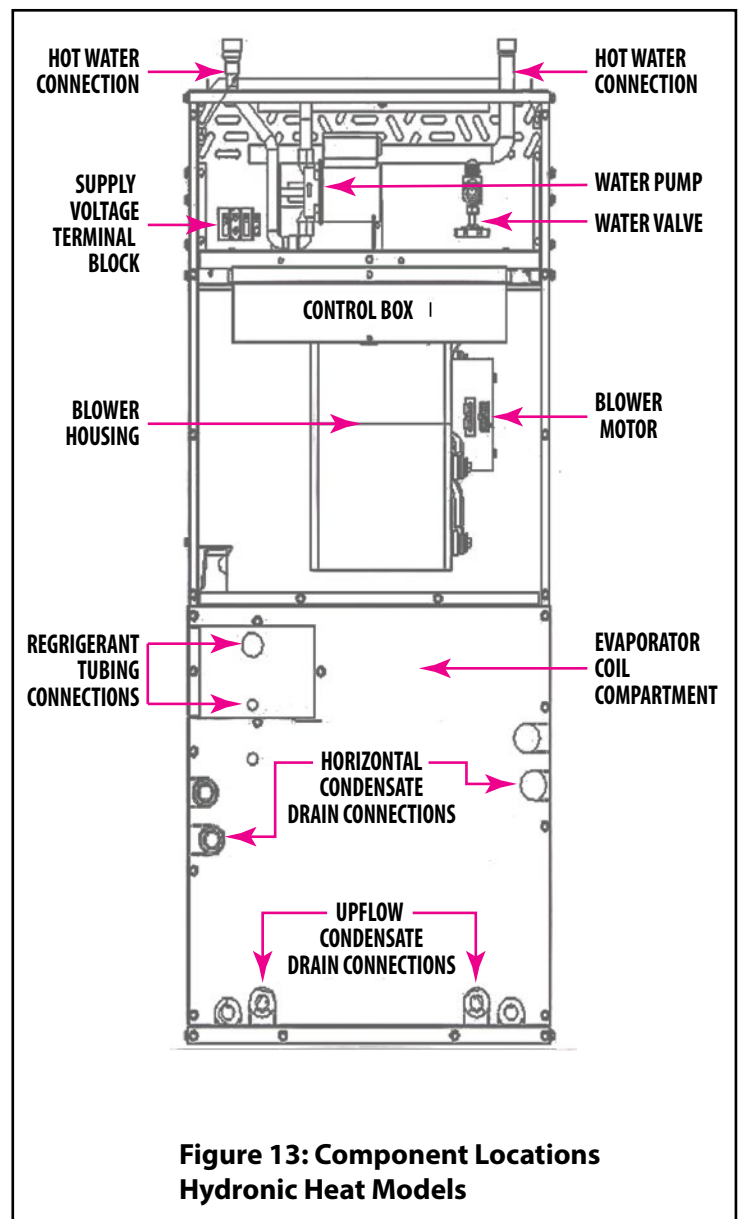

**Figure 13: Component Locations Hydronic Heat Models**

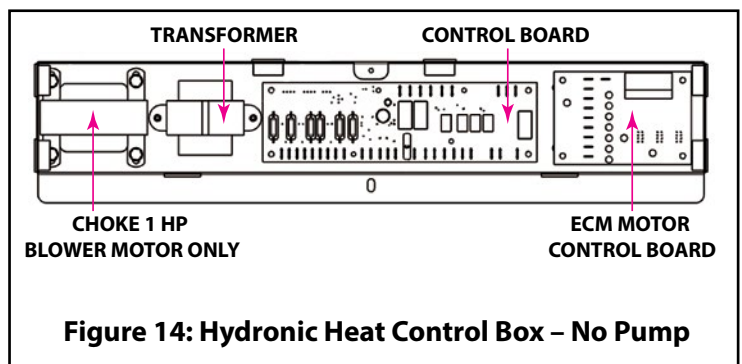

**Figure 14: Hydronic Heat Control Box - No Pump**

## SECTION 5: TROUBLESHOOTING

### WARNING

For personal safety be sure to turn the electrical power "OFF" at the main entrance (Circuit Breaker Box) and at the control box circuit breakers before attempting any service or maintenance operations. Homeowners should never attempt to perform any maintenance which requires opening the air handler control box cover.

### WARNING

To avoid personal injury or property damage, make certain that the motor leads cannot contact non-insulated metal components of the unit.

### WARNING

To avoid personal injury, take precautions to not touch non-insulated electrical components.

Avoid wearing loose clothing or any items that can become caught in moving parts, such as the blower wheel. This can cause serious personal injury.

The following checks should be made before troubleshooting the air handler controls when the blower does not operate or there is a no-heat or no-cooling issue.

1. Check all circuit breakers in the air handler and at the building's main electrical panel. Make sure they are turned to the "ON" position and have not tripped.
2. Check all fuses, especially any supply line fuses that were installed during installation, check the wiring with an OHM meter for a short to ground. If shorted, repair the short, and then replace the fuse.
3. Check any electrical switches that are external to the air handler to make sure they are turned on, especially ON/OFF switches used for servicing the air handler. The service switch is often mistaken for a light switch and is turned off.
4. Check all wiring connections, especially those on the components, to ensure they are securely fastened.

### ELECTRIC HEAT MODELS

If the air handler is equipped with electric heaters, check to make sure there is 208 - 240 VAC between the terminals on the load side of the circuit breakers in the control box. If 208-240 VAC is not present, check to see if the circuit breaker(s) in the air handler control box or in the building breaker box are tripped. If 208-240 VAC is present on the load side of the circuit breaker in the control box, check to make sure there is 24 VAC between to the RED thermostat pigtail or "R" low voltage terminal block terminal and ground. If 24 VAC is not present, but there is 208-240 VAC on the load side of the circuit breaker, check to see if the in-line fuse connected to the transformer secondary circuit is blown. If the fuse is not blown, check the wiring and connections from the transformer to the low voltage terminal block or ECM control board, and the RED pigtail connection on the ECM control board (if applicable). If the wiring and connections are OK and there is 208-240 VAC at the transformer primary, replace

the transformer. If 24 VAC is present between the RED thermostat pigtail or "R" terminal and ground, continue the troubleshooting process by conducting the following checks.


### ECM Motor Check – Electric Heat Models

If the motor is not running and there is 208-230 VAC on the load side of the circuit breaker in the control box, check the line voltage wiring and connections between the circuit breaker and the line voltage motor terminal block and the low voltage wiring and connections between the control board and the motor terminal block. Check to see if 24 VAC is present between the "G" and "C" terminals on the ECM control board when the thermostat is calling for cooling or continuous fan or between the "W1" and "C" terminals on the ECM control board when the thermostat is calling for heat. If 208 - 240 VAC and 24 VAC are present at the above points, perform the following checks to verify proper functioning of the ECM control board.

**ECM Control Board Check:** Voltmeter will not read between pins 4, 5, 7, 11 and 1 or 3 because these signals are not full wave signals. To verify ECM control board is functioning properly in the heating mode check for 24 VAC between pins 1 and 2. To verify ECM board is functioning properly in the cooling mode check for 24 VAC between pins 1 and 6 and also between pins 1 and 15. If the ECM control board is OK, replace the motor or motor control module.

1. Common C1
2. W/W1
3. Common C2
4. Delay Tap Select
5. Cool Tap Select
6. Y1
7. Adjust Tap Select
8. Output –
9. Reversing Valve (Heat Pump Only)
10. Humidistat (BK)
11. Heat Tap Select
12. 24 VAC (R)
13. 2nd Stage Heat (EM/W2)
14. 2nd Stage Cool (Y/Y2)
15. Fan (G)
16. Output +COOL setting.

**Table 1: ECM Motor Control Connector Terminal Descriptions**

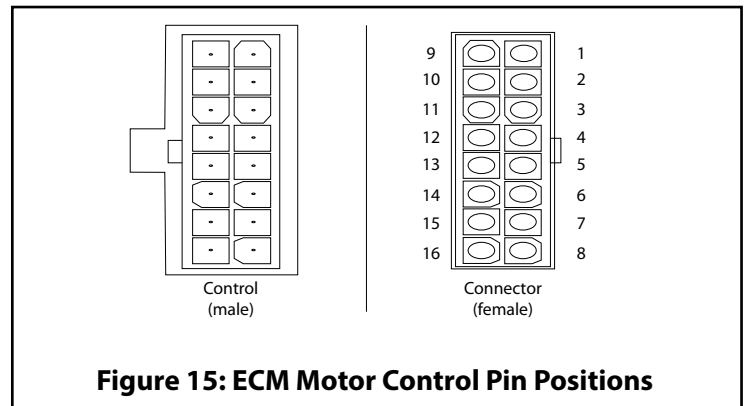

### Constant Torque Motor Check – Electric Heat Models

If the blower motor will not run in both the heating and cooling modes and there is 208-240 VAC on the load side of the circuit breaker in the control box, check the connections in the blower motor 6-pin plugs (BMMP and BMFP). If those connections are OK, proceed with the following checks.


If the motor is not running, check for 208 - 240 VAC between the L and N motor terminals and for 24 VAC at either the RED or BLACK wires connecting to 2 of the motor terminals 1 - 5 when the thermostat is calling for blower operation. Refer to Figure 16 and Tables 2 and 3 for terminal locations and definitions. If the 208 - 240 VAC is present between the L and N terminals and 24 VAC is measured between motor terminal C and one of the motor speed tap wires, but the motor is not operating, replace the motor. If 208 - 240 VAC is not present between the L and N motor terminals, check the 6wiring connections to the control board and circuit breaker. If 24 VAC is not present at any of the motor speed tap wires going to the motor terminal block terminals 1 – 5, check the connections to the control board and check to see if the in-line 3A fuse connected to the transformer secondary is blown.

### Heating Mode – Electric Heat Models - Constant Torque Motor

If 24 VAC is not present between the “W” terminal on the air handler’s low voltage terminal block and ground when the thermostat is calling for heat, check the wiring and wiring connections from the thermostat “W” terminal to the “W” terminal on the air handler’s low voltage terminal block. If 24 VAC is present on the “W” terminal on the low voltage terminal block, check for 24 VAC on the RED motor speed tap wire connected to the motor terminal block. If 24 VAC is not present on the RED motor speed tap wire, check the wiring and wiring connections between the low voltage terminal block and the blower motor terminal block. If the wiring and connections are OK, replace the motor.

### Cooling Mode or Continuous Fan - Electric Heat Models - Constant Torque Motor

If 24 VAC is not present between the “G” and “C” terminals on the air handler’s low voltage terminal block when there is a call for cooling or continuous fan operation, check for 24 VAC between the “R” and “C” terminals on the thermostat. If 24 VAC is not present at the thermostat “R” terminal, check the wiring from the “R” terminal on the air handler’s low voltage terminal block to the thermostat. If there is 24VAC at the thermostat “R” terminal, but not at the “G” terminal on the thermostat when there is a call for cooling or continuous fan operation, replace the thermostat. If there is 24 VAC between the “G” and “C” terminals on the air handler’s low voltage terminal block, check for 24 VAC on the BLACK motor speed tap wire connected to the motor terminal block. If 24 VAC is not present on the BLACK motor speed tap wire, check the wiring and wiring connections between the low voltage terminal block and the blower motor terminal block. If the wiring and connections are OK, replace the motor.

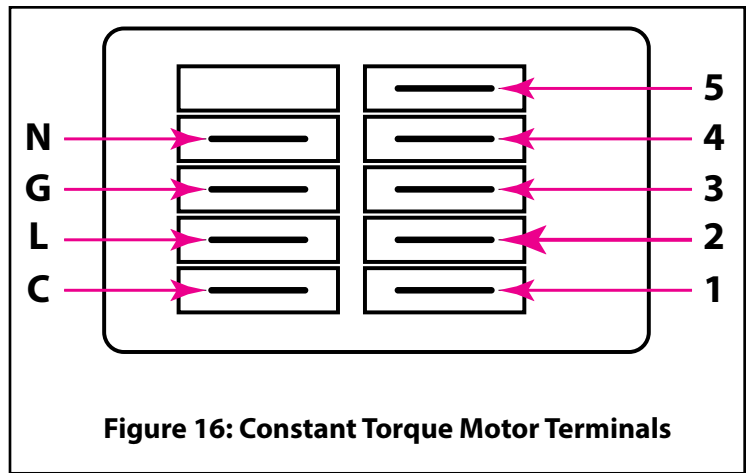

**Figure 16: Constant Torque Motor Terminals**

Terminal	Connection
C	Speed Tap Common - 24 VAC Common
L	Supply Voltage - 240 Vac Line 1
G	Ground Connection
N	Supply Voltage - 240 Vac Line 2
1	Low Speed Tap - 24 VAC Input
2	Medium-Low Speed Tap - 24 VAC Input
3	Medium Speed Tap - 24 VAC Input
4	Medium-High Speed Tap - 24 VAC Input
5	High Speed Tap - 24 VAC Input

**Table 2: Constant Torque Motor Terminal Connections Single-Stage Cooling/Heat Pump Electric Heat Models**

Terminal	Connection
C	Speed Tap Common - 24 VAC Common
L	Supply Voltage - 240 Vac Line 1
G	Ground Connection
N	Supply Voltage - 240 Vac Line 2
1	Heating Speed Tap - 24 VAC Input
2	1st Stage Cooling Speed Tap 1.5, 2.5, 3.5, 4.5 Tons - 24 VAC Input
3	1st Stage Cooling Speed Tap 2.0, 3.0, 4.0, 5.0 Tons - 24 VAC Input
4	2nd Stage Cooling Speed Tap 1.5, 2.5, 3.5, 4.5 Tons - 24 VAC Input
5	2nd Stage Cooling Speed Tap 2.0, 3.0, 4.0, 5.0 Tons - 24 VAC Input

**Table 3: Constant Torque Motor Terminal Connections 2-Stage Cooling/Heat Pump Electric Heat Models**

HP	ECM	C.T.
1/3	4.40	2.80
1/2	5.00	4.10
3/4	6.30	6.20
1.0	6.32	6.30

**Table 4: 208 / 240 Volt Blower Motor Full Load Amperage (FLA) Chart – Electric Heat Models**

## Heating Element Is Not Heating

Check for 208 - 240 VAC between terminals T1 and T2 of the heater contactor(s). If 208 - 240 VAC is present, check the resistance across the heating element terminals. If the heating element resistance is infinity (open circuit), replace the defective heating element.


The heater design is as follows:

- The 5 kW model has one 5 kW heating element.
- The 10 kW model has one heater assembly with two 5 kW heating elements.
- The 15 kW model has one heater assembly with two 5 kW heating elements (top) and one heater assembly with one 5 kW heating element (bottom).
- The 20 kW model has two heater assemblies, each with 5 kW heating elements.

If 208-240 VAC is not present between the T1 and T2 terminals (load) of a heater contactor, but 208-240 VAC is present between the terminals L1 and L2 (line) of the heater contactor(s) and there is 24 VAC across the coil of that contactor, replace the heater contactor.

If 24 VAC is not present across the heater contactor coil, use an ohmmeter to check for continuity across the terminals of all auto-reset limit controls on the heater element assemblies. If the contacts on any limit control are open when the heating elements are cool, replace that limit control.

If 208-240 VAC is present between heater contactor terminals T1 and T2, but 208-240 VAC is not present between the heater element terminals, use an ohmmeter to check for continuity across the terminals of all non-resettable limit controls on the heater element assemblies. If the contacts on any non-resettable limit control are open, replace that limit control.

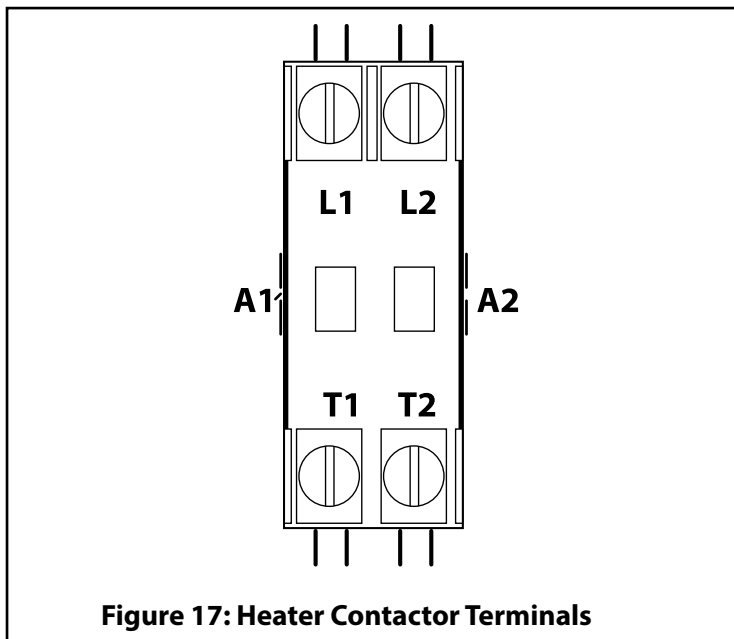

**Figure 17: Heater Contactor Terminals**

## HYDRONIC HEAT MODELS

### Hydronic Control Board

Models with hydronic heat have a hydronic control board. There should be 115 VAC between the L1 and N terminals on the power terminal block or between pins #4 and #5 in the power cable plug at the motor, and 115 VAC between the XFMR and N/L2 terminals on the control board. There should also be 24 VAC between the "Rin" and "COM" terminals on the control board. Also check to make sure there is 24 VAC between the "R" terminal and "COM" terminal on the control board. If there is 24 VAC between "Rin", but 24 VAC is not present between the "R" and "COM" terminals, check the fuse on the control board to see if it is blown. If there is 24 VAC at both of these locations, continue the troubleshooting process by conducting the following checks.

### ECM Motor Check – Hydronic Heat Models HYDRONIC HEAT MODELS

#### Hydronic Control Board

Models with hydronic heat have a hydronic control board. There should be 115 VAC between the L1 and N terminals on the power terminal block or between pins #4 and #5 in the power cable plug at the motor, and 115 VAC between the XFMR and N/L2 terminals on the control board. There should also be 24 VAC between the "Rin" and "COM" terminals on the control board. Also check to make sure there is 24 VAC between the "R" terminal and "COM" terminal on the control board. If there is 24 VAC between "Rin", but 24 VAC is not present between the "R" and "COM" terminals, check the fuse on the control board to see if it is blown. If there is 24 VAC at both of these locations, continue the troubleshooting process by conducting the following checks.

**ECM Motor Check – Hydronic Heat Models** Models equipped with an ECM motor have an ECM control board in addition to the hydronic control board. If the motor is not running, check for 115 VAC between the L1 and N terminals on the power terminal block or motor power cable plug terminals #4 and #5. If 115 VAC is not present, check the wiring and connections to restore 115 VAC power to the air handler. If the 115 VAC is present at the motor, but the motor is not operating, check the ECM control board to determine if 24 VAC is present between the "C1" and "W1" terminals if the thermostat is calling for heat or between the "C1" and "G" if the thermostat is calling for cooling or continuous fan. If 24 VAC is not present, check the thermostat and thermostat wiring and connections. If 24 VAC is present, perform the tests in ECM Control Board Check on the page 17 of these instructions to verify the ECM control board is functioning properly. If the above checks are normal, replace the motor or motor control module.

#### Constant Torque Motor Check – Hydronic Heat Models

If the motor is not running when there is a call for heat, cooling, or continuous fan, check for 115 VAC between the L and N motor terminals and check for 24 VAC between the "COM/24V" terminal and either the "HI", "MED", or "LOW" terminal on the control board. If 115 VAC is present between motor terminals L and N, and 24 VAC is present between the "COM/24V" terminal and either the "HI", "MED" or "LOW" terminal on the control board, but the motor is not operating, check the wiring connections at the motor terminals and the motor connector plugs BMMP and BMFP. If these connections are secure, replace the motor. Refer to Figure 16 and Tables 5 and 6 for terminal locations and definitions.

TERMINAL	CONNECTION
C	Speed Tap Common - 24 VAC Common
L	Supply Voltage - 115 VAC
G	Ground Connection
N	Supply Voltage - Neutral
1	Low Speed Tap - 24 VAC Input
2	Medium - Low Speed Tap - 24 VAC Input
3	Medium Speed Tap - 24 VAC Input
4	Medium - High Speed Tap - 24 VAC Input
5	High Speed Tap - 24 VAC Input

**Table 5: Constant Torque Motor Terminal Connections Single-Stage Cooling/Heat Pump Hydronic Heat Models**

Terminal	Connection
C	Speed Tap Common - 24 VAC Common
L	Supply Voltage - 115 VAC
G	Ground Connection
N	Supply Voltage - Neutral
1	Heating Speed Tap - 24 VAC Input
2	1st Stage Cooling Speed Tap 1.5, 2.5, 3.5, 4.5 Tons - 24 VAC Input
3	1st Stage Cooling Speed Tap 2.0, 3.0, 4.0, 5.0 Tons - 24 VAC Input
4	2nd Stage Cooling Speed Tap 1.5, 2.5, 3.5, 4.5 Tons - 24 VAC Input
5	2nd Stage Cooling Speed Tap 2.0, 3.0, 4.0, 5.0 Tons - 24 VAC Input

**Table 6: Constant Torque Motor Terminal Connections 2-Stage Cooling/Heat Pump Hydronic Heat Models**


HP	ECM	C.T.
1/3	7.30	4.80
1/2	8.40	8.40
1.0	12.80	10.90

**Table 7: 115 Volt Blower Motor Full Load Amperage (FLA) Chart**

### Removing the Blower

1. Turn off the circuit breaker to the air handler at the main electrical panel.
2. Switch the air handler circuit breaker(s) to "OFF" (electric heat models) or the local power disconnect switch to "OFF" (hydronic heat models).
3. Remove the blower / control box access panel.
4. Unplug the wire harnesses from the blower motor.
5. Remove the 3 screws on the bracket in front of the blower mounting plate and slide the blower out.
6. After repairs or checks have been completed, reinstall the blower assembly and secure the assembly to the casing by using the bracket and screws that were removed in step 5.
7. Reinstall the blower / control box access panel.
8. Switch the air handler circuit breaker(s) to "ON" (electric heat models) or the local power disconnect switch to "ON" (hydronic heat models).

9. Turn the circuit breaker to the air handler at the main electrical panel to "ON".
10. Set the thermostat to the desired mode and temperature and observe the air handler startup to ensure it is operating correctly.

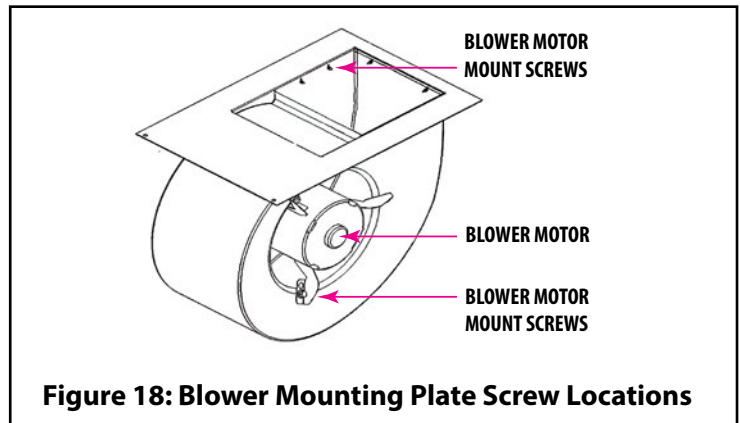

**Figure 18: Blower Mounting Plate Screw Locations**

### TXV TROUBLESHOOTING

The thermostatic expansion valve (TXV) is like the carburetor in a car engine. It opens and closes to allow the correct amount of refrigerant flow through the system. When the TXV isn't working properly, the capacity and efficiency of the system is reduced. If a faulty TXV is suspected, perform the following tests:

1. Connect refrigerant gauges to the system and check that the thermostatic expansion valve (TXV) is like the carburetor in a car engine. It opens and closes to allow the correct amount of refrigerant flow through the system. When the TXV isn't working properly, the capacity and efficiency of the system is reduced. If a faulty TXV is suspected, perform the following tests:
2. Connect refrigerant gauges to the system and check that the refrigerant pressures, liquid subcooling and suction superheat levels are correct according to the outdoor unit charging chart. Subcooling at the outdoor unit liquid service valve is normally around 10°F and superheat at the outdoor unit suction service valve is normally between 8 -12°F, but these can vary depending on the manufacturer and model of the outdoor unit.
3. Check to see if the indoor airflow through the system is correct. Check to see if the indoor and outdoor coils and indoor air filters are dirty. Clean dirty coils and clean/replace dirty air- filters as necessary before measuring air-flow and checking pressures, superheat, and subcooling.
4. Make sure the refrigerant charge in the system is correct. This step may require weighing the refrigerant in the system. Once refrigerant charge weight has been adjusted as necessary, recheck the refrigerant pressures, subcooling and superheat. If the pressures, subcooling and superheat are still not correct, the TXV may be defective or the TXV inlet strainer or the liquid line filter drier is plugged with debris.
5. A good way to determine if the TXV is defective is to remove the TXV's sensing bulb from the suction line and check the pressures, subcooling, superheat again. No change in the pressures, subcooling, and superheat levels is an indication the TXV is defective. Another test that can be performed is to place the sensing bulb in ice water and recheck the pressures, superheat, and subcooling levels. If these values do not change, the TXV is likely defective.

## Additional TXV Troubleshooting Information Low Suction Pressure – High Superheat

### POSSIBLE CAUSES:

1. Undersized TXV
2. TXV superheat adjustment too high
3. High indoor coil pressure drop due to internal restriction
4. TXV sensing bulb installed on bottom of suction line
5. Restricted or capped TXV external equalizer tube
6. Improper TXV external equalizer location (must be located on the suction manifold after the last feeder tube)
7. Low refrigerant charge
8. Plugged liquid line filter drier
9. Plugged TXV inlet strainer
10. Low outdoor ambient temperature

## High Suction Pressure – Low Superheat

### POSSIBLE CAUSES:

1. Oversized TXV
2. TXV seat leakage
3. TXV superheat adjustment too low
4. Improper TXV sensing bulb installation
  - a) Poor thermal contact with suction line (loose clamp)
  - b) Uninsulated sensing bulb
  - c) Warm location
1. Bad compressor (low capacity)
2. Incorrectly located external equalizer line (must be located on the suction manifold after the last feeder tube)

## Low Suction Pressure – Low Superheat

### POSSIBLE CAUSES:

1. Low system load:
  - a) Insufficient indoor airflow
  - b) Dirty indoor air filters
  - c) Return air too cold
  - d) Indoor coil icing or frosting
2. Poor air distribution over indoor coil
3. Improper indoor/outdoor coil internal volume balance (indoor coil too big or too small causing incorrect refrigerant charge balance between cooling and heating modes)
4. Oil trapped in indoor coil

## Things to Check Before Replacing TXV

1. Slowly loosen the flare nut on the TXV external equalizer connected to the suction line port with a flare nut. If there is a large pressure release when the nut has been loosened, tighten the nut. If this results in a slight pressure release or no pressure release; the Schrader valve stem is not being depressed. Install an anti-blow back fitting to the external equalizer line of the TXV to depress the Schrader valve stem and check for proper operation of the TXV.
2. Remove the sensing bulb from the suction line and hold in a warm hand. The high side pressure should drop and low side pressure should increase as the TXV opens. Place the sensing bulb in ice water. The high side pressure should increase and the low side pressure should decrease as the TXV closes. If the pressures do not change when these tests are conducted, the TXV is faulty.

## SECTION 6: SPECIAL PIPING INSTRUCTIONS FOR A2L CLASS FLAMMABLE REFRIGERANT



# WARNING

### RISK OF FIRE

This following precautions must be taken for the refrigerant piping due to this air-handler being used with an A2L class flammable refrigerant.

Piping material, pipe routing, and installation shall, including protection from physical damage in operation and service, be in compliance with national and local codes and standards, such as ASHRAE 15, IAPMO Uniform Mechanical Code, ICC International Mechanical Code, or CSA B52 shall be observed. All field joints shall be accessible for inspection prior to being covered or enclosed.

Mechanical refrigerant connections must be made in accordance with the following procedure and shall be accessible for maintenance purposes.

The installation of pipe-work shall be kept to a minimum.

Due to this air-handler being used with an A2L class flammable refrigerant, the refrigerant pipe-work shall not be installed in an unventilated space, if that space is smaller than the minimum floor area shown in the **Minimum Conditioned Space and Airflow Tables** that can be found in the Installation Instructions Manual for this air handler unless there are no joints in the pipe-work in that space (e.g.: pipework that is run in walls or between floors).

Since refrigerant line length affects the final refrigerant charge, the final refrigerant charge after field charging of the system must be noted and used when determining the minimum floor area of the conditioned space from the **Minimum Conditioned Space and Airflow Tables** that can be found in the installation instructions for this air handler.

### Refrigerant Connections

For appliances using flammable refrigerants, all joints made in the installation between parts of the refrigerating system, with at least one part charged, shall be made in accordance with the following:

- A brazed, welded, or mechanical connection shall be made before opening the valves to permit refrigerant to flow between the refrigerating system parts. A vacuum valve shall be provided to evacuate the interconnecting pipe or any uncharged refrigerating system part.
- Mechanical connectors used indoors shall comply with ISO 14903 or UL 207 Annex A (USA only). When mechanical connectors are reused indoors, sealing parts shall be renewed. When flared joints are reused indoors, the flare part shall be refabricated.
- Refrigerant tubing shall be protected or enclosed to avoid damage.
- Flexible refrigerant connectors (such as connecting lines between the indoor and outdoor unit) that may be displaced during normal operation shall be protected against mechanical damage.
- For installations with field applied joints that are exposed in the occupied space, these joints shall be at least one of the following:
  - mechanical joints in compliance with ISO 14903 or UL 207 Annex A (USA only).
  - welded or brazed joints; or
  - joints in enclosures that vent to the unit or to the outside.

Provision shall be made for expansion and contraction of long runs of piping.

Protection devices, piping, and fittings shall be protected as far as possible against adverse environmental effects, for example, the danger of water collecting and freezing in relief pipes or the accumulation of dirt and debris.

Piping in refrigeration systems shall be so designed and installed to minimize the likelihood of hydraulic shock damaging the system.

After completion of field piping for split systems, the field pipework shall be pressure tested with an inert gas and then vacuum tested prior to refrigerant charging, according to the following requirements:

- The minimum test pressure for the low side of the system shall be the low side design pressure and the minimum test pressure for the high side of the system shall be the high side design pressure, unless the high side of the system cannot be isolated from the low side of the system in which case the entire system shall be pressure tested to the low side design pressure.
- The test pressure after removal of pressure source shall be maintained for at least 1 hour with no decrease of pressure indicated by the test gauge, with test gauge resolution not During the evacuation test, after achieving a vacuum level specified in the manual or less, the refrigeration system shall be isolated from the vacuum pump and the pressure shall not rise above 1500 microns within 10 min. The vacuum pressure level shall be the lesser of 500 microns or the value required for compliance with national and local codes and standards, which may vary between residential, commercial, and industrial buildings.

Field-made refrigerant joints indoors shall also be tightness tested after the system is charged with refrigerant. The test method shall have a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0.25 times the maximum allowable pressure. No leak shall be detected.

## SECTION 7: REFRIGERANT LEAK DETECTION SYSTEM OPERATION AND SENSOR REPLACEMENT

This air handler is equipped with a refrigerant leak detection system consisting of a leak mitigation refrigerant sensor with integral relays. Refer to Figure 11 for the location of the refrigerant leak sensor. Should a refrigerant leak occur in the indoor coil, the refrigerant leak detection system will energize the indoor blower on the cooling mode speed tap and will open the 24VAC circuit to the outdoor unit compressor contactor. The circulation of air will disperse the leaked flammable refrigerant into the conditioned space where it will be diluted to point where it can no longer be ignited by an ignition source. This process is referred to as "Leak Mitigation". The indoor blower will continue to operate until 5 minutes after the concentration of the refrigerant at the sensor drops below the sensor's setpoint. Should the concentration of the refrigerant rise above the setpoint of the sensor, the mitigation cycle will repeat until the refrigerant concentration stays below the setpoint of the sensor. The sensor pigtail marked "ALARM" will normally be energized with 24VAC when no leak is detected and will be de-energized when a leak is detected for the purpose of notifying a building management system to issue a refrigerant leak alarm.

Should the sensor fail or if the wiring to the sensor is damaged or disconnected, the sensor will automatically enter the mitigation mode until the sensor is replaced or the wiring is reconnected or repaired.

**IMPORTANT NOTE:** The outdoor unit control wiring must be connected to the refrigerant sensor "Y-CC" pigtail and the "COM" on the air handler low voltage terminal strip for the refrigerant detection system to de-energize the compressor during the leak mitigation mode of operation.

### **WARNING**

This air handler is equipped with a refrigerant leak mitigation system that energizes the air handler blower motor to deliver at least the required minimum airflow (See **Minimum Conditioned Space and Airflow Tables** that can be found in the Installation Instructions for this air handler) when the refrigerant leak detection system detects a leak. This will dilute the flammable A2L class refrigerant to a point that it no longer poses a risk of an explosion or fire. Follow the procedure "Verifying Proper Functioning of Refrigerant Leak Mitigation System" later in this section to confirm the refrigerant mitigation system is functioning as it should.

#### **Verifying Proper Functioning of Refrigerant Leak Mitigation System**

A test to confirm the proper functioning of the refrigerant leak mitigation system must be performed at the final system check-out. Follow the procedure below to perform that test.

1. Remove the coil access panel from the front of the air handler.
2. Locate the black refrigerant sensor located near the bottom front of the coil assembly (see Figure 11).

#### **Leak Detected During Cooling Cycle**

3. Set the thermostat to "COOL" and the fan switch to "AUTO" and lower the temperature setpoint below the indoor temperature so the system enters the cooling mode.
4. Confirm the outdoor unit compressor is operating.
5. Within 30 seconds of the compressor starting, release a small amount of refrigerant on the refrigerant sensor to activate the leak mitigation mode.
6. Confirm the outdoor unit compressor and fan motor shut down and the indoor blower continues to operate.
7. Confirm the indoor blower is energized and 24V is not present at the air handler pigtail marked "ALARM".
8. Confirm the outdoor unit compressor and fan motor are re-energized approximately 5 minutes after the flow of refrigerant near the sensor has ended and that the indoor blower continues to operate.

#### **Leak Detected During the OFF Cycle**

9. Set the thermostat to the "OFF" position and wait until the outdoor unit compressor and fan motor stop and indoor blower stops.
10. Release a small amount of refrigerant on the refrigerant sensor to activate the leak mitigation mode
11. Confirm the indoor blower is energized and 24V is not present at the air handler pigtail marked "ALARM".
12. Confirm the indoor blower shuts down after approximately 5

minutes after the flow of refrigerant on the refrigerant sensor has ended.

13. If the Refrigerant Leak Mitigation System does not operate as stated above, check for loose wiring connections or replace the refrigerant sensor.
14. Reinstall the coil access panel on the air handler.
15. Set the thermostat to the desired operating mode and temperature.

If the leak detection system does not function properly when subjected to the above procedure, check for miswiring of the system. If the wiring connections are found to be correct per the air handler wiring diagram, replace the sensor with an approved replacement from the manufacturer.

### **Servicing the Leak Detection System/Sensor Replacement**

When the refrigerant leak detection system sensor fails or reaches the end of its life, the leak detection system will enter and remain in the leak mitigation mode even though there is no refrigerant leak present. If the leak detection system continues to operate in the mitigation mode even when a refrigerant leak isn't indicated by a portable refrigerant leak detector, replace the sensor with an approved replacement from the air handler manufacturer using the following procedure.

#### **Refrigerant Sensor Replacement Procedure:**

The appropriate replacement sensor must be installed for the particular refrigerant that the outdoor unit uses. The sensor part numbers are as follows:

**R-32 Refrigerant: R68ALL001**

**R-454B Refrigerant: R68ALL002**

**R-32/R-454B Refrigerant (Dual Refrigerant Sensor): R68ALL003**

**IMPORTANT:** Mortex may source sensors from various manufacturers that have a different wiring harness connection. A wiring may be necessary to allow the replacement sensor to connect the sensor wiring harness. The wiring adapter will be provided with the replacement sensor. Alternate mounting holes are provided in the coil delta plate to accommodate the various approved sensors. Only use a replacement sensor approved by and provided by Mortex to assure proper operation and compatibility.

Unplug the sensor wiring harness from the failed sensor. Remove the screws securing the failed sensor to the front coil delta plate and place the failed sensor aside. Attach the replacement sensor to the front coil delta plate with the screws that were removed earlier assuring the sensor is installed in the same orientation as the sensor that was removed. Plug the sensor wiring harness into the replacement sensor.

Verify the proper function of the refrigerant leak mitigation system using the procedure described earlier.

**Important Note:** The sensor wiring harness plug must be pointing down or horizontal. If the plug is pointing up, water could collect in the plug and result in operational issues. This does not apply to Cubic brand sensors which have a water tight plug and will be pointing up in horizontal applications.

**SECTION 8: BLOWER PERFORMANCE**

Model Number	Motor HP	Volts 1 Ph. 60 Hz	Motor Code	Blower Wheel	Speed Tap	CFM @ 0.10" ESP	CFM @ 0.20" ESP	CFM @ 0.30" ESP	CFM @ 0.40" ESP	CFM @ 0.50" ESP	CFM @ 0.60" ESP
M*VT18 Electric Heat	0.33	208/240	VD1	10 X 7	1	699	639	565	536	451	402
					2	741	676	592	517	527	458
					3	908	849	777	679	745	655
					4	1022	963	905	840	761	703
					5	1102	1054	996	928	884	812
M*VT24 Electric Heat	0.33	208/240	VD1	10 X 7	1	861	786	708	638	547	615
					2	924	872	814	726	663	656
					3	1067	1013	963	894	826	758
					4	1139	1093	1042	982	918	857
					5	1220	1157	1105	1049	985	893
M*VT25 Electric Heat	0.50	208/240	VE1	10 X 8	1	995	934	855	793	712	649
					2	1047	994	926	876	782	700
					3	1146	1075	1019	957	880	811
					4	1224	1161	1099	1030	972	904
					5	1300	1247	1186	1115	1058	996
M*VT30 Electric Heat	0.50	208/240	VE1	10 X 8	1	898	829	784	741	691	604
					2	999	962	918	888	847	811
					3	1164	1120	1087	1060	1022	990
					4	1260	1222	1197	1162	1131	1098
					5	1353	1321	1289	1258	1229	1197
M*VT36 Electric Heat	0.50	208/240	VE1	10 X 8	1	1161	1135	1086	1056	1027	992
					2	1261	1228	1198	1153	1129	1100
					3	1361	1310	1286	1262	1227	1201
					4	1478	1431	1405	1383	1351	1309
					5	1568	1536	1507	1470	1440	1400
M*VT37 Electric Heat	0.75	208/240	VF1	12 X 9	1	1466	1406	1249	1198	1150	1075
					2	1487	1454	1383	1328	1291	1231
					3	1516	1508	1462	1415	1365	1319
					4	1588	1600	1569	1520	1471	1423
					5	1672	1672	1657	1619	1557	1520
M*VT42 Electric Heat	0.75	208/240	VF1	12 X 9	1	1483	1458	1370	1315	1267	1238
					2	1524	1503	1445	1392	1343	1286
					3	1587	1607	1556	1512	1466	1423
					4	1671	1648	1667	1607	1572	1532
					5	1707	1685	1722	1678	1633	1599
M*VT48 Electric Heat	0.75	208/240	VF1	12 X 9	1	1579	1560	1544	1491	1445	1397
					2	1685	1671	1626	1587	1544	1507
					3	1739	1746	1711	1674	1629	1579
					4	1802	1778	1809	1764	1718	1682
					5	1876	1870	1896	1870	1836	1782
M*VT60 Electric Heat	0.75	208/240	VF1	12 X 9	1	1579	1560	1544	1491	1445	1397
					2	1685	1671	1626	1587	1544	1507
					3	1745	1734	1745	1712	1656	1616
					4	1958	1953	1943	1919	1874	1828
					5	2038	2015	2010	2005	1977	1934
M*VT72 Electric Heat	1.00	208/240	VV	12 X 10	1	1910	1865	1826	1787	1750	1715
					2	2088	2054	2019	1969	1932	1895
					3	2240	2201	2162	2129	2088	2050
					4	2370	2339	2290	2246	2208	2170
					5	2504	2470	2441	2393	2351	2310

**Table 8: M\*VT Blower Performance – Single-Stage Cooling/Heat Pump Electric Heat Models With Constant Torque Motors - Without Air Filters**

Notes: 1) Minimum CFM for Electric Heat: 5 - 10kW = 650 CFM; 15kW = 1000 CFM; 20 kW = 1400 CFM

2) For MMVT modular air handlers, the ESP in the table assumes a typical cooling coil has been installed on the air handler.

Model Number	Motor HP	Volts 1 Ph. 50/60 Hz.	Motor Code	Blower Wheel	Speed Tap	CFM @ 0.10" ESP	CFM @ 0.20" ESP	CFM @ 0.30" ESP	CFM @ 0.40" ESP	CFM @ 0.50" ESP	CFM @ 0.60" ESP
M*VT18 M*VT24 Hydronic Heat	0.50	115	VJ1	10 X 8	1	710	626	552	436	429	376
					2	848	788	732	646	552	537
					3	908	844	789	747	678	570
					4	1076	1020	972	899	808	667
					5	1187	1111	1040	962	842	691
M*VT24 Hydronic Heat	0.75	115	VK1	10 X 8	1	911	839	788	717	695	590
					2	1030	909	909	842	766	761
					3	1080	1023	976	920	849	780
					4	1158	1104	1038	985	917	861
					5	1254	1203	1146	1093	1035	973
M*VT30 Hydronic Heat	0.75	115	VK1	10 X 8	1	1018	973	935	902	858	808
					2	1065	1022	989	958	923	880
					3	1154	1118	1082	1051	1020	984
					4	1269	1231	1191	1166	1135	1111
					5	1358	1326	1294	1270	1237	1210
M*VT36 Hydronic Heat	0.75	115	VK1	10 X 8	1	1158	1121	1086	1053	1024	994
					2	1267	1236	1199	1166	1140	1105
					3	1358	1327	1290	1260	1236	1204
					4	1608	1545	1483	1414	1332	1255
					5	1643	1589	1512	1431	1351	1279
M*VT37 Hydronic Heat	1.00	115	VX1	12 X 10	1	1240	1202	1145	1088	1027	975
					2	1344	1307	1254	1202	1161	1096
					3	1409	1369	1324	1278	1237	1175
					4	1504	1453	1414	1373	1312	1273
					5	1589	1558	1504	1462	1409	1373
M*VT42 Hydronic Heat	1.00	115	VX1	12 X 10	1	1445	1395	1354	1306	1251	1215
					2	1522	1479	1440	1391	1344	1296
					3	1603	1571	1518	1484	1431	1381
					4	1692	1650	1615	1575	1530	1484
					5	1805	1758	1722	1681	1638	1595
M*VT48 Hydronic Heat	1.00	115	VX1	12 X 10	1	1592	1560	1511	1473	1430	1376
					2	1691	1658	1627	1576	1540	1494
					3	1789	1750	1717	1677	1631	1592
					4	1888	1847	1817	1771	1739	1695
					5	2162	2091	2031	1950	1880	1796
M*VT60 Hydronic Heat	1.00	115	VX1	12 X 10	1	1564	1523	1482	1421	1381	1336
					2	1653	1607	1564	1511	1477	1435
					3	1734	1701	1653	1618	1572	1523
					4	1895	1849	1818	1773	1730	1683
					5	2151	2085	2015	1939	1870	1776

**Table 9: M\*VT Blower Performance – Single-Stage Cooling/Heat Pump Hydronic Heat Models With Constant Torque Motors - Without Air Filters**

Note: For MMVT modular air handlers, the ESP in the table assumes a typical cooling coil has been installed on the air handler.

Model Number	Motor HP	Volts 1 Ph. 50/60 Hz	Blower Code	Blower Wheel	Speed Tap Descriptions	Speed Tap	CFM @ 0.10" E.S.P	CFM @ 0.20" E.S.P	CFM @ 0.30" E.S.P	CFM @ 0.40" E.S.P	CFM @ 0.50" E.S.P	CFM @ 0.60" E.S.P	CFM @ 0.70" E.S.P
M*VT18**B M*VT24**B Electric Heat	1/3	208/240	VD2	10 X 7	2nd Stage - 2.0 Tons	5	1062	999	938	873	799	785	707
					2nd Stage - 1.5 Tons	4	880	835	771	726	653	577	509
					1st Stage - 2.0 Tons	3	744	679	628	538	511	442	348
					1st Stage - 1.5 Tons	2	634	546	464	403	348	292	209
					All Heating kW's	1	962	906	836	768	776	704	646
M*VT25**B Electric Heat	1/2	208/240	VE2	10 X 8	2nd Stage - 2.0 Tons	5	1072	1015	952	880	810	776	700
					2nd Stage - 1.5 Tons	4	929	871	821	737	683	589	589
					1st Stage - 2.0 Tons	3	816	706	634	558	527	434	347
					1st Stage - 1.5 Tons	2	786	635	482	404	338	264	200
					All Heating kW's	1	980	933	860	791	720	709	627
M*VT30**B M*VT36**B Electric Heat	1/2	208/240	VE2	10 X 8	2nd Stage - 3.0 Tons	5	1467	1415	1356	1286	1272	1196	1095
					2nd Stage - 2.5 Tons	4	1280	1210	1140	1060	988	995	915
					1st Stage - 3.0 Tons	3	1061	1001	934	865	794	766	682
					1st Stage - 2.5 Tons	2	908	849	779	702	676	611	596
					All Heating kW's	1	1302	1221	1141	1065	982	992	923
M*VT37**B Electric Heat	3/4	208/240	VF2	12 X 9	2nd Stage - 3.0 Tons	5	1541	1500	1425	1349	1262	1172	1083
					2nd Stage - 2.5 Tons	4	1458	1320	1194	1088	1065	998	814
					1st Stage - 3.0 Tons	3	1319	1178	946	588	558	445	354
					1st Stage - 2.5 Tons	2	1306	1094	928	425	220	---	---
					All Heating kW's	1	1451	1320	1198	1097	1062	989	860
M*VT42**B M*VT48**B Electric Heat	3/4	208/240	VF2	12 X 9	2nd Stage - 4.0 Tons	5	1950	1896	1858	1801	1711	1611	1515
					2nd Stage - 3.5 Tons	4	1775	1726	1669	1600	1487	1384	1378
					1st Stage - 4.0 Tons	3	1464	1411	1260	1170	1062	978	945
					1st Stage - 3.5 Tons	2	1478	1352	1131	995	967	852	848
					All Heating kW's	1	1793	1759	1697	1623	1522	1464	1406
M*VT60**B Electric Heat	3/4	208/240	VF2	12 X 9	2nd Stage - 5.0 Tons	5	2100	2054	2016	1942	1865	1780	1681
					2nd Stage - 4.5 Tons	4	1942	1920	1870	1795	1696	1586	1485
					1st Stage - 5.0 Tons	3	1546	1480	1402	1295	1200	1182	1082
					1st Stage - 4.5 Tons	2	1498	1371	1226	1126	1026	1034	1026
					All Heating kW's	1	1663	1625	1545	1466	1368	1273	1170

**Table 10: M\*VT Blower Performance – 2-Stage Cooling/Heat Pump Models With Electric Heat & Constant Torque Motors – Without Air Filters**

- Notes: 1) Minimum CFM for Electric Heat: 5 - 10kW = 650 CFM; 15kW = 1000 CFM; 20 kW = 1400 CFM  
2) The motor speed tap for electric heat is connected to Speed Tap 1 on the motor terminal block from the factory. Speed tap 1 is designed to provide sufficient CFM for all kW's available in a specific model, but may result in a lower than desired supply temperature for lower kW heaters. The heating speed tap on the motor terminal block may be moved to another available speed tap with lower CFM as long as the minimum CFM requirement for the installed electric heater kW is met.  
3) For MMVT modular air handlers, the ESP in the table assumes a typical cooling coil has been installed on the air handler.

Model Number	Motor HP	Volts 1 Ph. 50/60 Hz	Blower Code	Blower Wheel	Speed Tap Descriptions	Speed Tap	CFM @ 0.10" E.S.P	CFM @ 0.20" E.S.P	CFM @ 0.30" E.S.P	CFM @ 0.40" E.S.P	CFM @ 0.50" E.S.P	CFM @ 0.60" E.S.P	CFM @ 0.70" E.S.P
M*VT18**B M*VT24**B Hydronic Heat	1/2	115	VJ2	10 x 8	2nd Stage - 2.0 Tons	5							
					2nd Stage - 1.5 Tons	4							
					1st Stage - 2.0 Tons	3							
					1st Stage - 1.5 Tons	2							
					Hyd Heat / Cont Fan	1							
M*VT25**B Hydronic Heat	3/4	115	VK2	10 x 8	2nd Stage - 2.0 Tons	5							
					2nd Stage - 1.5 Tons	4							
					1st Stage - 2.0 Tons	3							
					1st Stage - 1.5 Tons	2							
					Hyd Heat / Cont Fan	1							
M*VT30**B M*VT36**B Hydronic Heat	3/4	115	VK2	10 x 8	2nd Stage - 3.0 Tons	5							
					2nd Stage - 2.5 Tons	4							
					1st Stage - 3.0 Tons	3							
					1st Stage - 2.5 Tons	2							
					Hyd Heat / Cont Fan	1							
M*VT37**B Hydronic Heat	1	115	VX2	12 x 10	2nd Stage - 3.0 Tons	5							
					2nd Stage - 2.5 Tons	4							
					1st Stage - 3.0 Tons	3							
					1st Stage - 2.5 Tons	2							
					Hyd Heat / Cont Fan	1							
M*VT42**B M*VT48**B Hydronic Heat	1	115	VX2	12 x 10	2nd Stage - 4.0 Tons	5							
					2nd Stage - 3.5 Tons	4							
					1st Stage - 4.0 Tons	3							
					1st Stage - 3.5 Tons	2							
					Hyd Heat / Cont Fan	1							
M*VT60**B Hydronic Heat	1	115	VX2	12 x 10	2nd Stage - 5.0 Tons	5							
					2nd Stage - 4.5 Tons	4							
					1st Stage - 5.0 Tons	3							
					1st Stage - 4.5 Tons	2							
					Hyd Heat / Cont Fan	1							

MORE  
INFORMATION  
COMING SOON

**Table 11: M\*VT Blower Performance – 2-Stage Cooling/Heat Pump Models w/Hydronic Heat & Constant Torque Motors – Without Air Filters**

Note: For MMVT modular air handlers, the ESP in the table assumes a typical cooling coil has been installed on the air handler.

Model Number	Nominal Tons	Motor HP	Volts 1 Ph. 50/60 Hz.	Motor Code	Blower Wheel	Jumper	CFM @ 0.10"	CFM @ 0.20"	CFM @ 0.30"	CFM @ 0.40"	CFM @ 0.50"
M*VE18,24 Electric Heat	1.5 & 2.0	1/3	240	VA	9 X 6	A	837	837	824	817	806
						B	744	733	721	717	713
						C	705	697	689	681	677
						D	634	620	615	611	602
M*VE18,24 Hydronic Heat	1.5 & 2.0	1/3	120	VG	10X7	A	884	884	884	880	880
						B	799	792	789	789	789
						C	691	691	691	691	690
						D	589	589	589	589	584
M*VE25,30,36 Electric Heat	1.5 - 3.0	1/2	240	VB	10 X 7	A	1422	1421	1421	1416	1416
						B	1215	1214	1214	1214	1208
						C	898	989	989	982	969
						D	865	865	865	866	858
M*VE25,30,36 Hydronic Heat	1.5 - 3.0	1/2	120	VH	10 X 7	A	1294	1255	1200	1137	1058
						B	1131	1104	1075	1082	1023
						C	974	942	909	853	831
						D	808	769	736	702	657
M*VE37,42,48,60 Electric Heat	3.0 - 5.0	3/4	240	VC	12 X 9	A	1957	1919	1900	1871	1847
						B	1576	1565	1547	1517	1487
						C	1495	1482	1451	1432	1409
						D	1411	1385	1372	1338	1311
M*VE37,42,48,60 Hydronic Heat	3.0 - 5.0	1	120	VI	12 X 9	A	2001	1994	1994	1987	1972
						B	1820	1820	1820	1804	1796
						C	1587	1599	1604	1604	1604
						D	1385	1385	1385	1385	1385
M*VE72 Electric Heat	6.0	1	240	VU	12 X 10	A	2393	2393	2393	2393	2388
						B	2227	2227	2221	2221	2221
						C	2012	2012	2005	2005	2005
						D	1795	1795	1795	1795	1795
M*VE72 Hydronic Heat	6.0	1	120	VW	12 X 10	A	2132	2119	2091	2077	2063
						B	1921	1901	1901	1886	1886
						C	1724	1724	1724	1724	1707
						D	1508	1508	1508	1488	1488

**Table 12: M\*VE Blower Performance – Models With ECM Motors (Y1+Y2, W, W1, or W2) - Without Air Filters**

- Notes: 1) For single-stage cooling/heat pump systems, connect the wire from the “Y” thermostat terminal to both the “Y1” and “Y2” air handler low voltage pigtails to assure full nominal airflow.  
2) “Y1” CFM (1st stage cooling/heat pump heating) is approximately 70% of the values shown in Table 12.  
3) Continuous blower CFM is approximately 50% of the values shown in Table 12.  
4) Minimum CFM for Electric Heat: 5 - 10kW = 650 CFM; 15kW = 1000 CFM; 20 kW = 1400 CFM  
5) For MMVE Series modular air handlers, the ESP in the table assumes a typical cooling coil has been installed on the air handler.

## SECTION 9: ECM MOTOR CLIMATE PROFILES

The ECM motor has an extensive array of programmable features for varying air-flow as a function of time. These options are beneficial to enhance comfort and efficiency in furnaces, air conditioners and heat pumps.

The climate profiles can be adjusted in the installation to optimize comfort by moving the PROFILES jumper pin on the ECM control board (See Figure 19). The ECM motor supports four field selectable cooling profiles and a non-adjustable heating profiles. Each profile, which represents one complete thermostat cycle, has 4 unique components called Pre-Run, Short Run, Full Capacity, and Off Delay.

### Cooling Profiles (See Figure 21)

These profiles are used to provide dehumidification and improve system efficiency.

**Pre-Run Period** provides a reduced indoor airflow at compressor startup as a percentage of the selected cooling CFM for a specific duration of time to increase dehumidification of the air. The percentage of airflow reduction and duration varies with each profile.

**The Short Run Period** continues to provide a reduced airflow CFM to a lesser extent for a specific time to achieve various degrees of dehumidification and reduce re-evaporation. In arid climates, a profile can be selected that eliminates the short run period to achieve full capacity cooling sooner since additional dehumidification is unnecessary.

**The OFF Delay Period** is intended to allow the blower to run for a period of time after the compressor shuts off to allow the residual cooling capacity in the cold evaporator coil to be distributed into the conditioned space. For the humid climate profile, this time is programmed to zero to minimize re-evaporation of moisture in the evaporator coil and drain pan back into the conditioned space.

### Heating Profiles (See Figure 22)

These profiles are used to provide enhance comfort and to improve system efficiency. There are a variety of profiles available to accommodate most popular heating technologies. It may be desirable for a **gas or oil furnace** to have a short Pre-Run delay at very low airflow until the heat exchanger is up to an adequate temperature. At the end of the heating cycle, an OFF delay can be used to improve system efficiency by continuing to move air across the exchanger until the residual heat is removed. For **electric heat**, a relatively rapid increase of the airflow to full CFM is necessary to prevent overheating of the heating elements. Likewise, rapidly reducing the CFM to zero will prevent blowing cool air into the home after the heating elements have been de-energized. The standard **“Electric”** and **“Heat Pump Heating”** profiles are programmed into the motors used in this air handler and are not field adjustable.


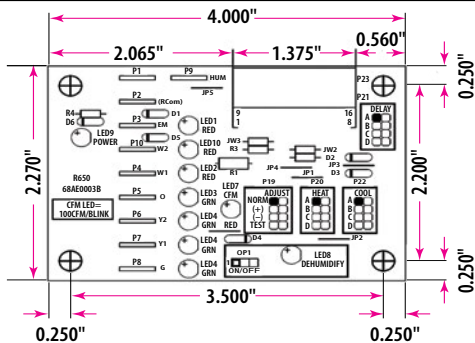


Figure 19: ECM Control Board Layout

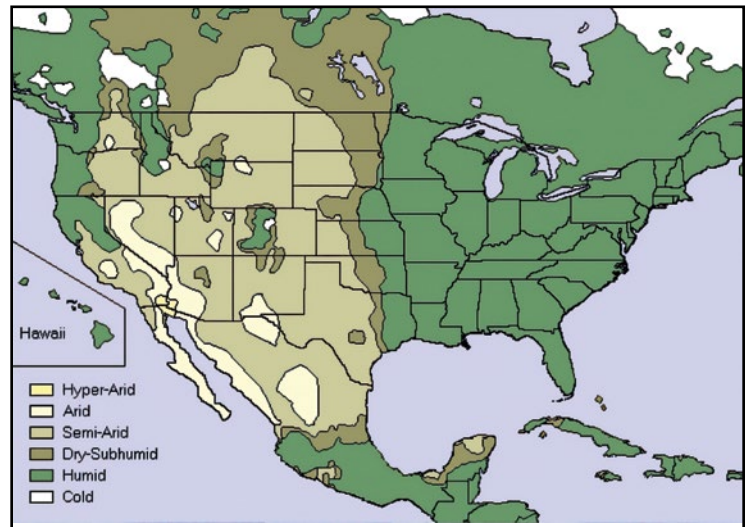

NOTE: Cold area is shaded in white in Canada only.

Figure 20: North America Climate Map

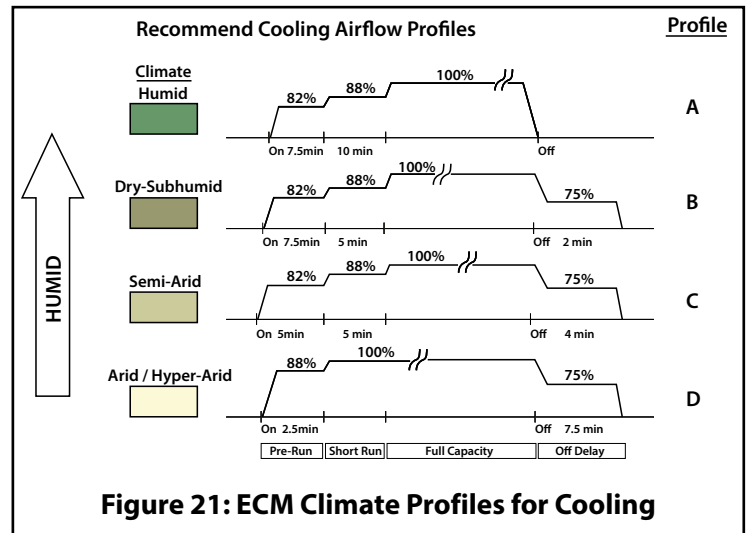


Figure 21: ECM Climate Profiles for Cooling


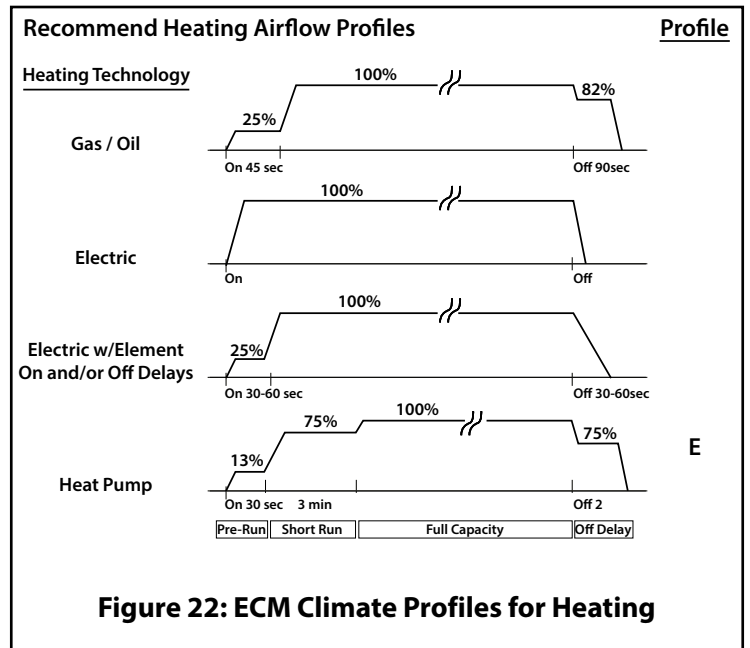


Figure 22: ECM Climate Profiles for Heating

**SECTION 10: ACCESSORIES AND REPLACEMENT PARTS**

<b>M*VE, M*VT</b>	
<b>Part #</b>	<b>Description</b>
DFK44-12-DX	Downflow Conversion Kit - Small Cabinet - 12 Tubes High - DX Coil (MS Series Only)
DFK44-14-DX	Downflow Conversion Kit - Small Cabinet - 14 Tubes High - DX Coil (MS Series Only)
DFK44-16-DX	Downflow Conversion Kit - Small Cabinet - 16 Tubes High - DX Coil (MS Series Only)
DFK44-16-CW	Downflow Conversion Kit - Small Cabinet - 16 Tubes High - Chilled Water Coil (MS Series Only)
DFK45-14-DX	Downflow Conversion Kit - Medium Cabinet - 14 Tubes High - DX Coil (MS Series Only)
DFK45-16-DX	Downflow Conversion Kit - Medium Cabinet - 16 Tubes High - DX Coil (MS Series Only)
DFK45-18-DX	Downflow Conversion Kit - Medium Cabinet - 18 Tubes High - DX Coil (MS Series Only)
DFK45-20-DX	Downflow Conversion Kit - Medium Cabinet - 20 Tubes High - DX Coil (MS Series Only)
DFK45-20-CW	Downflow Conversion Kit - Medium Cabinet - 20 Tubes High - Chilled Water Coil (MS Series Only)
DFK18-16-DX	Downflow Conversion Kit - Large Cabinet - 16 Tubes High - DX Coil (MS Series Only)
DFK18-18-DX	Downflow Conversion Kit - Large Cabinet - 18 Tubes High - DX Coil (MS Series Only)
DFK18-20-DX	Downflow Conversion Kit - Large Cabinet - 20 Tubes High - DX Coil (MS Series Only)
DFK18-22-DX	Downflow Conversion Kit - Large Cabinet - 22 Tubes High - DX Coil (MS Series Only)
DFK18-24-DX	Downflow Conversion Kit - Large Cabinet - 24 Tubes High - DX Coil (MS Series Only)
DFK18-28-DX	Downflow Conversion Kit - Large Cabinet - 28 Tubes High - DX Coil (MS Series Only)
DFK18-28-CW	Downflow Conversion Kit - Large Cabinet - 28 Tubes High - Chilled Water Coil (MS Series Only)
BSEHK05C	Small Cabinet 5 kW Heater Kit With Circuit Breakers - M*VE
BSEHK10C	Small Cabinet 10 kW Heater Kit With Circuit Breakers - M*VE
BSEHK15C	Small Cabinet 15 kW Heater Kit With Circuit Breakers - M*VE
BSEHK20C	Small Cabinet 20 kW Heater Kit With Circuit Breakers - M*VE
BMEHK05C	Medium Cabinet 5 kW Heater Kit With Circuit Breakers- M*VE
BMEHK10C	Medium Cabinet 10 kW Heater Kit With Circuit Breakers - M*VE
BMEHK15C	Medium Cabinet 15 kW Heater Kit With Circuit Breakers - M*VE
BMEHK20C	Medium Cabinet 20 kW Heater Kit With Circuit Breakers - M*VE
BLEHK05C	Large Cabinet 5 kW Heater Kit With Circuit Breakers - M*VE
BLEHK10C	Large Cabinet 10 kW Heater Kit With Circuit Breakers - M*VE
BLEHK15C	Large Cabinet 15 kW Heater Kit With Circuit Breakers - M*VE
BLEHK20C	Large Cabinet 20 kW Heater Kit With Circuit Breakers - M*VE
BSXHK05C	Small Cabinet 5 kW Heater Kit With Circuit Breakers - M*VT
BSXHK10C	Small Cabinet 10 kW Heater Kit With Circuit Breakers - M*VT
BSXHK15C	Small Cabinet 15 kW Heater Kit With Circuit Breakers - M*VT
BSXHK20C	Small Cabinet 20 kW Heater Kit With Circuit Breakers - M*VT
BMXHK05C	Medium Cabinet 5 kW Heater Kit With Circuit Breakers - M*VT
BMXHK10C	Medium Cabinet 10 kW Heater Kit With Circuit Breakers - M*VT
BMXHK15C	Medium Cabinet 15 kW Heater Kit With Circuit Breakers - M*VT
BMXHK20C	Medium Cabinet 20 kW Heater Kit With Circuit Breakers - M*VT
BLXHK05C	Large Cabinet 5 kW Heater Kit With Circuit Breakers - M*VT
BLXHK10C	Large Cabinet 10 kW Heater Kit With Circuit Breakers - M*VT
BLXHK15C	Large Cabinet 15 kW Heater Kit With Circuit breakers - M*VT
BLXHK20C	Large Cabinet 20 kW Heater Kit With Circuit Breakers - M*VT
R72DB0005	Field Installed Thermal Expansion Valve - 15% Bleed - R-22 - 1.5 - 3.0 Tons
R72DB0003	Field Installed Thermal Expansion Valve - 15% Bleed - R-410A - 1.5 - 2.5 Tons
R72DB0006	Field Installed Thermal Expansion Valve - 15% Bleed - R-22 - 3.0 - 5.0 Tons
R72DB0044	Field Installed Thermal Expansion Valve - Non Bleed - R-410A - 3.5 - 6.0 Tons
86ET0001	Accessory 20 x 20 x 2 Filter Base Kit
86ET0002	Accessory 16 x 20 x 2 Filter Base Kit
86ET0003	Accessory 20 x 24 x 2 Filter Base Kit

**Table 13: Accessory List**

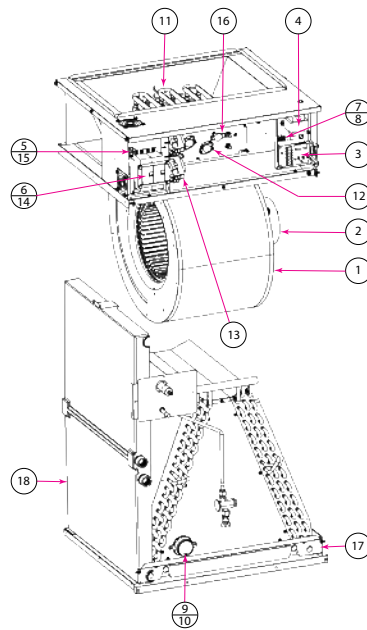

**Figure 23: M\*V\* Electric Heat Air Handler Replacement Parts Schematic**

<b>M*V* 18, 24 COOL ONLY OR ELECTRIC HEAT</b>			
Item #	Qty	Part #	Description
1	1	R69AD0001	9 x 6 Blower Assembly
2	1	R65BV0001	1/3 HP 208/230 VAC ECM Blower Motor - M*VE
2	1	R65BV0025	1/3 HP 208/230 VAC Constant Torque Blower Motor - M*VT
3	1	R68AE0003	ECM Blower Motor Control Board - M*VE
4	1	R68AA0003	208/240 VAC to 24 VAC Transformer
5	1	R66GF0022	Ground Lug
6	1	R68DC0018	Power Terminal Block
7	1	R73MH0001	3 Amp Glass Tube Fuse
8	1	R73MHA001	Fuse Holder
9	1	R68ALL001	R-32 Refrigerant Leak Sensor
9	1	R68ALL002	R-454B Refrigerant Leak Sensor
9	1	R68ALL003	R-32/R-454B Refrigerant Leak Sensor (Dual Refrigerant Sensor)
10	1	R73BB0053	Refrigerant Leak Sensor Wire Harness
<b>5 kW Electric Heat M*V* 18, 24</b>			
11	1	R67AB0034	5 kW Electric Heater Element
12	1	R68CA0009	Limit Switch - Opens 165°F - Closes 135°F
13	1	R68AB0019	Double Pole Electric Heater Contactor
14	1	R68BAD013	30 Amp Circuit Breaker
15	1	R68GF0022	Ground Lug - 1/0-14 Wire
16	1	R68CA0011	Non-Resettable Limit Switch - Opens 190°F
<b>10 kW Electric Heat M*V* 18, 24</b>			
11	1	R67AB0038	10 kW Electric Heater Element
12	2	R68CA0009	Limit Switch - Opens 165°F - Closes 135°F
13	1	R68AB0019	Double Pole Electric Heater Contactor
14	1	R68BAD018	60 Amp Circuit Breaker
15	1	R68GF0022	Ground Lug - 1/0-14 Wire
16	2	R68CA0011	Non-Resettable Limit Switch - Opens 190°F
<b>Drain Pans (Plastic) - MSV* Only</b>			
17	1	R86EB0202	16.625"W x 19.000" D - Vertical (71AA0013)
18	1	R86EB0252	20.250"W x 19.500" D - Horizontal (71AA0046)

**Table 14: M\*V\* 18, 24 Electric Heat Air Handler Replacement Parts List**


**M\*V\* 25, 30, 36 COOL ONLY OR ELECTRIC HEAT**

Item #	Qty	Part #	Description
1	1	R69AD0002	10 x 7 Blower Assembly
2	1	R65BV0002	1/2 HP 208/230 VAC ECM Blower Motor - M*VE
2	1	R65BV0026	1/2 HP 208/230 VAC Constant Torque Blower Motor - M*VT
3	1	R68AE0003	ECM Blower Motor Control Board - M*VE
4	1	R68AA0003	208/240 V AC to 24 VAC Transformer
5	1	R66GF0022	Ground Lug
6	1	R68DC0018	Power Terminal Block
7	1	R73MH0001	3 Amp Glass Tube Fuse
8	1	R73MHA001	Fuse Holder
9	1	R68ALL001	R-32 Refrigerant Leak Sensor
9	1	R68ALL002	R-454B Refrigerant Leak Sensor
9	1	R68ALL003	R-32/R-454B Refrigerant Leak Sensor (Dual Refrigerant Sensor)
10	1	R73BB0053	Refrigerant Leak Sensor Wire Harness
<b>5 kW Electric Heat M*V* 25, 30, 36</b>			
11	1	R67AB0034	5 kW Electric Heater Element
12	1	R68CA0009	Limit Switch - Opens 165°F - Closes 135°F
13	1	R68AB0019	Double Pole Electric Heater Contactor
14	1	R68BAD013	30 Amp Circuit Breaker
15	1	R68GF0022	Ground Lug - 1/0-14 Wire
16	1	R68CA0011	Non-Resettable Limit Switch - Opens 190°F
<b>10 kW Electric Heat M*V* 25, 30, 36</b>			
11	1	R67AB0038	10 kW Electric Heater Element
12	2	R68CA0009	Limit Switch - Opens 165°F - Closes 135°F
13	1	R68AB0019	Double Pole Electric Heater Contactor
14	1	R68BAD018	60 Amp Circuit Breaker
15	1	R68GF0022	Ground Lug - 1/0-14 Wire
16	2	R68CA0011	Non-Resettable Limit Switch - Opens 190°F
<b>15 kW Electric Heat M*V* 25, 30, 36</b>			
11	1	R67AB0034	5 kW Electric Heater Element
11	1	R67AB0038	10 kW Electric Heater Element
12	3	R68CA0009	Limit Switch - Opens 165°F - Closes 135°F
13	2	R68AB0019	Double Pole Electric Heater Contactor
14	1	R68BAD018	60 Amp Circuit Breaker
14	1	R68BAD013	30 Amp Circuit Breaker
15	2	R68GF0022	Ground Lug - 1/0-14 Wire
16	3	R68CA0011	Non-Resettable Limit Switch - Opens 190°F
<b>Drain Pans (Plastic) - MSV* Only</b>			
17	1	R86EB0204	19.625" W x 19.000" D - Vertical (71A A 0015)
18	1	R86EB0222	23.875" W x 19.500" D - Horizontal (71A A 0031)

**Table 15: M\*V\* 25, 30, 36 Electric Heat Air Handler Replacement Parts List**

<b>M*V* 37, 42, 48, 60, 72 COOL ONLY OR ELECTRIC HEAT</b>			
Item #	Qty	Part #	Description
1	1	R69AD0017	12 x 9 Blower Assembly - M*V*37, 42, 48, 60
1	1	R69AD0019	12 x 10 Blower Assembly - M*V*72
2	1	R65BV0003	3/4 HP 208/230 VAC ECM Blower Motor - M*VE37, 42, 48, 60
2	1	R65BV0027	3/4 HP 208/230 VAC Constant Torque Blower Motor - M*VE37, 42, 48, 60
2	1	R65BV0004	1.0 HP 208/230 VAC ECM Blower Motor - M*VE 72
2	1	R65BV0028	1.0 HP 208/230 VAC Constant Torque Blower Motor - M*VT72
3	1	R68AE0003	ECM Blower Motor Control Board - M*VE
4	1	R68AA0003	208/240 VAC to 24 VAC Transformer
5	1	R66GF0022	Ground Lug
6	1	R68DC0018	Power Terminal Block
7	1	R73MH0001	3 Amp Glass Tube Fuse
8	1	R73MHA001	Fuse Holder
9	1	R68ALL001	R-32 Refrigerant Leak Sensor
9	1	R68ALL002	R-454B Refrigerant Leak Sensor
9	1	R68ALL003	R-32/R-454B Refrigerant Leak Sensor (Dual Refrigerant Sensor)
10	1	R73BB0053	Refrigerant Leak Sensor Wire Harness
<b>5 kW Electric Heat M*V* 25, 30, 36</b>			
11	1	R67AB0034	5 kW Electric Heater Element
12	1	R68CA0009	Limit Switch - Opens 165°F - Closes 135°F
13	1	R68AB0019	Double Pole Electric Heater Contactor
14	1	R68BAD013	30 Amp Circuit Breaker
15	1	R68GF0022	Ground Lug - 1/0-14 Wire
16	1	R68CA0011	Non-Resettable Limit Switch - Opens 190°F
<b>10 kW Electric Heat M*V* 37, 42, 48, 60, 72</b>			
11	1	R67AB0038	10 kW Electric Heater Element
12	2	R68CA0009	Limit Switch - Opens 165°F - Closes 135°F
13	1	R68AB0019	Double Pole Electric Heater Contactor
14	1	R68BAD018	60 Amp Circuit Breaker
15	1	R68GF0022	Ground Lug - 1/0-14 Wire
16	2	R68CA0011	Non-Resettable Limit Switch - Opens 190°F
<b>15 kW Electric Heat M*V*25, 30, 36, 42, 48, 60, 72</b>			
11	1	R67AB0034	5 kW Electric Heater Element
11	1	R67AB0038	10 kW Electric Heating Element
12	3	R68CA0009	Limit Switch - Opens 165°F - Closes 135°F
13	2	R68AB0019	Double Pole Electric Heater Contactor
14	1	R68BAD018	60 Amp Circuit Breaker
14	1	R68BAD013	30 Amp Circuit Breaker
15	2	R68GF0022	Ground Lug - 1/0-14 Wire
16	3	R68CA0011	Non-Resettable Limit Switch - Opens 190°F
<b>20 kW Electric Heat M*V* 37, 42, 48, 60, 72</b>			
11	2	R67AB0038	20 kW Electric Heater Element
12	4	R68CA0009	Limit Switch - Opens 165°F - Closes 135°F
13	2	R68AB0019	Double Pole Electric Heater Contactor
14	1	R68BAD018	60 Amp Circuit Breaker
15	2	R68GF0022	Ground Lug - 1/0-14 Wire
16	4	R68CA0011	Non-Resettable Limit Switch - Opens 190°F
<b>Drain Pans (Plastic) - MSV* Only</b>			
17	1	R86EB0250	23.625"W x 20.500"D - Vertical (71A A 0037)
18	1	R86EB0251	32.125"W x 20.750"D - Horizontal (71A A 0038)

**Table 16: M\*V\* 37, 42, 48, 60, 72 Electric Heat Air Handler Replacement Parts List**

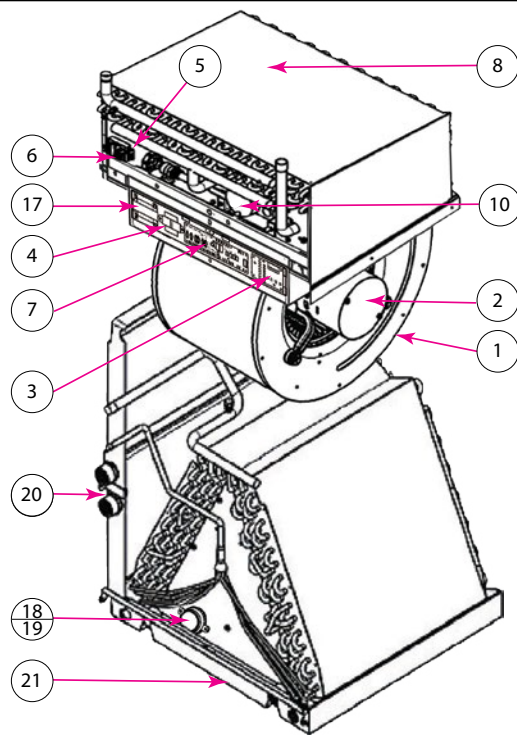

**Figure 24: M\*V\* Hydronic Heat Air Handler Replacement Parts Schematic**

<b>M*V* 18, 24 COOL ONLY OR HYDRONIC HEAT</b>			
Item #	Qty	Part #	Description
1	1	R69AD0002	10 x 7 Blower Assembly
2	1	R65BV0001	1/3 HP 115 VAC ECM Blower Motor - M*VE
2	1	R65BV0021	1/3 HP 115 VAC Constant Torque Blower Motor - M*VE
3	1	R68AE0003	ECM Blower Motor Control Board - M*VE
4	1	R68AA0002	120 VAC to 24 VAC Transformer
5	1	R68DC0001	Ground Lug
6	1	R68DC0018	Power Terminal Block
7	1	R68AE0011	Hydronic Control Board
8	1	R86CH0017	2 Row Hydronic Coil 14.75 x 16
8	1	R86CH0018	3 Row Hydronic Coil 14.75 x 16
8	1	R86CH0025	4 Row Hydronic Coil 14.75 x 16
9	1	R68DC0045	3 Amp Automotive Blade Fuse
10	1	R78AA0007	4 GPM Pump 115 VAC
11	1	R68DD0005	White Wire Freeze Protector
12	1	R68DD0006	Yellow Wire Compressor Lockout Switch
13	1	R66AB0006	Sensor Clip HW/AH
14	1	R74BA0004	Valve - Air Bleed Body
15	2	R74BA0005	Valve - Air Bleed Core
16	1	R74BB0001	1/2" Boiler Drain
18	1	R68ALL001	R-32 Refrigerant Leak Sensor
18	1	R68ALL002	R-454B Refrigerant Leak Sensor
18	1	R68ALL003	R-32/R-454B Refrigerant Leak Sensor (Dual Refrigerant Sensor)
19	1	R73BB0053	Refrigerant Leak Sensor Wire Harness
<b>Drain Pans (Plastic) - MSV* Only</b>			
20	1	R86EB0202	16.625" W x 19.000" D - Vertical (71AA0013)
21	1	R86EB0252	20.250" W x 19.500" D - Horizontal (71AA0046)

**Table 17: M\*V\* 18, 24 Hydronic Heat Air Handler Replacement Parts List**

<b>M*V* 25, 30, 36 COOL ONLY OR HYDRONIC HEAT</b>			
<b>Item #</b>	<b>Qty</b>	<b>Part #</b>	<b>Description</b>
1	1	R69AD0002	10 x 7 Blower Assembly
2	1	R65BV0002	1/2 HP 115 VAC ECM Blower Motor - M*VE
2	1	R65BV0022	1/2 HP 115 VAC Constant Torque Blower Motor - M*VT
3	1	R68AE0003	ECM Blower Motor Control Board - M*VE
4	1	R68AA0002	120 VAC to 24 VAC Transformer
5	1	R68DC0001	Ground Lug
6	1	R68DC0018	Power Terminal Block
7	1	R68AE0011	Hydronic Control Board
8	1	R86CH0019	2 Row Hydronic Coil 14.75 x 20
8	1	R86CH0020	3 Row Hydronic Coil 14.75 x 20
8	1	R86CH0021	4 Row Hydronic Coil 14.75 x 20
9	1	R68DC0045	3 Amp Automotive Blade Fuse
10	1	R78AA0007	4 GPM Pump 115 VAC
11	1	R68DD0005	White Wire Freeze Protector
12	1	R68DD0006	Yellow Wire Compressor Lockout Switch
13	2	R66AB0006	Sensor Clip HW/AH
14	1	R74BA0004	Valve - Air Bleed Body
15	1	R74BA0005	Valve - Air Bleed Core
16	1	R74BB0001	1/2" Boiler Drain
18	1	R68ALL001	R-32 Refrigerant Leak Sensor
18	1	R68ALL002	R-454B Refrigerant Leak Sensor
18	1	R68ALL003	R-32/R-454B Refrigerant Leak Sensor (Dual Refrigerant Sensor)
19	1	R73BB0053	Refrigerant Leak Sensor Wire Harness
<b>Drain Pans (Plastic) - MSV* Only</b>			
20	1	R86EB0204	19.625" W x 19.000" D - Vertical (71AA0015)
21	1	R86EB0222	23.875" W x 19.500" D - Horizontal (71AA0031)

**Table 18: M\*V\* 25, 30, 36 Hydronic Heat Air Handler Replacement Parts List**

**M\*V\* 37, 42, 48, 60, 72 COOL ONLY OR HYDRONIC HEAT**

Item #	Qty	Part #	Description
1	1	R69AD0017	12 x 9 Blower Assembly - M*V*37, 42, 48, 60
1	1	R69AD0019	12 x 10 Blower Assembly - M*V*72
2	1	R65BV0004	1.0 HP 115 VAC ECM Blower Motor - M*VE
2	1	R65BV0024	1.0 HP 115 VAC Constant Torque Blower Motor - M*VT
3	1	R68AE0003	ECM Blower Motor Control Board - M*VE
4	1	R68AA0002	115 VAC to 24 VAC Transformer
5	1	R68DC0001	Ground Lug
6	1	R68DC0018	Power Terminal Block
7	1	R68AE0011	Hydronic Control Board
8	1	R86CH0022	2 Row Hydronic Coil 15.75 x 24
8	1	R86CH0023	3 Row Hydronic Coil 15.75 x 24
8	1	R86CH0024	4 Row Hydronic Coil 15.75 x 24
9	1	R68DC0045	3 Amp Automotive Blade Fuse
10	1	R78AA0008	7 GPM Pump 115 VAC
11	1	R68DD0005	White Wire Freeze Protector
12	1	R68DD0006	Yellow Wire Compressor Lockout Switch
13	2	R66AB0006	Sensor Clip HW/AH
14	1	R74BA0004	Valve - Air Bleed Body
15	1	R74BA0005	Valve - Air Bleed Core
16	1	R74BB0001	1/2" Boiler Drain
17	1	R68AA0004	Choke - Used on 1.0 HP M*VE Motors
18	1	R68ALL001	R-32 Refrigerant Leak Sensor
18	1	R68ALL002	R-454B Refrigerant Leak Sensor
18	1	R68ALL003	R-32/R-454B Refrigerant Leak Sensor (Dual Refrigerant Sensor)
19	1	R73BB0053	Refrigerant Leak Sensor Wire Harness
<b>Drain Pans (Plastic) - MSV* Only</b>			
20	1	R86EB0250	23.625" W x 20.500" D - Vertical (71AA0037)
21	1	R86EB0251	32.125" W x 20.750" D - Horizontal (71AA0038)

**Table 19: M\*V\* 37, 42, 48, 60, 72 Hydronic Heat Air Handler Replacement Parts List**

When the air handler is at the end of its life and is being removed for replacement, proper procedures must be followed to assure the safety of the technician and building occupants due to the flammable refrigerant contained in the refrigeration system. Before performing this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being performed, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of recovered refrigerant. It is essential that electrical power is available before the task is commenced.

#### Decommissioning Procedure

- a) Become familiar with the equipment and its operation
- b) Before attempting the procedure, ensure that:
  - mechanical handling equipment is available, if required, for handling refrigerant cylinders;
  - all personal protective equipment is available and being used correctly;
  - the recovery process is supervised at all times by a competent person;
  - recovery equipment and cylinders conform to the appropriate standards.
- c) Pump down the refrigerant into the outdoor unit, if possible, by closing the outdoor unit liquid service valve and energizing the compressor until the suction pressure is near atmospheric pressure. If pumping the system down is not possible due to an inoperable compressor, the refrigerant must be recovered.
- d) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- e) Make sure that the recovery cylinder is situated on the scales before recovery takes place.
- f) Start the recovery machine and operate in accordance with instructions. (Also, refer to Refrigerant Recovery Requirements in the next column.)
- g) Do not overfill cylinders (no more than 80 % volume liquid charge).
- h) Do not exceed the maximum working pressure of the cylinder, even temporarily.
- i) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- j) Recovered refrigerant shall not be charged into another refrigerating system unless it has been cleaned and checked.
- k) Once all of the refrigerant has been pumped into the outdoor unit or has been recovered, disconnect the refrigerant lines from the air handler. Continuously flush or purge with inert gas when using a flame to open the circuit at the field refrigerant line connections.
- l) Turn the circuit breaker(s) serving the air handler in the main electrical panel to the OFF position. If a disconnect switch has been installed near the air handler, switch it to the OFF position.
- m) Disconnect all electrical wiring from the air handler.
- n) Once the refrigerant lines and electrical wiring have been disconnected from the air handler, remove the air handler from the property and dispose of it. Taking the air handler to a recycling center is encouraged.
- o) Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. For appliances containing flammable refrigerants, ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

#### Refrigerant Recovery Requirements

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge is available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of the flammable refrigerant. If in doubt, the manufacturer should be consulted. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition.

The recovered refrigerant shall be processed according to local legislation in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The compressor body shall not be heated by an open flame or other ignition sources to accelerate this process. When oil is drained from a system, it shall be performed safely.