

HORIZONTAL AIR HANDLER MODELS:

- HEU1 - DX COOLING W/ ELECTRIC HEAT, UNCASD
- HEC1 - DX COOLING W/ ELECTRIC HEAT, CASD
- HEU3 - CHILLED WATER COOLING W/ELECTRIC HEAT, UNCASD-2P
- HEC3 - CHILLED WATER COOLING W/ ELECTRIC HEAT, CASD-4P

- HEU2 - DX COOLING W/ HOT WATER HEAT, UNCASD
- HEC2 - DX COOLING W/ HOT WATER HEAT, CASD
- HEU4 - CHILLED WATER COOL W/HOT WATER HEAT,UCASD-4P
- HEC4 - CHILLED WATER COOL W/HOT WATER HEAT, CASD-4P

LIST OF SECTIONS - USERS INFORMATION MANUAL

| | | | |
|---|---|--|---|
| 1 – General..... | 1 | 4 – Startup and Shutdown Instructions..... | 5 |
| 2 – Safety..... | 2 | 5 – Owner Maintenance..... | 5 |
| 3 – Owner’s Information and Seasonal Information..... | 3 | | |

LIST OF SECTIONS -SERVICE AND MAINTENANCE MANUAL

| | | | |
|----------------------------------|----|-----------------------------|----|
| 1 – Safety..... | 7 | 5 – Trouble Shooting..... | 13 |
| 2 – Air Handler Maintenance..... | 8 | 6 – Blower Performance..... | 16 |
| 3 – Air Handler Controls..... | 10 | 7 – Accessories..... | 19 |
| 4 – Sequence of Operation..... | 12 | 8 – Replacement Parts..... | 20 |

LIST OF FIGURES

| | | | |
|--|----|---|----|
| 1 – Air Handler Visual Examination Check Points..... | 4 | 14 – Constant Torque Motor Terminals..... | 13 |
| 2 – Homeowner / User Cleaning Points..... | 5 | 15 – HICM AY1015 Hydronic Control Board..... | 14 |
| 3 – Louvered Ceiling Access Panel Air Filter Location..... | 6 | 16 – Blower Assembly..... | 15 |
| 4 – Typical 1” Disposable Air Filter..... | 6 | 17 – Blower Motor Mount Retainer Clip Removal..... | 15 |
| 5 – Optional Return Air Filter Grille..... | 6 | 18 – HE*1/HE*3 - 18, 19, 24 Electric Ht Replacement Part Schematic..... | 20 |
| 6 – No Electric Heat Control Box..... | 8 | 19 – HE*1/HE*3 - 25, 30, 31 Electric Ht Replacement Part Schematic..... | 21 |
| 7 – Electric Heat Control Box..... | 8 | 20 – HE*1/HE*3 - 34, 35 Electric Heat Replacement Part Schematic..... | 22 |
| 8 – Blower Assembly..... | 9 | 21 – HE*1/HE*3- 36, 37 Electric Heat Replacement Part Schematic..... | 23 |
| 9 – Component Locations – Electric Heat Models..... | 9 | 22 – HE*2/HE*4 - 18, 19, 24 Hyd Ht Replacement Part Schematic..... | 24 |
| 10 – Electric Heater Contactor..... | 9 | 23 – HE*2/HE*4 - 25, 30, 31 Hyd Ht Replacement Parts Schematic..... | 25 |
| 11 – Component Locations – Hydronic Heat Models..... | 10 | 24 – HE*2/HE*4 - 34, 35 Hydronic Ht Replacement Parts Schematic..... | 26 |
| 12 – Hydronic Heat Control Box – No Pump..... | 10 | 25 – HE*2/HE*4 - 36, 37 Hydronic Ht Replacement Parts Schematic..... | 27 |
| 13 – ICM AY1015 Hydronic Control Board..... | 10 | | |

LIST OF TABLES

| | | | |
|---|----|---|----|
| 1 – 208/240 Volt Blower Motor FLA – Electric Heat Models..... | 13 | 10 – HE*1/HE*3 – 18, 19, 24 - Electric Heat Replacement Parts List..... | 20 |
| 2 – Constant Torque Motor Terminals – Electric Heat Models..... | 14 | 11 – HE*1/HE*3 – 25, 30, 31 - Electric Heat Replacement Parts List..... | 21 |
| 3 – 115 Volt Blower Motor FLA – Hydronic Heat Models..... | 14 | 12 – HE*1/HE*3 – 34, 35 - Electric Heat Replacement Parts List..... | 22 |
| 4 – Constant Torque Motor Terminals – Hydronic Heat Models..... | 14 | 13 – HE*1/HE*3 – 36, 37 - Electric Heat Replacement Parts List..... | 23 |
| 5 – HE*1/HE*3 Blower Performance – CFM..... | 16 | 14 – HE*2/HE*4 – 18, 19, 24 - Hydronic Heat Replacement Parts List..... | 24 |
| 6 – HE*1/HE*3 Blower Performance – Motor Amps..... | 17 | 15 – HE*2/HE*4 – 25, 30, 31 - Hydronic Heat Replacement Parts List..... | 25 |
| 7 – HE*2/HE*4 Blower Performance – CFM..... | 18 | 16 – HE*2/HE*4 – 34, 35 - Hydronic Heat Replacement Parts List..... | 26 |
| 8 – HE*2/HE*4 Blower Performance – Motor Amps..... | 19 | 17 – HE*2/HE*4 – 35, 36 - Hydronic Heat Replacement Parts List..... | 27 |
| 9 – Accessory List..... | 19 | | |

CONTACT INFORMATION

Contact us by mail: Manufactured and Distributed by

Mortex Products Inc
501 Terminal Rd
Fort Worth, TX 76106

www.mortex.com

SECTION 1: GENERAL

The following list includes important facts and information regarding this air handler.

1. Electric heat air handlers are rated for 208 - 240 VAC at 60 Hz and hydronic air handlers are rated for 115 VAC at 60 Hz.
2. Air handler is not designed to be operated on a 50 Hz power supply.
3. All models are capable of cooling only and heat pump operation.
4. Air handler is designed for horizontal applications only.
5. This air handler must not be operated with the control box cover removed.
6. This air handler is listed by ETL for sale in the United States and Canada.
7. This air handler is for use at elevations of 10,000 ft (3,048m) or less.
8. This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this appliance by a person responsible for their safety.

USERS MUST READ ALL INSTRUCTIONS IN THIS MANUAL.

THIS MANUAL MUST BE SAVED FOR FUTURE REFERENCE.



This is a safety alert symbol. When you see this symbol on labels or in manuals, be alert to the potential for personal injury. Understand and pay particular attention to the signal words **DANGER**, **WARNING**, or **CAUTION**.

DANGER: Indicates an imminently hazardous situation, which if not avoided, **will result in death or serious injury**.

WARNING: Indicates a potentially hazardous situation, which if not avoided, **could result in death or serious injury**.

CAUTION: Indicates a potentially hazardous situation, which if not avoided, **may result in minor or moderate injury**. It is also used to alert against unsafe practices and hazards involving property damage.

WARNING

FIRE OR ELECTRICAL HAZARD

Failure to follow the safety warnings exactly could result in serious injury, death, or property damage.

A fire or electrical hazard may result causing property damage, personal injury or loss of life.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this air handler or any other appliance.

WARNING

Any adjustment, service or maintenance by the homeowner and/or user may create a condition where the operation of the product could cause personal injury or property damage.

Only qualified service personnel, a contractor, or an installer may refer to the service and maintenance section of this manual for assistance or for additional service or repair information on this air handler.

CAUTION

This product requires periodic routine maintenance and cleaning of the exterior surfaces by the homeowner or user to remove dust and debris. Any additional service must be performed by qualified personnel. This air handler must be serviced and maintained as specified in these instructions and/or to any applicable local, state, and national codes including, but not limited to building, electrical, and mechanical codes.

DANGER

Do not use this air handler if any part has been under water. A flood damaged air handler is extremely dangerous. Attempts to use the air handler can result in a fire. A qualified contractor, installer, or service agency must be contacted to inspect the air handler for any water damage and replace all components, control system parts, or electrical parts that have been damaged. If enough damage is present, the air handler may need to be replaced.

WARNING

FIRE OR ELECTRICAL HAZARD

Servicing heating/cooling equipment can be hazardous due to electrical components.

Only trained and qualified personnel can service or repair heating/cooling equipment. The homeowner must never try to perform service, repair or maintenance on this air handler.

Untrained service personnel can perform only basic maintenance functions such as cleaning of exterior surfaces and replacing the air filters **ONLY!**

Observe all precautions in the manuals and on the attached labels when working on this air handler.

SAFETY REQUIREMENTS

1. This air handler must be kept clear and free of combustible materials, gasoline and other flammable vapors and liquids.
2. Never store flammable materials of any kind near this air handler. Gasoline, solvents and other volatile liquids should be stored only in approved containers outside the home. These materials vaporize easily and are extremely dangerous.
3. Insulating materials may be combustible. The air handler must be kept free and clear of insulating materials. The air handler area must be examined when installed in an insulated space or when insulation is added to be sure that the insulation material has been kept away from the air handler.
4. Follow the instructions exactly as shown in **Section 4: Startup and Shutdown Instructions** in this manual to properly start up or shut down this air handler. If overheating occurs, turn off the power to the air handler and contact a qualified contractor, installer, or service agency.
5. Never store cleaning materials such as bleaches, detergents, powder cleaners, etc. near the air handler. These chemicals can cause corrosion of the air handler sheet metal, electric heaters, blower and electrical controls.
6. Never use the area around the air handler as a storage area for items which could block or obstruct the normal air flow to the air handler or the space around the air handler. The flow of air is required for safe and proper operation. Never block or obstruct air openings used for ventilation and cooling of the air handler electrical components.

7. Refer to the air handler rating plate for the air handler model number for requirements for safe operation.
8. Provide adequate clearance for service access to the control box, electric heating elements, hydronic coil, and blower.
9. Failure to carefully read and follow all instructions in this manual can result in malfunction of the air handler which can cause death, personal injury, and/or property damage.
10. If the air handler is installed in a residential garage, it must be installed so that the electric heaters are located not less than 18 inches above the floor. The air handler must be located or protected to avoid physical damage by vehicles.
11. These instructions cover minimum requirements and conform to existing national standards and safety codes. In some cases, these instructions exceed certain local codes and ordinances, especially those who have not kept up with changing modular home and residential home construction practices. These instructions are to be followed and are the minimum requirement to perform service or repairs on this air handler.

SECTION 3: OWNERS INFORMATION AND SEASONAL INFORMATION

How The Air Handler Works – Heating Cycle

Electric Heat Models - Heating Cycle

When the thermostat calls for heat on an electric heat model, 24 VAC is sent through the limit controls to the heater contactor coil. The contactor electrical contacts close which sends 208 - 240 VAC to the electric heating elements causing them to get hot. The indoor fan motor is then energized on the selected heating speed tap and the circulating blower draws cool air from the living space, passes it across the heater elements, and pushes the warmed air through the duct work into the living space. When the thermostat is satisfied, the electric heating elements and indoor fan motor are de-energized. The heating cycle has ended and the air handler is in the stand-by mode until the thermostat initiates the next call for heat..

Hydronic Heat Models - Heating Cycle

When the thermostat calls for heat on a hydronic heating model, 24 VAC is sent to the "W" terminal on the electronic hydronic control board. If the air handler is equipped with a water pump, the control board will energize the pump causing hot water to flow through the hot water coil which causes the coil to get hot. The indoor fan motor is energized on the heating speed tap (speed tap connected to the LOW terminal on the hydronic control board) after the selected "ON" time delay and the circulating blower draws cool air from the living space, passes it across the hot water coil and pushes the warmed air through the duct work into the living space. When the thermostat is satisfied, the circulating pump is de-energized and the blower is also de-energized after the selected "OFF" time delay. The heating cycle has ended and the air handler is in the stand-by mode until the thermostat initiates the next call for heat

Electric and Hydronic Heat Models - Cooling Cycle

When the thermostat calls for cooling, 24 VAC is sent to the compressor contactor in the outdoor unit causing it to close which energize the compressor and the outdoor fan motor.

The indoor fan motor is energized on the selected cooling speed tap after the selected "ON" time delay and the circulating blower draws air from the living space, passes it across the cold refrigerant coil in the air handler and pushes the cooled air through the duct work into the living space. When the thermostat is satisfied, the compressor, outdoor fan motor, and indoor blower motor are de-energized. The cooling cycle has ended and the air handler is in the stand-by mode until the thermostat initiates the next call for cooling.now in the stand-by mode awaiting the next call for cooling.

Electric and Hydronic Heat Models – Heat Pump Heating Cycle

When the thermostat calls for the heat pump heating mode, 24 VAC is sent to the compressor contactor in the outdoor unit causing it to close which energizing the compressor and the outdoor fan motor. The position of the reversing valve in the outdoor unit is switched to the heating mode causing the flow of the refrigerant to heat the refrigerant coil inside the air handler. The indoor fan motor is energized on the selected speed tap (same as the cooling mode) after the selected "ON" time delay and the circulating blower draws air from the living space, passes it across the warm refrigerant coil in the air handler, and pushes the warmed air through the duct work into the living space. When the thermostat is satisfied, the compressor, outdoor fan motor, and indoor fan motor are de-energized. The heating cycle has ended and the air handler is in the stand-by mode until the thermostat initiates the next call for heat.

NOTE: For hydronic heat models, the YELLOW wire from the thermostat "Y" terminal must connect to the YELLOW air handler thermostat pigtail or the "Y" terminal on the electronic hydronic control board and the "Y" signal wire (typically YELLOW) from the outdoor unit compressor contactor must connect to the "CC" terminal on the control board. The thermostat "Y" signal is passed from the "CLin" terminal to the "CLout" terminal with a factory installed jumper wire. The CLout terminal is connected to the "CC" terminal internally in the control board. The jumper between the CLin and CLout terminals allows the "Y" signal to reach the CC terminal on applications without a compressor lockout switch. For applications where a compressor lock-out switch has been installed, this jumper is replaced with the two wires from the lock- out switch

IMPORTANT NOTE FOR HYDRONIC AIR HANDLERS WITH CONSTANT TORQUE MOTORS: If the YELLOW wire from the thermostat "Y" terminal on a **hydronic air handler** is not connected to the YELLOW air handler thermostat pigtail (Y) on models with constant torque motors, the indoor blower motor will operate on the lower circulation fan speed instead of the higher cooling speed in the cooling mode which will result in insufficient airflow and frosting up of the indoor coil.

While Homeowner or User is Away

The air handler is equipped with safety shutoff devices which are designed to prevent the air handler from overheating in case of a malfunction. If the blower motor fails, the heating system will cycle on the safety shutoff devices while the temperature inside the home continues to drop. Water pipes will freeze once the temperature falls below 32°F.

If the homeowner or user is planning to be away for an extended period of time, someone should be asked to check on the home every day, especially when the outside temperature is expected to fall below 35°F, to ensure the air handler is operating properly and to prevent water pipes from freezing.

If Air Handler Fails to Operate Properly

If any abnormalities are observed while the air handler is operating normally, perform the following checks:

1. Check the setting on the thermostat to make sure the thermostat is set above the room temperature in the heating mode or below the room temperature in the cooling mode.
2. Check to see if the electrical power is turned on at the circuit breakers in the main electrical panel (circuit breaker box) or check to make sure the air handler service disconnect ON OFF switch is turned to the ON position.
3. Make sure the air filters are clean, return grilles clean, are not obstructed, and supply air registers are open.

If the cause of the malfunction is not obvious, the homeowner or user must not attempt to repair the air handler. Call a qualified service company to repair the air handler.

Annual Inspection and Servicing of Air Handler

If the air handler gives any indication of improper operation, the homeowner should call a qualified service technician to inspect and diagnose and correct the problem. It is strongly recommended that the air handler be inspected and serviced by a qualified service technician annually, preferably at the start of each heating season. The technician can identify potential problems and make corrections before trouble develops. Preventative maintenance of this type will allow the air handler to operate with minimal concerns to the homeowner for many years.

The service technician should perform the following checks during the annual inspection.

1. Confirm the physical support of the air handler is sound with no sagging.
2. Confirm there are no loose fasteners.
3. Confirm the condensate drain lines and hot water lines (hydronic models) are not leaking or sagging.
4. Confirm the air handler casing and condensate drain pan have no obvious signs of deterioration from rust or corrosion.
5. Confirm the return and supply duct connections are physically sound and are sealed to the air handler casing.
6. Operate the air handler in all modes to assure proper functioning.

Warranty and Responsibilities

It is the responsibility of the homeowner to make certain the air handler has been properly installed and adjusted to operate properly.

The manufacturer warrants the air handler to be free from defects in material or workmanship for a stated time in the warranty agreement. The manufacturer is not be responsible for any repair costs to correct problems due to improper setup, improper installation, improper adjustments, installing parts or components that are not listed for use with this air handler, improper operating procedures by the user, or repairs performed by the homeowner or user.

Some specific examples of service calls that are excluded from warranty reimbursement are:

1. Correcting faulty ductwork (too few ducts, ducts too small, leaking ducts, etc.) that was causing insufficient airflow.
2. Correcting electrical wiring problems in the supply wiring to the air handler.
3. Resetting circuit breakers or service disconnect switches used for servicing.
4. Correcting problems caused by installation and operation of the outdoor unit or air quality device not approved for use with this air handler.
5. Adjusting or calibrating the thermostat.
6. Correcting problems caused by construction debris which has been drawn into the air handler.
7. Replacing fuses.
8. Correcting problems caused by dirty air filters.
9. Correcting problems caused by return or supply air restrictions.

Before installation of the air handler, the homeowner or user should work with the installer to gain a good understanding of what will and will not be covered under the warranty to prevent future misunderstanding.

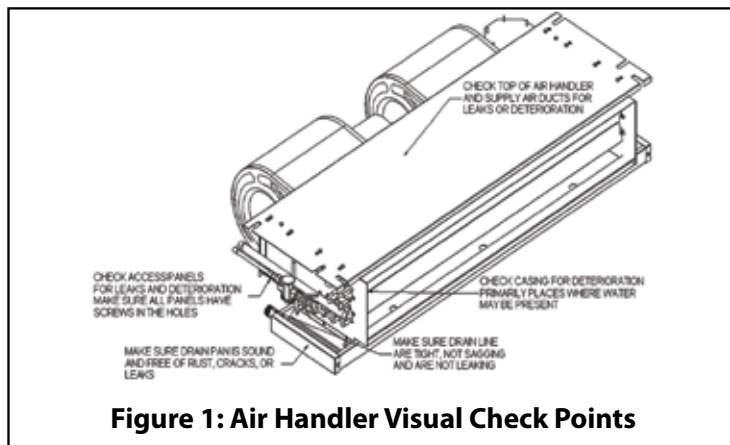


Figure 1: Air Handler Visual Check Points

WARNING

AIR HANDLERS WITH ELECTRIC HEATERS

Should cycling of the electric heater over-temperature limit switches occur, turn the circuit breakers to the air handler in the main electrical panel (circuit breaker box) to the OFF position and call a qualified service company to troubleshoot and repair the air handler. DO NOT allow the electric heaters to cycle on the limit switches for an extended period of time.

When to Call For Service Assistance

Providing the service company with information about the air handler in advance of their service call will often result in the repairs being completed sooner. This includes the model number, serial number, and a description of the problem being experienced. This information will enable the service company to possibly identify the source of the problem prior to the service call and arrive with the correct parts to fix the problem.

SERVICE AGENCY INFORMATION**Fill in Below**

MODEL NUMBER: _____

SERIAL NUMBER: _____

SERVICE COMPANY: _____

ADDRESS: _____

TELEPHONE (DAYTIME): _____

TELEPHONE (EMERGENCY) _____

SECTION 4: STARTUP AND SHUTDOWN INSTRUCTIONS**WARNING**

Failure to follow the following instructions exactly may result in a fire causing property damage, personal injury, and/or loss of life.

- A. **BEFORE OPERATING:** Check around perimeter of the air handler to make sure there are no flammable materials in the area. If flammable materials or flammable vapors are smelled or otherwise detected, **DO NOT** turn the power to the air handler on until the vapors have been ventilated and removed from the area around the air handler.
- B. **CHECK THE FURNACE:** Visually check the air handler for loose screws and access panels that may be missing or have fallen off.
- C. **CHECK DUCT CONNECTIONS:** Visually check the connections of the air ducts to the air handler to make sure there are no gaps or holes and that the ducts are securely fastened to the air handler and sealed

Turning On / Starting the Air Handler

1. **STOP!** Read the safety information above before proceeding.
2. Set the thermostat HEAT/COOL switch to the OFF position and FAN switch to the AUTO position.
3. Turn on the electrical power to the air handler at the main electrical panel (circuit breaker box).
4. Turn the air handler electrical service disconnect switch for the air handler to the ON position.
5. Close the ceiling access panel if it is open.
6. Set the thermostat HEAT/COOL switch, FAN switch, and temperature set point to the desired settings.

Shutting Down / Turning Off the Air Handler

1. Set the thermostat HEAT/COOL switch to the OFF position and FAN switch to the AUTO position.
2. Turn the air handler electrical service disconnect switch to the OFF position.
3. Turn off the electrical power to the air handler at the main electrical panel (circuit breaker box).

All air handlers need annual maintenance in order to operate properly. The annual service must be performed by qualified service personnel. The homeowner is expected to perform general cleaning of the exterior surfaces and replacement of the air filters. Air filters must be checked every month and replaced as needed. The air filter will either be located in a louvered ceiling access panel underneath the air handler or in a return air filter grille located on a wall or ceiling near the air handler. Figure 3 shows a louvered ceiling access panel and Figure 5 shows a return air filter grille.

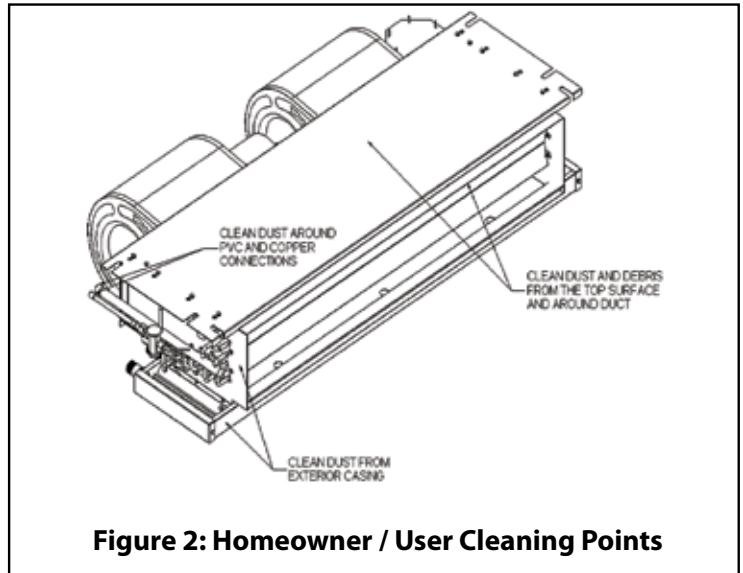


Figure 2: Homeowner / User Cleaning Points

Louvered Ceiling Access Panel Air Filter Replacement

Most horizontal air handlers have the filters in a louvered ceiling access panel located in the ceiling below the air handler. The louvered ceiling access panel has an air filter rack designed to accept 1" thick standard air filters. Follow these easy steps to replace the air filters.

1. Follow the procedure "**Shutting Down/Turning Off the Air handler**" in the **Section 4: Startup and Shutdown Instructions** section of this manual.
2. Remove the thumb screws on the louvered ceiling access panel. Be careful when removing the last thumb screw as the panel can swing down quickly and cause injury.
3. Allow the panel to rotate downward and hang vertically.
4. Remove the dirty air filters from the filter racks.

NOTE: The air filters are disposable. **DO NOT** attempt to clean the filters and reuse them.
5. Clean any dust or debris from both sides for the louvers and around the area where the filters are placed before the new air filters are installed.
6. Place new standard 24" x 20" x 1" disposable filters into both filter racks.

NOTE: Make sure the flow arrows on the filters are pointing away from the louvers in the ceiling panel.
7. Lift the louvered ceiling access panel into the closed position and tighten the thumb screws until the panel is securely fastened to the louvered ceiling access panel frame assembly.
8. Follow the "**Turning On / Starting the Air Handler**" in the **Section 4: Startup and Shutdown Instructions** section of these instructions.

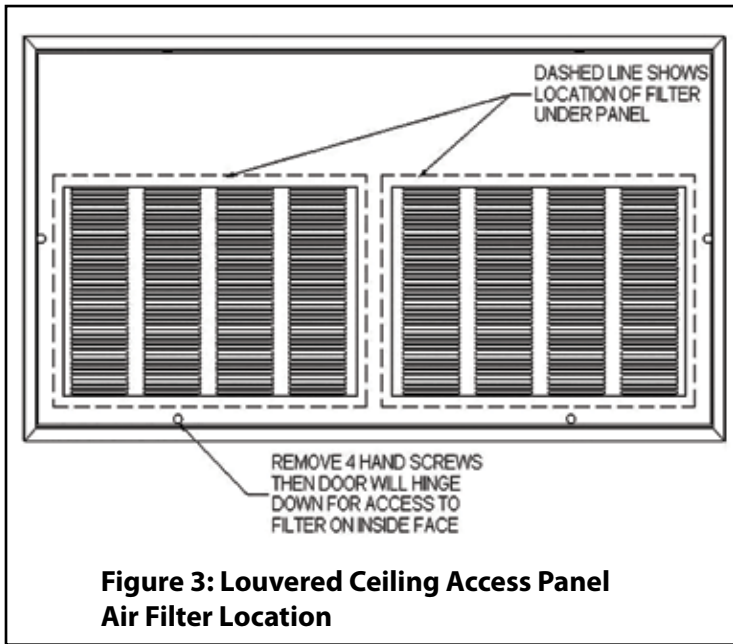


Figure 3: Louvered Ceiling Access Panel Air Filter Location

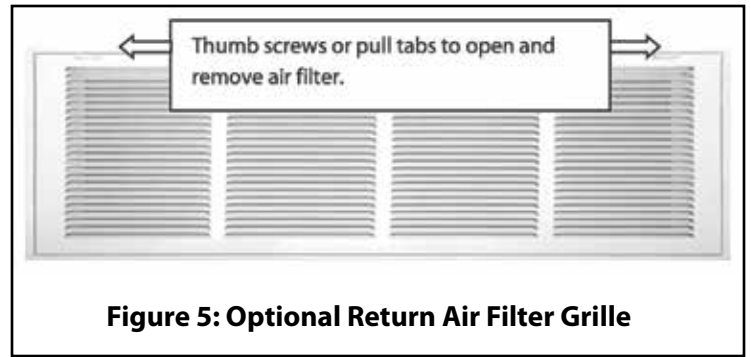


Figure 5: Optional Return Air Filter Grille

Air Filter Replacement – Optional Return Air Filter Grille

Follow the steps below to replace the air filter in a return air filter grille.

1. Unlike with a louvered ceiling access panel, replacing the air filter in a return air filter grille located away from the air handler can be done safely without disconnecting the electrical power to the air handler.
2. Remove the thumb screws or pull out on the pull tabs located on the filter grille.
3. Pull the grille outward (wall mount) or downward (ceiling mount).
4. Remove the air filter from the grille frame or rack. The air filter is disposable. DO NOT attempt to clean the filter and reuse it.
5. Clean any dirt or debris around the grille and frame where the air filter is located. Be careful not to use any small vacuum cleaner parts or any small brushes to clean inside the filter frame and around the filter rack. These parts or brushes can fall off or drop into the return duct causing a restriction of the return air flow.
6. Place a new disposable filter of the same size as was removed into the grille frame or rack.
7. Push the grille closed and tighten the thumb screws or push the pull tabs inward to secure the grille to the frame.

NOTE: Make sure the flow arrow on the new filter is pointing away from the grille louvers.

⚠ WARNING

IMPACT HAZARD
Use extreme caution when removing the ceiling access panel thumb screws that secure the panel to the frame assembly. Once the thumb screws have been removed, the ceiling access panel can swing down very quickly if not adequately supported and can strike a person standing underneath it.

The ceiling panel louvers can also have sharp edges which can cut hands or fingers. The use of gloves is recommended when handling the ceiling access panel to prevent injury.

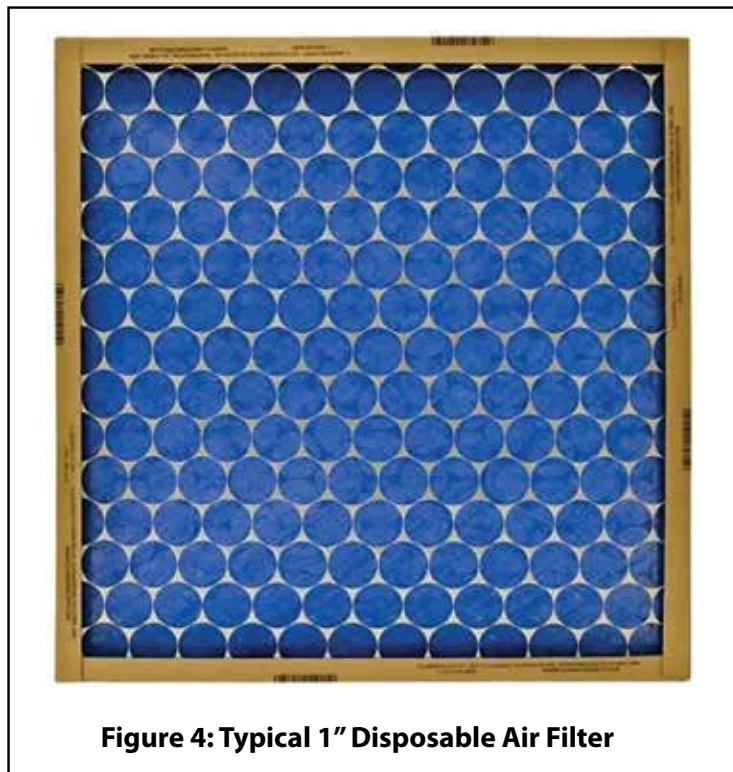


Figure 4: Typical 1" Disposable Air Filter

SERVICE AND MAINTENANCE MANUAL

SECTION 1: SAFETY

This section has been designed to assist a qualified service agency in performing service and maintenance on this air handler.

The homeowner or the air handler user must never attempt to perform any service or maintenance on the air handler when it involves the removal or adjustment of any parts and/or components.

WARNING

The manufacturer or distributor will not be responsible for any repairs due to removal of parts or improper parts changes, improper maintenance, improper adjustments or improper modifications to this air handler that were performed by the homeowner and/or the air handler user. The manufacturer will not be responsible if the homeowner and/or air handler user use this section of the instructions in an attempt to perform maintenance or repairs to the air handler. This practice is very dangerous and may result in a fire causing property damage, personal injury, loss of life and/or will void the air handler warranty.



This is a safety alert symbol. When you see this symbol on labels or in manuals, be alert to the potential for personal injury. Understand and pay particular attention to the signal words **DANGER**, **WARNING**, or **CAUTION**.

DANGER: Indicates an imminently hazardous situation, which if not avoided, will result in death or serious injury.

WARNING: Indicates a potentially hazardous situation, which if not avoided, could result in death or serious injury.

CAUTION: Indicates a **potentially** hazardous situation, which if not avoided, may result in minor or moderate injury. It is also used to alert against unsafe practices and hazards involving property damage.

WARNING

Improper adjustment, service or maintenance may create a condition where the operation of the product could cause personal injury or property damage.

Refer to this manual for assistance or for additional information consult the Technical Support Group.

CAUTION

This air handler must be serviced and maintained as specified in these instructions and/or to any applicable local, state, and national codes including, but not limited to building, electrical, and mechanical codes.

WARNING

FIRE OR ELECTRICAL HAZARD

Failure to follow the safety warnings exactly could result in serious injury, death, or property damage.

A fire or electrical hazard may result causing property damage, personal injury or loss of life.

SAFETY REQUIREMENTS

1. The air handlers with electric heaters have a two (2) pole terminal block to connect the electrical supply circuit. Make sure you check each electrical circuit with a meter to be sure the power has been disconnected.
2. Insulating materials may be combustible. The air handler must be kept free and clear of insulating materials.
3. Follow the instructions exactly as shown in **SECTION 4: Startup and Shutdown in the User Information Manual** on page 5 to properly Startup or Shutdown this air handler.
4. Make sure all moving parts have come to a complete stop before attempting to perform any work the air handler. Moving parts can cause serious injury if clothing or body parts get caught in the moving part.

WARNING

ELECTRICAL SHOCK, FIRE HAZARD

Failure to follow the safety warnings or improper servicing could result in dangerous operation, serious injury, property damage, and/or death.

WARNING

FIRE HAZARD

NEVER PLACE A JUMPER BETWEEN "R" & "W"

Placing jumper wire between the RED and WHITE thermostat wires at the air handler in order to override the thermostat and energize the heater elements is an extremely dangerous practice that can result in damage to the thermostat, dangerous operation, serious injury, property damage and/or death.

SECTION 2: AIR HANDLER MAINTENANCE

The interior sections of the air handler must be cleaned and adjusted by a qualified service contractor prior to the start of each heating or cooling season. The following items must be checked:

1. The blower wheel and motor for excessive dirt.
2. The electric heaters for wear, damage or corrosion.
3. The electrical components for excessive dust, dirt, wear, or deterioration.
4. The supply air duct system for excessive dust, dirt or debris.
5. The return air duct system for excessive dust, dirt or debris.
6. All electrical wiring for wear, insulation cracks and/or damage.
7. Check the air conditioning evaporator coil for dust, debris or damage.
8. Condensate drain pan for proper drainage to prevent water backup into the air handler.
9. The air handler casing and all interior sheet metal panels or dividers.

Air Handler Cleaning Procedure

1. Follow the instructions in **SECTION 4: Startup and Shutdown of the User Information Manual** on page 5 to properly shut down the air handler.
2. Open the ceiling access panel by removing the thumb screws.
CAUTION: Be very careful when removing the last thumb screw as the panel can swing down quickly and cause injury.
3. Blower Removal
 - a) Disconnect the wires connected to the motor controller terminal block.**NOTE:** Write down the terminal block position for each wire before disconnecting the wires.
 - b) Remove the screws that secure the blower assembly to the air handler chassis located on each side and at the top center of the blower mounting plate.
 - c) Grasp the blower assembly and lift it up while pulling out on the bottom. Lower the blower assembly out of the blower compartment and set assembly on a table or the floor.
4. Use a vacuum cleaner and a small brush to remove any dirt and debris from the blower and evaporator coil compartments.
5. Check the condensate drain pan for any debris and check to see if the drain pan is draining properly by pouring water into it.
6. Remove any excess water that may have spilled from checking the condensate drain drainage.
7. Pour ½ cup of chlorine bleach in the drain pipe to kill any fungus that may be growing inside the pipe to prevent the condensate drain from plugging up.
8. Check in the area in the discharge of the blowers where the heater elements are located and remove any dust, dirt or debris from around the heater elements. Be careful not to damage the heater elements with the vacuum hose or the brush.
9. Check both blower wheels for dust and debris. Use the brush and the vacuum cleaner to remove any dust or debris from the wheels. Be careful not to accidentally move or remove the blower wheel balance weights located on the wheel blade. If any weight is moved or removed, the blower wheel will vibrate. If the blower wheel is vibrating, it must be replaced.
10. Check the blower motor for dust and debris. Clean the openings in the motor housing. These openings are for cooling the motor. Plugged motor housing openings will cause the motor to run hotter than normal and will shorten the life of the motor.

11. Clean dust in the supply and return ducts with a brush and vacuum cleaner as far as can be reached. If the ducts have an excessive amount of dust, dirt or debris, recommend that the homeowner or user call a professional duct cleaning service to properly clean the duct system.

NOTE: Dust is flammable and can cause a fire.

12. Check and clean any dust, dirt, or debris from the controls and surfaces inside the control box. Dust or dirt on the components can cause the controls to overheat and fail prematurely.
13. Check the indoor coil for dust or dirt buildup. If dirty, use a non-corrosive spray specifically designed to clean air-conditioning coils. Remove the electric heater elements (electric heat models) before cleaning the coil so the coil cleaner doesn't get on the elements. Follow the procedure found later on this page for removing the electric heater elements. After the heater elements have been removed (if applicable), spray the entire surface of the coil. Rinsing the coil is unnecessary as the condensate will rinse the coil when the system is operated in the cooling mode.
14. Reinstall the electric heater elements as described in the procedure for reinstalling the electric heaters on this page.
15. Lift the blower assembly into place while pushing in on the bottom and pulling down to set the blower mounting plate into place.
16. Replace the screws on the blower mounting plate that were removed in Step 3.
17. Reconnect the blower motor leads that were disconnected in Step 3.
18. Reattach the motor guard to the control box and reinstall the control box cover on models equipped with a PSC motor.
19. Close the ceiling access panel and secure the panel with the thumb screws.
20. Follow the instructions in **SECTION 4: Startup and Shutdown of the User Information Manual** on page 5 of these instructions to properly start the air handler.

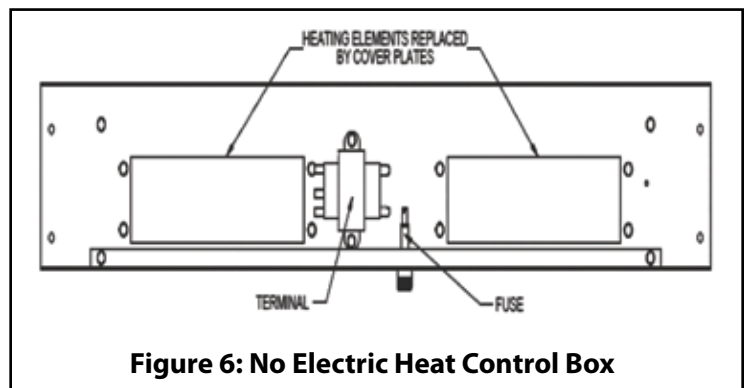


Figure 6: No Electric Heat Control Box

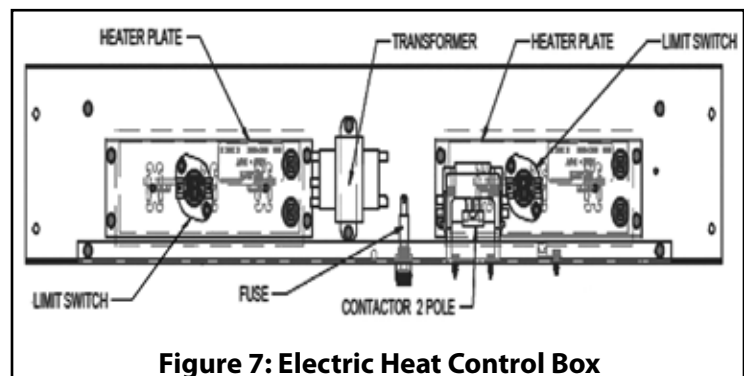


Figure 7: Electric Heat Control Box

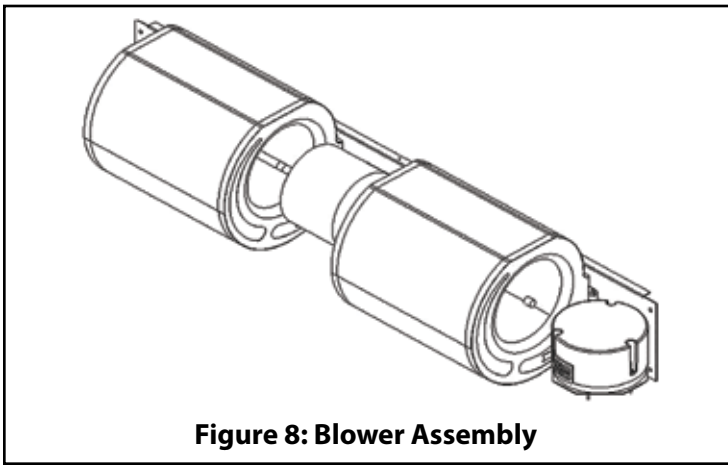


Figure 8: Blower Assembly

Removing and Reinstalling the Electric Heater Elements

1. Follow the instructions in **SECTION 4: Startup and Shutdown of the User Information Manual** on page 5 of these instructions to properly shut down the air handler.
2. Open the ceiling access panel by removing the thumb screws.
CAUTION: Be very careful when removing the last thumb screw as the panel can swing down quickly and cause injury.
3. Remove the control box cover.
4. Unplug the blower motor female plug (BMFP) from the mating plug located on the control box.
5. Disconnect the electrical supply wires and ground wire from the terminal block and ground lug. Remove the strain relief that is securing these wires and remove the wires from the control box.
6. Remove the 5 screws that secure the control box to the air handler and remove the control box. The electric heater elements are attached to the control box and will come out with the control box.
NOTE: Take care not to damage the heaters when removing the control box.
7. Remove the wires from the heater element screw terminals.
8. Remove the 2 screws that secure the limit control to the heater element mounting plate and remove the limit control.
9. Remove the 4 screws that secure the heater element to the control box and remove the element.
10. Insert the new heater element into the control box and secure it with the screws that were removed in Step 10.
11. Install the limit control in the hole in the heater element mounting plate and secure it with the 2 screws removed in Step 8.
12. Reconnect the wiring that was removed in Step 7.
13. Reinstall the control box and secure it the air handler with the screws that were removed in Step 6.
NOTE: Take care not to damage the heaters when installing the control box.
14. Reconnect the wiring that was removed in Steps 4 and 5.
15. Reinstall the control box cover.
16. Close the ceiling access panel and secure it to the frame assembly with the thumb screws.
17. Follow the instructions in **SECTION 4: Startup and Shutdown of the User Information Manual** on page 5 of these instructions to properly start the air handler.

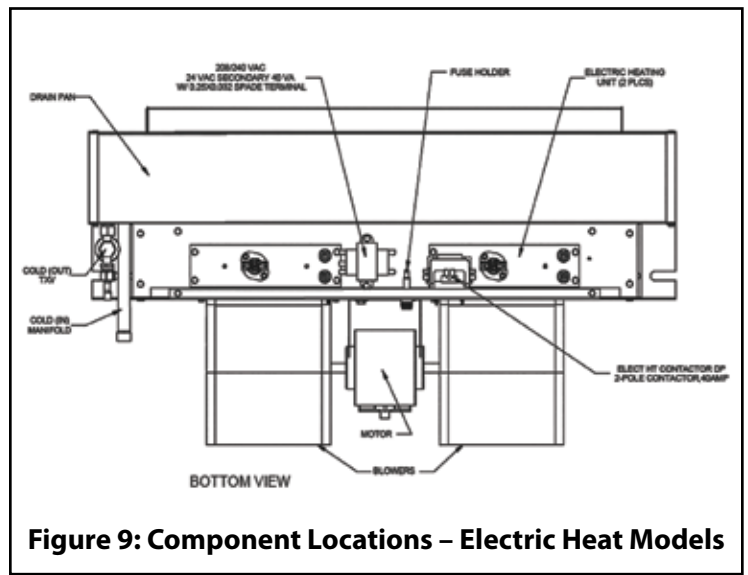


Figure 9: Component Locations - Electric Heat Models

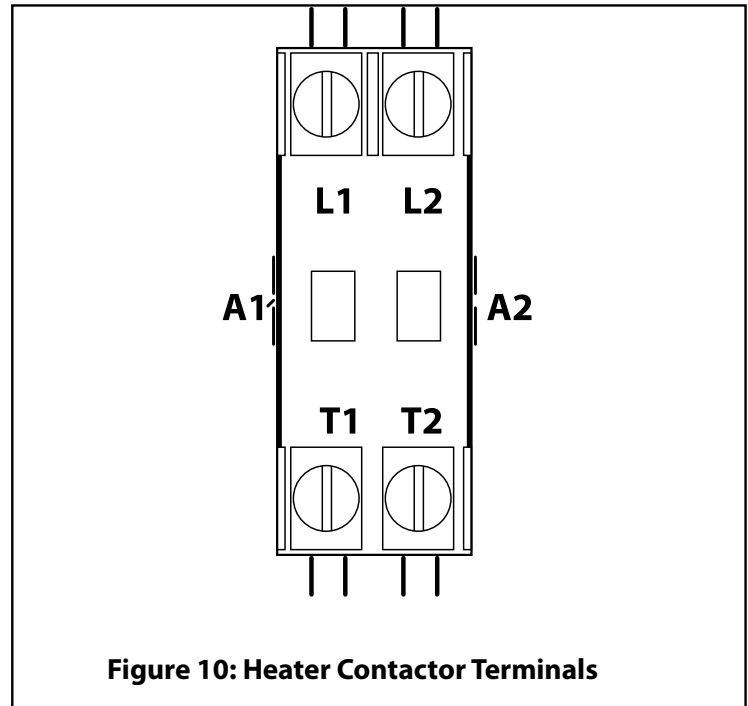


Figure 10: Heater Contactor Terminals

SECTION 3: AIR HANDLER CONTROLS

Electric Heat Models

This section explains how the electric heat air handler controls operate. Refer to Figures 6 and 9 for component locations.

1. **Limit Controls** – Each electric heater element has a limit control directly in front of it to sense overheating of the element and open if the temperature gets above the set point of the limit control. The heater cycles until the cause for the overheating is corrected.
2. **Heater Contactors**– The electric heater contactor turns the heater elements on and off and is controlled by the thermostat. On a call for heat, 24 VAC is sent to the contactor's 24 VAC coil which closes the contactor's electrical contacts and energizes the heater elements. When the call for heat has been satisfied, 24 VAC is removed from the contactor's 24 VAC which opens the contactor's electrical contacts and de-energizes the heater elements. Single contactor and 15kw and 20kw heaters have two contactors.
3. **Transformer**– The transformer is used to step down voltage from 208/240 VAC to 24 VAC which is used for the system's control circuit.

Hydronic Heat Models

This section explains how the hydronic heat air handler controls operate. Refer to Figures 14 and 15 for component locations.

1. **Transformer** – The transformer is used to step down voltage from 208/240 VAC to 24 VAC which is used for the system's control circuit.
2. **Hydronic Control Board** – The hydronic heat models are equipped with a hydronic control board to control the operation of air handler components.
3. **Water Pump**: The water pump power leads are connected to the "PUMP" terminals on the hydronic control board. When there is a call for heat, a 24 VAC signal from the thermostat "W" terminal to the "W" terminal on the hydronic control board energizes the pump and starts the flow of water to the heating coil. When the call for heat has been satisfied, the pump is de-energized and the flow of water to the coil stops. The air handler is now in the standby mode awaiting the next call for heat.
4. **Blower Motor**: The hydronic control board has 3 speed terminals for the blower motor. These terminals are energized with 115 VAC for models with PSC motors or 24 VAC for models with constant torque motors. The "HI" terminal is energized in the normal cooling mode and the "MED" terminal is energized in the cooling de-humidification mode. The "LOW" terminal is energized in the heating mode. The FAN CIR terminal is energized in the continuous mode when there is no call for cooling or heating. The hydronic control board has two jumper pins for selecting the blower motor "ON" and "OFF" delays. The blower "ON" and "OFF" delays can be set independently at 0, 15, or 30 seconds.

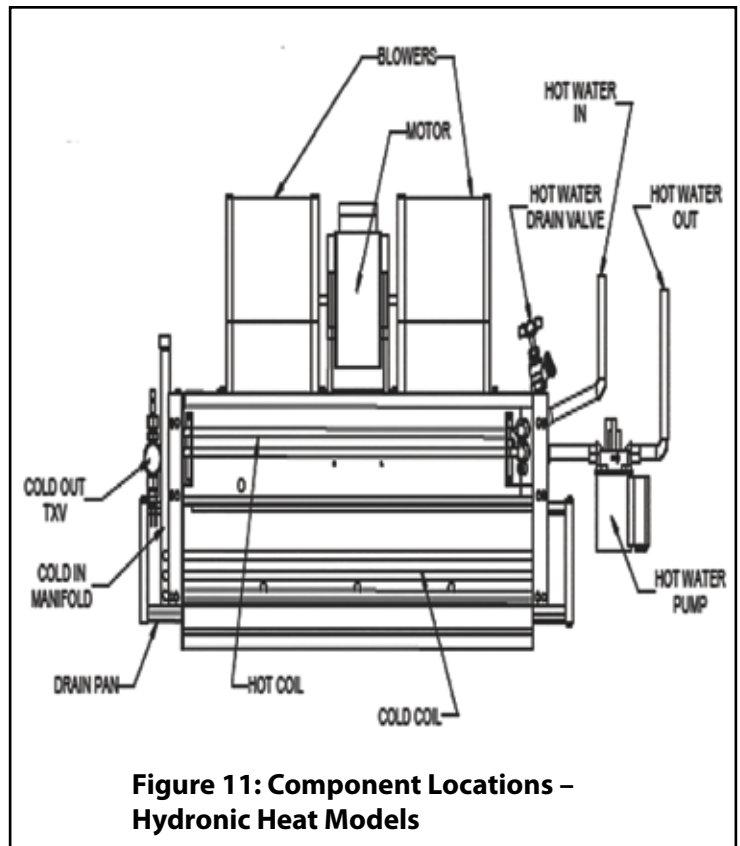


Figure 11: Component Locations – Hydronic Heat Models

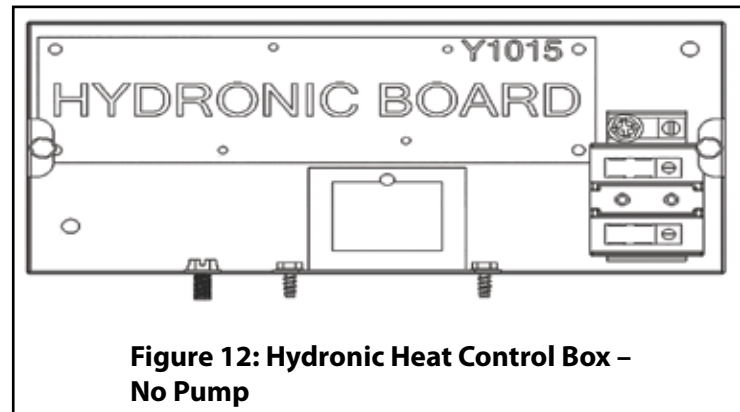


Figure 12: Hydronic Heat Control Box – No Pump

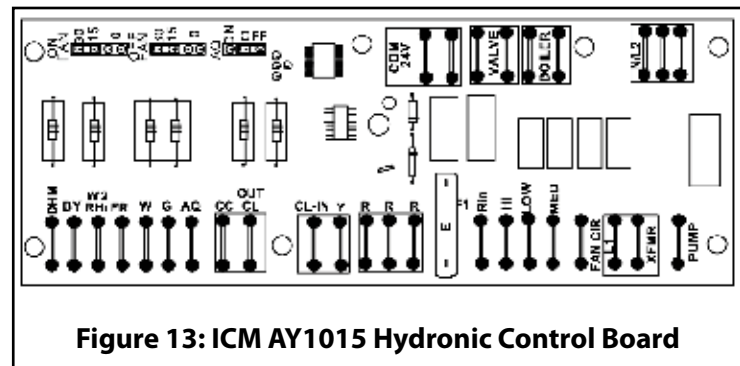


Figure 13: ICM AY1015 Hydronic Control Board

Hydronic Control Board Terminals and Descriptions

ICM AY1015 - Mortex Part No. 68AE0011 - The terminals and functions are explained below.

Line Voltage Terminals AY1015

- L1** – Supply Voltage (115 VAC) to the control
- L2** – Supply Neutral (115 Neutral) to the control
- XFMR and L2** – 115 VAC supply to transformer
- Pump and L2** – 115 VAC to the water pump

24 VAC Terminals AY1015:

- Rin** – 24 VAC supply from the transformer
- 24V COM** – 24 VAC common from the transformer
- R** – Fused 24 VAC output connections
- Y** – Connect to the thermostat Y terminal
- CC** – Connect **CC** and **24V COM** to the compressor contactor on the outdoor unit.
- CLin & Clout** – connection between Y and CC
- AQ** – 24 VAC from aquastat temperature switch
- G** – 24 VAC from thermostat G terminal
- W** – 24 VAC from thermostat W terminal
- FR** – 24 VAC from freeze protection switch
- RH/W2** – 24 VAC from thermostat W2 terminal
- BY** – 24 VAC from the priority switch on tank less heater
- DHM** – 24 VAC from thermostat DHM terminal
- VALVE** – 24 VAC and 24V COM to zone valve
- BOILER** – switch, connect to "T" terminals on boiler aquastat

Hydronic Control Board Terminal Functions

- HI & COM** – 24 VAC cooling speed tap to blower motor
- MED & COM** - 24 VAC dehumidification speed tap to blower motor
- LO & COM** - 24 VAC heating speed tap to blower motor
- FAN CIR & COM** – 24 VAC continuous fan speed tap to blower motor

CLin and Clout – These terminals must be connected to transfer 24 VAC from the Y terminal to the CC terminal. When the compressor lockout switch is used, the switch is secured to the water coil. The two yellow wires are connected to the CLin and the Clout terminals. When the temperature of the water coil reaches 38°F, the switch opens which de-energizes the CC terminal on the control board. When the water temperature has risen above 42°F the compressor lockout switch will close. The control will send 24 VAC to the CC terminal on the control board.

NOTE: If the compressor lockout switch is not used, place a jumper wire between CLin and Clout to get 24 VAC from the Y terminal to the CC terminal. The indoor blower will not be energized in the cooling mode until the CC terminal has 24 VAC at the terminal.

AQ – The aquastat switch is placed on the hot water line exiting side of the air handler coil. The aquastat is connected to the R terminal and the AQ terminal on the control board. The AQ jumper pin shown in Figure 13 must be in the ON position to use this feature. When there is a call for heat (24 VAC on the W terminal) and the water line temperature reaches the aquastat switch setting, the switch will close sending 24 VAC to the AQ terminal turning on the blower motor. The blower motor will not energize until the aquastat switch is closed. When the call for heat has been satisfied, the indoor blower will be de-energized after the selected OFF delay.

VALVE – There are two terminals used to power a 24 VAC zone valve or solenoid valve. The terminal closest to the 24V COM terminals is a 24VAC common terminal to the valve. See Figure 13.

The other terminal is the 24 VAC output to the valve. When there are 24 VAC to the W terminal the control board will send 24 VAC to the valve terminals. The VALVE terminals de-energize when the 24 VAC is removed from the W terminal.

BOILER - There are two terminals that are connected to a switch. The terminals do not output any voltage and are dry contacts. The BOILER switch is designed to be connected to the "T" terminals on a boiler aquastat to energize the boiler when the control board has a call for heat (24 VAC on W).

G – When 24 VAC is placed on the G terminal the control will energize the indoor blower by the FAN CIR terminal with NO delay. When the 24 VAC signal has been removed from the G terminal, the indoor blower will be de-energized with NO delay.

If there is a call for heat (24 VAC on the W terminal) while 24 VAC is present on the G terminal, the control will energize the pump, valve and boiler and the indoor fan motor will be de-energized. The indoor fan motor will be energized by the LOW terminal after the selected ON delay. When the call for heat has been satisfied, the control will de-energize the valve, pump and boiler and the indoor fan motor will switch to the FAN CIR speed terminal after the selected OFF delay.

If there is a call for cooling while there is 24 VAC on the G terminal, the control will switch the indoor blower speed to the HI terminal. When the call for cooling has been satisfied, the control will switch the indoor blower back to the FAN CIR speed.

W – When 24 VAC is present on the W terminal, the control will energize the pump, valve and boiler and the indoor fan will be energized by the LOW terminal after the selected ON delay. When the call for heat has been satisfied, the control will de-energize the valve, pump and boiler and the indoor fan motor will be de-energized after the selected OFF delay.

FR – The FR terminal energizes the control board freeze protection. The freeze protection switch is secured to the water coil. The two white wires are connected to the R terminal and to the FR terminal on the control board. When the temperature of the coil is below 38°F, the freeze protection switch closes and sends 24 VAC to the FR terminal. The control will energize the pump, valve and boiler. The control will not energize the indoor fan motor even when there is a call for heat with 24 VAC on the W terminal. When the water temperature has risen above 42°F, the freeze protection switch will open. The control will de-energize the pump, valve and boiler, if there is not a call for heat. If there is a call for heat at the time FR is de-energized, the pump, valve and boiler will remain ON and the control will energize the indoor fan motor with the LOW terminal after the selected ON delay.

RH/W2 – RH is only used for the reheat mode with a thermostat that has the reheat function.

BY – Bypass terminal is used when the heating and domestic hot water system are managed with the same tankless hot water system. The domestic water line has a normally open flow switch that is connected to the R and the BY terminals on the control board. When the domestic water flow switch detects the flow of water, the switch closes sending 24 VAC to the BY terminal. The control will de-energize the PUMP, VALVE, BOILER terminals and the indoor blower. When the domestic water flow has stopped the domestic water flow switch will open and the PUMP, VALVE, and BOILER terminals will resume normal operation. The indoor blower will be energized after the selected ON delay.

Y – When there is a call for cooling (24 VAC is placed on the Y terminal), the control will energize the indoor blower with the HI terminal after the selected ON delay. When the call or cooling has been satisfied, the indoor blower will be de-energized after the selected OFF delay.

DHM – Dehumidification mode can be used with any thermostat that has dehumidification terminal. The dehumidification terminal must send 24 VAC to the DHM terminal on the control board to put the control in dehumidification mode. When 24 VAC is present on the Y terminal (call for cooling) and there is 24 VAC is present on the DHM terminal, the control will energize the indoor blower with the MED terminal after the selected ON delay as long as there is a motor speed tap connected to the MED terminal. If the control has the indoor blower operating on the HI terminal when 24 VAC is placed on the DHM terminal, the control will de-energize the HI terminal and energize the MED terminal with no delays. If the control has the indoor blower motor operating on the MED speed terminal when 24 VAC is removed from the DHM terminal, the control will energize the HI terminal and de-energize the MED terminal with no delay.

IMPORTANT NOTE: A motor speed tap wire must be connected to the MED terminal for the dehumidification mode to work. Otherwise, the indoor blower will be de-energized upon call for dehumidification while the compressor is operating, resulting in the indoor coil freezing up.

SECTION 4: SEQUENCE OF OPERATION

Continuous Blower – Electric Heat Models

Moving the thermostat FAN switch to the “ON” position (continuous fan mode) completes the circuit between “R” and “G” terminals and sends 24 VAC to the GREEN air handler pigtail which is connected to the selected indoor blower motor speed tap for the cooling and continuous fan modes. The indoor blower will operate continuously until the thermostat FAN switch is moved to the “AUTO” position.

Continuous Blower – Hydronic Heat Models

Moving the thermostat FAN switch to the “ON” position (continuous fan mode) completes the circuit between “R” and “G” terminals and sends 24 VAC to the “G” terminal on the hydronic control board. Once the selected control board blower “on-delay” is complete, the control board will send 24 VAC to the “FAN CIR” terminal on the control board and energize the motor’s continuous fan speed (motor speed tap 1). The indoor blower will operate continuously until the thermostat FAN switch is moved to the AUTO position.

Intermittent Blower – Cooling Cycle Electric Heat Models

When the thermostat FAN switch is in the AUTO position and the thermostat calls for cooling, the circuit between the “R,” “Y” and “G” Terminals is completed and sends 24 VAC to the GREEN air handler pigtail wire which is connected to the selected indoor blower motor speed tap for the cooling and continuous fan modes. The thermostat also sends 24 VAC to the “Y” thermostat wire to the outdoor unit which closes the compressor contactor and energizes the compressor and outdoor fan motor. When the thermostat is satisfied, the circuit between “R,” “Y” and “G” opens which will de-energize the blower motor, compressor, and the outdoor fan motor. The system is now in the standby mode awaiting the next cooling cycle.

Intermittent Blower – Cooling Cycle Hydronic Heat Models

When the thermostat FAN switch is in the AUTO position and the thermostat calls for cooling, the circuit between the “R,” “Y” and “G” Terminals is completed and sends 24 VAC to the G and Y terminals on the hydronic control board. The hydronic control board sends 24 VAC to the “Y” thermostat wire to the outdoor unit which closes the compressor contactor and energizes the compressor and outdoor fan motor. The hydronic control board also energizes the indoor blower with the HI terminal after the selected ON delay. When the thermostat is satisfied, the circuit between “R,” “Y” and “G” opens, the compressor contactor opens and the indoor blower is de-energized after the selected OFF delay. The system is now in the standby mode awaiting the next cooling cycle.

Intermittent Blower – Heating Cycle Electric Heat Models

When the thermostat FAN switch is in the AUTO position and the thermostat calls for heat, the thermostat circuit between the “R” and “W” terminals is completed. This sends 24 VAC from the “W” terminal to the WHITE air handler pigtail wire to the heater contactor coil. This signal closes the heater contactor contacts which sends 208-240 VAC to the heating elements. The selected indoor blower heating speed (WHITE wire) is energized by the 24 VAC signal from the thermostat “W” terminal to the normally closed isolation relay contacts between terminals #5 and #6 on the relay which occurs at the same time the heating elements are energized.

When the call for heat has been satisfied, the 24 VAC signal will be removed from the thermostat “W” terminal which will de-energize the heating elements and indoor blower. The air handler is now in the standby mode awaiting the next heating cycle.

Intermittent Blower – Heating Cycle - Hydronic Heat Models

When the thermostat FAN switch is in the AUTO position and the thermostat calls for heat, the thermostat circuit between the “R” and “W” terminals is completed. 24 VAC is sent from the “W” terminal on the thermostat to the hydronic control board. The hydronic control board will energize the water pump and start circulation of hot water through the water coil. The hydronic control board will also energize the indoor blower with the LOW terminal. When the call for heat has been satisfied, the “W” terminal is de-energized and the hydronic control board will de-energize the water pump and with also de-energize the indoor blower after the selected OFF delay. The air handler is now in standby mode waiting for the next heating cycle.

SECTION 5: TROUBLESHOOTING

The following checks should be made before further troubleshooting of the air handler controls when the blower does not operate or there is a no-heat or no-cooling issue. The electric heat models use relays to control the blower motor and a contactor to control the electric heater. The hydronic heat models use a hydronic control board to control the operation of all the components.

Initial Troubleshooting Checks

1. Check all circuit breakers in the main electrical panel (circuit breaker box). Make sure they are turned to the "ON" position and have not tripped.
2. Check to make sure the service disconnect switch is in the "ON" position. The service disconnect switch is often mistaken for a light switch and is turned off.
3. Check any supply line fuses that were installed during installation are not blown. Check the wiring with an ohmmeter for a short to ground. If shorted, repair the short and replace the fuse(s).
4. Check to make sure there is 24 VAC between the RED (R) air handler thermostat pigtail and ground. If 24 VAC is not present, check the low voltage inline fuse in the air handler control box or on the hydronic control board to see if it is blown. If the fuse is not blown and there is 208-240 VAC between the transformer primary wires, replace the transformer.
5. Check to make sure there is 24 VAC between the R and C terminals of the thermostat. If 24 VAC is not present, check the low voltage wiring and connections between the air handler and the thermostat.
6. Check to make sure there is 24 VAC between the G and C terminals of the thermostat when there is a call for cooling or continuous fan and between W and C when there is a call for heat. If 24 VAC is present between the R and C terminals, but 24 VAC is not present between the C and G terminals (cooling continuous fan) or between W and C terminals (heating), replace the thermostat.
7. Check to make sure there is 24 VAC between the GREEN (G) air handler thermostat pigtail and ground when there is a call for cooling or continuous fan and between the WHITE (W) pigtail when there is a call for heat. If 24 VAC is present in either of these cases and the thermostat and transformer were found to be OK in steps 4 and 6 above, check the low voltage wiring and wiring connections between the thermostat and air handler.
8. Check all wiring connections to the air handler components to ensure they are securely connected.

TROUBLESHOOTING ELECTRIC HEAT MODELS

NOTE: Be sure to perform the Initial Troubleshooting Checks before performing the following checks.

⚠ WARNING

To avoid personal injury or property damage, make certain that the motor leads cannot contact non-insulated metal components of the unit.

⚠ WARNING

For personal safety be sure to turn the electrical power "OFF" at the main entrance (Circuit Breaker Box) and at the control box circuit breakers before attempting any service or maintenance operations. Homeowners should never attempt to perform any maintenance which requires opening the air handler control box cover.

Heating Mode Constant Torque Motor Check – Electric Heat Models

If 24 VAC is not present between the air handler WHITE thermostat pigtail and ground when the thermostat is calling for heat, check the wiring and wiring connections from the thermostat "W" terminal to the air handler WHITE thermostat pigtail. If 24 VAC is present at the WHITE thermostat pigtail, check all of the wiring and wiring connections from the WHITE thermostat pigtail to the blower motor terminal block. If 24 VAC is present between the BLUE (common) and WHITE (heating speed) wires connected to the motor terminal block (See Figure 14 and Table 2) and there is 208-240 VAC between the RED and BLACK wires connected to the N and L motor terminals, replace the motor.

Cooling/Continuous Fan Mode Constant Torque Motor Check - Electric Heat Models

If 24 VAC is present between the GREEN air handler thermostat pigtail and ground, but the blower motor is not running when there is a call for cooling or continuous fan, check all of the wiring and wiring connections between the GREEN air handler thermostat pigtail and the motor terminal block and between the heater contactor L1 and L2 terminals and the motor terminal block. If 24 VAC is present between the BLUE (common) and BLACK (cooling/ continuous fan speed) wires connected to the motor terminal block and there is 208-240 VAC between the RED and BLACK wires connected to the N and L motor terminals, replace the motor.

| HP | FLA |
|-----|------|
| 1/3 | 0.68 |
| 1/2 | 1.70 |

Table 1: 208 / 240 Volt Blower Motor FLA - Electric Heat Models

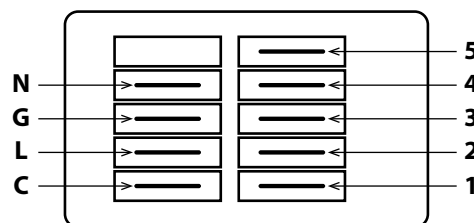


Figure 14: Constant Torque Motor Terminals

| Terminal | Connection |
|----------|--------------------------------------|
| C | Speed Tap Common - 24 VAC Common |
| L | Supply Voltage - 208/240 VAC Line 1 |
| G | Ground Connection |
| N | Supply Voltage - 208/240 VAC Line 2 |
| 1 | Low Speed Tap - 24 VAC Input |
| 2 | Medium-Low Speed Tap - 24 VAC Input |
| 3 | Medium Speed Tap - 24 VAC Input |
| 4 | Medium-High Speed Tap - 24 VAC Input |
| 5 | High Speed Tap - 24 VAC Input |

Table 2: Constant Torque Motor Terminal Connections Electric Heat Models

Electric Heat Models – Not Heating

Check for 24 VAC between the WHITE (W) air handler low voltage pigtail and ground when the thermostat is set to the HEAT mode and the temperature is set below the room temperature. If 24 VAC is present on the WHITE air handler pigtail, check for 208- 240 VAC between the heating elements power terminals on each heating element. If 208-240 VAC is not present at the heating element terminals, check for 24 VAC across the heater contactor coil. If 24 VAC is present across the heater contactor coil, but 208-240 VAC is not present across heater contactor terminals T1 and T2, replace the contactor. If 24 VAC is not present across the heater contactor coil, use an ohmmeter to check for continuity across the terminals of the two heater limit controls. If the contacts on either of the limit control are open when the heating elements are cool, replace that limit control. If 208-240 VAC is present across the heating element terminals, check the current draw for each heating element. If there is no current or the current is not close to what is shown below, the heating element is defective and must be replaced.

The electric heating element amperages are as follows:
 3 kW Heater = 12.5 amps (Two 1.5kW Heating Elements)
 5 kW Heater = 20.8 amps (Two 2.5kW Heating Elements)
 6 kW Heater = 25.0 amps (Two 3.0 kW Heating Elements)
 8 kW Heater = 33.3 amps (Two 4.0 kW Heating Elements)
 10 kW Heater = 41.6 amps (Two 5.0 kW Heating Elements)

TROUBLESHOOTING HYDRONIC HEAT MODELS

NOTE: Be sure to perform the Initial Troubleshooting Checks before performing the following checks.

Constant Torque Motor Checks - Hydronic Heat Models

If the motor is not running when there is a call for heat, cooling, or continuous fan, check for 115 VAC between the L and N motor terminals (See Figure 14 and Table 4) and check for 24 VAC between the “COM/24V” terminal and either the “HI” (cooling), “MED” cooling/ dehumidification), “LO” (heating), or “FAN CIR” (continuous fan) terminal on the control board (See Figure 15). If 115 VAC is present between motor terminals L and N and 24 VAC is present between the “COM/24V” terminal and either the “HI”, “MED”, “LO”, or “FAN CIR” terminal on the control board, but the motor is not operating, check the connections at the motor terminals and the motor connector plugs BMMP and BMFP. If these connections are secure and there is 24 VAC between the C motor terminal and any of the wires connected to terminals 1 – 5 on the motor, replace the motor. Refer to Figure 14 and Table 4 for terminal locations and definitions. If 115 VAC is present between motor terminals L

and N, but 24 VAC is not present between the “COM/24V” terminal and either the “HI”, “MED”, “LO”, or “FAN CIR” terminal on the control board when there is a call for heat, cooling, or continuous fan, replace the control board.

Hydronic Control Board Checks

If 24 VAC is present between the Rin and COM/24V terminals on the control board, but 24 VAC is not present between the R and COM/24V terminals (See Figure 15), check the fuse on the control board to see if it is blown. If 24 VAC is present between the “W” and “24V COM” terminals on the control board when there is a call for heat, check the AQ jumper to make sure it is in the “OFF” position unless it is in the “ON” position with an aquastat installed. If so equipped, check to see if the aquastat is closed when the water line is cold. If the aquastat is open when the water line is cold, replace it. If 24 VAC is present between the “W” and “24V COM” terminals on the control board when there is a call for heat and 115 VAC is not present between the L2/N and PUMP terminals on the control board, replace the control board.

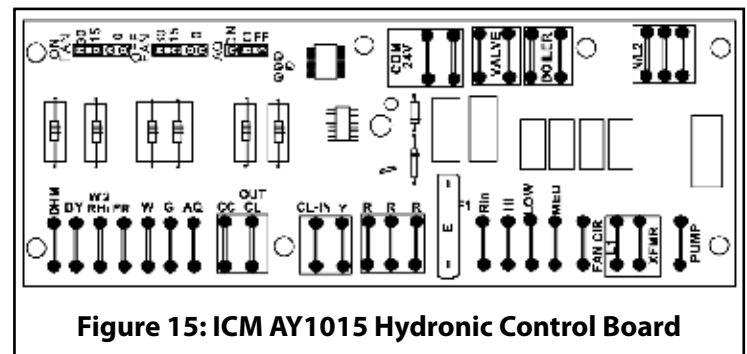


Figure 15: ICM AY1015 Hydronic Control Board

| | |
|-----|------|
| HP | FLA |
| 1/3 | 1.67 |
| 1/2 | 3.00 |

Table 3: 115 Volt Blower Motor FLA Hydronic Heat Models

| TERMINAL | CONNECTION |
|----------|--|
| C | Speed Tap Common - 24 VAC Common |
| L | Supply Voltage - 115 VAC |
| G | Ground Connection |
| N | Supply Voltage - Neutral |
| 1 | Low Speed Tap - 24 VAC Input |
| 2 | Medium - Low Speed Tap - 24 VAC Input |
| 3 | Medium Speed Tap - 24 VAC Input |
| 4 | Medium - High Speed Tap - 24 VAC Input |
| 5 | High Speed Tap - 24 VAC Input |

Table 4: Constant Torque Motor Terminal Connections – Hydronic Heat Models

WARNING

To avoid personal injury, take precautions to not come into contact with non-insulated electrical components.

Avoid wearing loose clothing or any items that can come in contact with moving parts, such as the blower wheel. This can cause serious personal injury.

1. Turn off all electrical supply circuits to the air handler at the main electrical panel (circuit breaker box) and turn the local air handler service disconnect to the OFF position.
2. Loosen the ceiling access panel thumbscrews and lower access panel.
3. Disconnect the wires connected to the motor controller terminal block.
NOTE: Write down the terminal block position for each wire before disconnecting the wires.
4. Remove the screws that secure the blower assembly to the air handler chassis located on each side and at the top center of the blower mounting plate.
5. Gasp the blower assembly and lift it up while pulling out on the bottom. Lower the blower from the blower compartment and set it on a table or the floor.
6. Loosen the set screws that secure the blower wheels to the motor shaft until the shaft can spin freely 360° while inside the blower wheel hub. The blower wheel set screws are located on the blower wheel hub opposite the motor.
7. Remove the motor controller mounted to the channel located on the left side of the blowers.
8. Remove the screws securing the blower housings to the blower mounting plate.
9. Set the replacement blower motor on the motor mount bracket. Place one end of the retaining clip into the notch on the motor mount bracket. Use a flat blade screwdriver and a mallet on the "U" shaped part of the retaining clip to push the clip down and into the notch on the other side of the bracket.
10. Place each blower housing in the correct location on the blower mount plate and secure the blower housings to the blower mounting plate with the screws removed in Step 8.
11. While facing the discharge of the blowers, center the blower wheels in the blower housings.
12. Align the set screws in the middle of the flat section of each motor shaft and tighten the set screws to secure the blower wheels to each motor shaft.
13. Attach the motor controller to the channel located on the left side of the blowers.
14. Lift the blower assembly into place inside the blower compartment and push in at the bottom.
15. Install the screws that secure the blower mounting plate to the air handler chassis that were removed in Step 4.
16. Connect the wiring removed from the motor controller terminal block that were removed in Step 3.
NOTE: Refer to the air handler wiring diagram to confirm all wiring connections are correct.
17. Turn on all electrical supply circuits to the air handler at the main electrical panel (circuit breaker box) and turn the local air handler service disconnect to the ON position.
18. Set the thermostat to the desired operating mode and temperature set point.

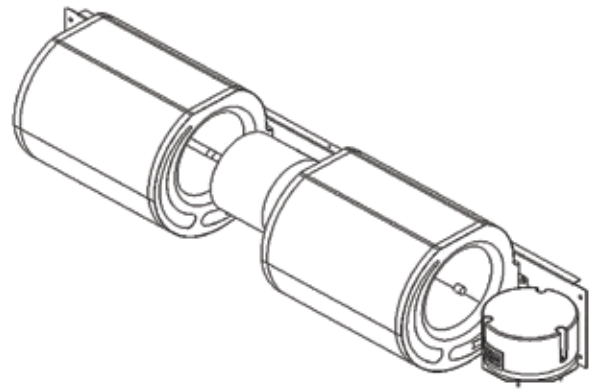


Figure 16: Blower Assembly

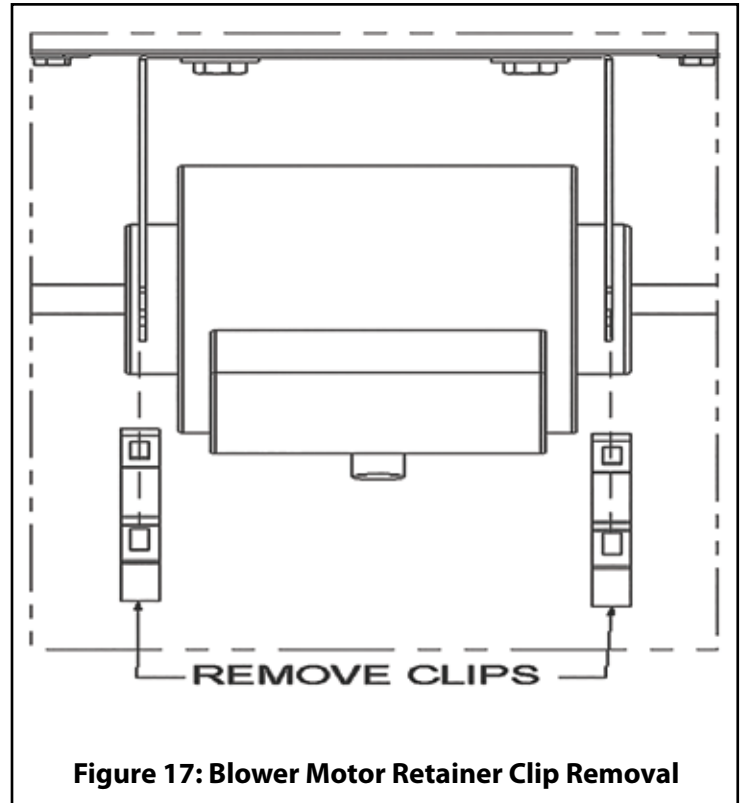


Figure 17: Blower Motor Retainer Clip Removal

SECTION 6: BLOWER PERFORMANCE

| Model No. | Nominal Cooling Tons | Blower Motor | | Motor Code | Blower Wheel Size | Motor Speed Tap | CFM@ 0.10" W.C. | CFM@ 0.20" W.C. | CFM@ 0.30" W.C. | CFM@ 0.40" W.C. | CFM@ 0.50" W.C. |
|--|----------------------|--------------|-------|------------|-------------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|
| | | HP | Volts | | | | | | | | |
| HE*1***A Electric Heat HE*3***A Electric Heat | 1.5 - 2.0 | 0.33 | 240 | *J | (2) 7 x 8 | 1 | 541 | 482 | 416 | 357 | 315 |
| | | | | | | 2 | 646 | 598 | 541 | 482 | 438 |
| | | | | | | 3 | 735 | 694 | 659 | 597 | 549 |
| | | | | | | 4 | 840 | 804 | 770 | 735 | 672 |
| | | | | | | 5 | 888 | 851 | 819 | 785 | 739 |
| HE*1***B Electric Heat HE*3***B Electric Heat | 1.5 - 2.5 | 0.33 | 240 | *K | (2) 7 x 9 | 1 | 570 | 480 | 398 | 327 | 257 |
| | | | | | | 2 | 669 | 588 | 512 | 450 | 387 |
| | | | | | | 3 | 761 | 691 | 618 | 557 | 499 |
| | | | | | | 4 | 865 | 797 | 730 | 667 | 609 |
| | | | | | | 5 | 915 | 851 | 782 | 724 | 657 |
| HE*1***B Electric Heat HE*3***B Electric Heat | 1.5 - 2.5 | 0.5 | 240 | *M | (2) 7 x 9 | 1 | 906 | 837 | 762 | 701 | 627 |
| | | | | | | 2 | 1019 | 955 | 887 | 822 | 768 |
| | | | | | | 3 | 1101 | 1043 | 987 | 922 | 846 |
| | | | | | | 4 | 1202 | 1151 | 1098 | 1041 | 981 |
| | | | | | | 5 | 1312 | 1258 | 1209 | 1151 | 1105 |
| HE*1***C Electric Heat HE*3***C Electric Heat | 1.5 - 3.0 | 0.5 | 240 | *M | (2) 7 x 9 | 1 | 928 | 836 | 750 | 689 | 617 |
| | | | | | | 2 | 1024 | 948 | 866 | 798 | 739 |
| | | | | | | 3 | 1131 | 1062 | 989 | 917 | 846 |
| | | | | | | 4 | 1225 | 1160 | 1091 | 1026 | 957 |
| | | | | | | 5 | 1327 | 1267 | 1211 | 1138 | 1075 |
| HE*1***D Electric Heat HE*3***D Electric Heat | 1.5 - 3.0 | 0.5 | 240 | *M | (2) 7 x 9 | 1 | 987 | 922 | 849 | 769 | 696 |
| | | | | | | 2 | 1073 | 1008 | 945 | 880 | 817 |
| | | | | | | 3 | 1191 | 1127 | 1071 | 1006 | 949 |
| | | | | | | 4 | 1285 | 1241 | 1186 | 1127 | 1047 |
| | | | | | | 5 | 1400 | 1332 | 1290 | 1246 | 1191 |

Table 5: HE*1/HE*3 Blower Performance – CFM - Without Air Filters

Minimum CFM for Electric Heat: 3kW = 195 CFM; 5kW = 325 CFM; 6 kW = 390 CFM; 8kW = 520 CFM; 10kW = 650 CFM

| Model No. | Nominal Cooling Tons | Bower Motor | | Code | Blower Wheel | Motor Speed | AMPS@ 0.10" W.C. | AMPS@ 0.20" W.C. | AMPS@ 0.30" W.C. | AMPS@ 0.40" W.C. | AMPS@ 0.50" W.C. |
|--|----------------------|-------------|-------|------|--------------|-------------|------------------|------------------|------------------|------------------|------------------|
| | | HP | Volts | | | | | | | | |
| HE*1***A Electric Heat HE*3***A Electric Heat | 1.5 - 2.0 | 0.33 | 240 | *J | (2) 7 x 8 | 1 | 0.28 | 0.30 | 0.33 | 0.36 | 0.38 |
| | | | | | | 2 | 0.36 | 0.39 | 0.43 | 0.45 | 0.48 |
| | | | | | | 3 | 0.47 | 0.50 | 0.53 | 0.56 | 0.59 |
| | | | | | | 4 | 0.62 | 0.64 | 0.67 | 0.70 | 0.74 |
| | | | | | | 5 | 0.69 | 0.72 | 0.75 | 0.78 | 0.81 |
| HE*1***B Electric Heat HE*3***B Electric Heat | 1.5 - 2.5 | 0.33 | 240 | *K | (2) 7 x 9 | 1 | 0.27 | 0.30 | 0.33 | 0.35 | 0.37 |
| | | | | | | 2 | 0.35 | 0.38 | 0.41 | 0.44 | 0.47 |
| | | | | | | 3 | 0.44 | 0.47 | 0.50 | 0.53 | 0.56 |
| | | | | | | 4 | 0.55 | 0.59 | 0.62 | 0.66 | 0.69 |
| | | | | | | 5 | 0.62 | 0.65 | 0.68 | 0.72 | 0.75 |
| HE*1***B Electric Heat HE*3***B Electric Heat | 1.5 - 2.5 | 0.5 | 240 | *M | (2) 7 x 9 | 1 | 0.61 | 0.65 | 0.66 | 0.68 | 0.71 |
| | | | | | | 2 | 0.74 | 0.78 | 0.81 | 0.83 | 0.86 |
| | | | | | | 3 | 0.87 | 0.92 | 0.95 | 0.97 | 0.99 |
| | | | | | | 4 | 1.08 | 1.11 | 1.13 | 1.16 | 1.20 |
| | | | | | | 5 | 1.33 | 1.36 | 1.41 | 1.43 | 1.46 |
| HE*1***C Electric Heat HE*3***C Electric Heat | 1.5 - 3.0 | 0.5 | 240 | *M | (2) 7 x 9 | 1 | 0.51 | 0.54 | 0.57 | 0.61 | 0.64 |
| | | | | | | 2 | 0.62 | 0.66 | 0.70 | 0.72 | 0.76 |
| | | | | | | 3 | 0.75 | 0.78 | 0.82 | 0.85 | 0.88 |
| | | | | | | 4 | 0.88 | 0.92 | 0.96 | 0.98 | 1.04 |
| | | | | | | 5 | 1.08 | 1.12 | 1.13 | 1.16 | 1.21 |
| HE*1***D Electric Heat HE*3***D Electric Heat | 1.5 - 3.0 | 0.5 | 240 | *M | (2) 7 x 9 | 1 | 0.75 | 0.78 | 0.81 | 0.85 | 0.88 |
| | | | | | | 2 | 0.90 | 0.94 | 0.95 | 1.00 | 1.03 |
| | | | | | | 3 | 1.10 | 1.13 | 1.16 | 1.16 | 1.20 |
| | | | | | | 4 | 1.35 | 1.38 | 1.42 | 1.46 | 1.50 |
| | | | | | | 5 | 1.66 | 1.70 | 1.73 | 1.77 | 1.80 |

Table 6: HEC*1/HE*3 Blower Performance – Motor Amps - Without Air Filters

| Model No. | Nominal Cooling Tons | Bower Motor | | Motor Code | Blower Wheel Size | Motor Speed Tap | CFM@ 0.10" W.C. | CFM@ 0.20" W.C. | CFM@ 0.30" W.C. | CFM@ 0.40" W.C. | CFM@ 0.50" W.C. |
|--|----------------------|-------------|-------|------------|-------------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|
| | | HP | Volts | | | | | | | | |
| HE*2***A Hydronic Heat HE*4***A Hydronic Heat | 1.5 - 2.0 | 0.33 | 115 | *N | (2) 7 x 8 | 1 | 533 | 485 | 439 | 397 | 350 |
| | | | | | | 2 | 629 | 589 | 546 | 508 | 457 |
| | | | | | | 3 | 728 | 694 | 658 | 625 | 579 |
| | | | | | | 4 | 832 | 801 | 761 | 727 | 680 |
| | | | | | | 5 | 886 | 857 | 818 | 786 | 740 |
| HE*2***B Hydronic Heat HE*4***B Hydronic Heat | 1.5 - 2.5 | 0.33 | 115 | *O | (2) 7 x 9 | 1 | 556 | 486 | 426 | 363 | 291 |
| | | | | | | 2 | 646 | 593 | 541 | 476 | 423 |
| | | | | | | 3 | 749 | 699 | 651 | 598 | 555 |
| | | | | | | 4 | 844 | 798 | 749 | 704 | 657 |
| | | | | | | 5 | 897 | 854 | 809 | 764 | 721 |
| HE*2***B Hydronic Heat HE*4***B Hydronic Heat | 1.5 - 2.5 | 0.50 | 115 | *R | (2) 7 x 9 | 1 | 883 | 834 | 787 | 737 | 700 |
| | | | | | | 2 | 978 | 926 | 885 | 834 | 791 |
| | | | | | | 3 | 1075 | 1033 | 991 | 946 | 905 |
| | | | | | | 4 | 1192 | 1149 | 1105 | 1071 | 1029 |
| | | | | | | 5 | 1302 | 1253 | 1213 | 1176 | 1138 |
| HE*2***-C Hydronic Heat HE*4***-C Hydronic Heat | 1.5 - 3.0 | 0.50 | 115 | *R | (2) 7 x 9 | 1 | 903 | 845 | 791 | 732 | 665 |
| | | | | | | 2 | 1016 | 958 | 903 | 853 | 789 |
| | | | | | | 3 | 1118 | 1065 | 1010 | 958 | 912 |
| | | | | | | 4 | 1232 | 1179 | 1135 | 1089 | 1047 |
| | | | | | | 5 | 1310 | 1261 | 1221 | 1180 | 1137 |
| HE*2***D Hydronic Heat HE*4***D Hydronic Heat | 1.5 - 3.0 | 0.50 | 115 | *R | (2) 7 x 9 | 1 | 901 | 837 | 781 | 716 | 658 |
| | | | | | | 2 | 992 | 939 | 876 | 823 | 753 |
| | | | | | | 3 | 1090 | 1043 | 987 | 934 | 878 |
| | | | | | | 4 | 1200 | 1152 | 1107 | 1061 | 1012 |
| | | | | | | 5 | 1297 | 1252 | 1205 | 1161 | 1111 |

Table 7: HE*2/HE*4 Blower Performance – CFM – Without Air Filters

| Model Number | Motor HP | Volts 1 Ph. 60 Hz | Motor Code | Blower Wheel | Speed Tap | CFM @ 0.10" ESP | CFM @ 0.20" ESP | CFM @ 0.30" ESP | CFM @ 0.40" ESP | CFM @ 0.50" ESP | CFM @ 0.60" ESP |
|-------------------------|----------|-------------------|------------|--------------|-----------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|
| MSVT18 Electric Heat | 0.33 | 208/240 | VD1 | 10 X 7 | 1 | 699 | 639 | 565 | 536 | 451 | 402 |
| | | | | | 2 | 741 | 676 | 592 | 517 | 527 | 458 |
| | | | | | 3 | 908 | 849 | 777 | 679 | 745 | 655 |
| | | | | | 4 | 1022 | 963 | 905 | 840 | 761 | 703 |
| | | | | | 5 | 1102 | 1054 | 996 | 928 | 884 | 812 |
| MSVT24 Electric Heat | 0.33 | 208/240 | VD1 | 10 X 7 | 1 | 861 | 786 | 708 | 638 | 547 | 615 |
| | | | | | 2 | 924 | 872 | 814 | 726 | 663 | 656 |
| | | | | | 3 | 1067 | 1013 | 963 | 894 | 826 | 758 |
| | | | | | 4 | 1139 | 1093 | 1042 | 982 | 918 | 857 |
| | | | | | 5 | 1220 | 1157 | 1105 | 1049 | 985 | 893 |
| MSVT25 Electric Heat | 0.50 | 208/240 | VE1 | 10 X 8 | 1 | 995 | 934 | 855 | 793 | 712 | 649 |
| | | | | | 2 | 1047 | 994 | 926 | 876 | 782 | 700 |
| | | | | | 3 | 1146 | 1075 | 1019 | 957 | 880 | 811 |
| | | | | | 4 | 1224 | 1161 | 1099 | 1030 | 972 | 904 |
| | | | | | 5 | 1300 | 1247 | 1186 | 1115 | 1058 | 996 |
| MSVT30 Electric Heat | 0.50 | 208/240 | VE1 | 10 X 8 | 1 | 898 | 829 | 784 | 741 | 691 | 604 |
| | | | | | 2 | 999 | 962 | 918 | 888 | 847 | 811 |
| | | | | | 3 | 1164 | 1120 | 1087 | 1060 | 1022 | 990 |
| | | | | | 4 | 1260 | 1222 | 1197 | 1162 | 1131 | 1098 |
| | | | | | 5 | 1353 | 1321 | 1289 | 1258 | 1229 | 1197 |
| MSVT36 Electric Heat | 0.50 | 208/240 | VE1 | 10 X 8 | 1 | 1161 | 1135 | 1086 | 1056 | 1027 | 992 |
| | | | | | 2 | 1261 | 1228 | 1198 | 1153 | 1129 | 1100 |
| | | | | | 3 | 1361 | 1310 | 1286 | 1262 | 1227 | 1201 |
| | | | | | 4 | 1478 | 1431 | 1405 | 1383 | 1351 | 1309 |
| | | | | | 5 | 1568 | 1536 | 1507 | 1470 | 1440 | 1400 |
| MSVT37 Electric Heat | 0.75 | 208/240 | VF1 | 12 X 9 | 1 | 1466 | 1406 | 1249 | 1198 | 1150 | 1075 |
| | | | | | 2 | 1487 | 1454 | 1383 | 1328 | 1291 | 1231 |
| | | | | | 3 | 1516 | 1508 | 1462 | 1415 | 1365 | 1319 |
| | | | | | 4 | 1588 | 1600 | 1569 | 1520 | 1471 | 1423 |
| | | | | | 5 | 1672 | 1672 | 1657 | 1619 | 1557 | 1520 |
| MSVT42 Electric Heat | 0.75 | 208/240 | VF1 | 12 X 9 | 1 | 1483 | 1458 | 1370 | 1315 | 1267 | 1238 |
| | | | | | 2 | 1524 | 1503 | 1445 | 1392 | 1343 | 1286 |
| | | | | | 3 | 1587 | 1607 | 1556 | 1512 | 1466 | 1423 |
| | | | | | 4 | 1671 | 1648 | 1667 | 1607 | 1572 | 1532 |
| | | | | | 5 | 1707 | 1685 | 1722 | 1678 | 1633 | 1599 |
| MSVT48 Electric Heat | 0.75 | 208/240 | VF1 | 12 X 9 | 1 | 1579 | 1560 | 1544 | 1491 | 1445 | 1397 |
| | | | | | 2 | 1685 | 1671 | 1626 | 1587 | 1544 | 1507 |
| | | | | | 3 | 1739 | 1746 | 1711 | 1674 | 1629 | 1579 |
| | | | | | 4 | 1802 | 1778 | 1809 | 1764 | 1718 | 1682 |
| | | | | | 5 | 1876 | 1870 | 1896 | 1870 | 1836 | 1782 |
| MSVT60 Electric Heat | 0.75 | 208/240 | VF1 | 12 X 9 | 1 | 1579 | 1560 | 1544 | 1491 | 1445 | 1397 |
| | | | | | 2 | 1685 | 1671 | 1626 | 1587 | 1544 | 1507 |
| | | | | | 3 | 1745 | 1734 | 1745 | 1712 | 1656 | 1616 |
| | | | | | 4 | 1958 | 1953 | 1943 | 1919 | 1874 | 1828 |
| | | | | | 5 | 2038 | 2015 | 2010 | 2005 | 1977 | 1934 |
| MSVT72 Electric Heat | 1.00 | 208/240 | VV | 12 X 10 | 1 | 1910 | 1865 | 1826 | 1787 | 1750 | 1715 |
| | | | | | 2 | 2088 | 2054 | 2019 | 1969 | 1932 | 1895 |
| | | | | | 3 | 2240 | 2201 | 2162 | 2129 | 2088 | 2050 |
| | | | | | 4 | 2370 | 2339 | 2290 | 2246 | 2208 | 2170 |
| | | | | | 5 | 2504 | 2470 | 2441 | 2393 | 2351 | 2310 |

Table 8: HE*2/HE*4 Blower Performance – Motor Amps - Without Air Filters

SECTION 7: ACCESSORIES

| Part Number | Description |
|--------------------|--|
| 87JUA020 | HEC - HEU - LOUVERED - 40.875 X 25.375 |
| 87JUA021 | HEC - HEU - LOUVERED - 46.875 X 25.375 |
| 87JUA022 | HEC - HEU - LOUVERED - 53.875 X 25.375 |
| 87JUA023 | HEC - HEU - LOUVERED - 60.875 X 25.375 |
| CPNL1 | HEC - HEU - NON-LOUVERED - 27.5" x 43" |
| CPNL2 | HEC - HEU - NON-LOUVERED - 27.5" x 49" |
| CPNL3 | HEC - HEU - NON-LOUVERED - 27.5" x 55.5" |
| CPNL4 | HEC - HEU - NON-LOUVERED - 27.5" x 62.5" |

Table 9: Accessory List

SECTION 8: REPLACEMENT PARTS

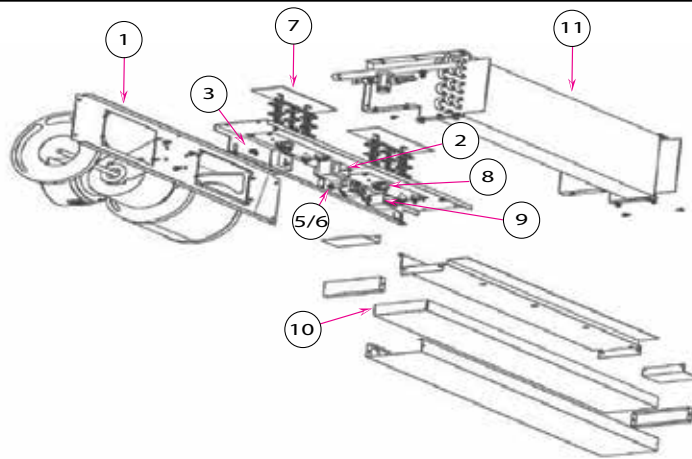


Figure 18: HE*1/HE*3*-AC Electric Heat Air Handler Replacement Parts Schematic**

| HEU1/HEU3/HEC1/HEC3***-AC ELECTRIC HEAT MODELS | | | |
|---|---|------------|--|
| Item # | Qty. | Part # | Description |
| 1 | 1 | | Blower Assembly - Contact factory rep to obtain the correct blower assembly. |
| 2 | 1 | R68AA0003 | 208/240-24V Transformer |
| 3 | 1 | R68DC0001 | Ground Lug |
| 4 | 1 | R73MH0001 | 3 Amp Fuse |
| 5 | 1 | R73MHA001 | Fuse Holder |
| 3 KW Electric Heat | | | |
| 6 | 1 | R86CJ0170 | 3 kW Element (Kit - 2 EA. 1.5 kW Heater Elements with Limits) |
| 7 | 1 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| 5 KW Electric Heat | | | |
| 6 | 1 | R86CJ0172 | 5 kW Element (Kit - 2 EA. 2.5 kW Heater Elements with Limits) |
| 7 | 1 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| 6 KW Electric Heat | | | |
| 6 | 1 | R86CJ0173 | 6 kW Element (Kit - 2 EA. 3.0 kW Heater Elements with Limits) |
| 7 | 1 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| 8 KW Electric Heat | | | |
| 6 | 1 | R86CJ0174 | 8 kW Element (Kit - 2 EA. 4.0 kW Heater Elements with Limits) |
| 7 | 1 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| 10 KW Electric Heat | | | |
| 6 | 1 | R86CJ0175 | 10 kW Element (Kit - 2 EA. 5.0 kW Heater Elements with Limits) |
| 7 | 2 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| DRAIN PAN | | | |
| 9 | 1 | R86FDA001 | Galvanized G90 Drain Pan With Coating for F.D. 30 |
| DX COIL | | | |
| 10 | 1 | R86BB0072C | 3 Row, 10" x 30", A-Coil, 5/16" |
| CHILLED WATER COILS | | | |
| 10 | CHILLED WATER COILS - There are too many chilled water coil models to list. Contact factory sales rep to obtain the correct coil. | | |

Table 10: HE*1/HE *3*-AC Electric Heat Air Handler Replacement Parts List**

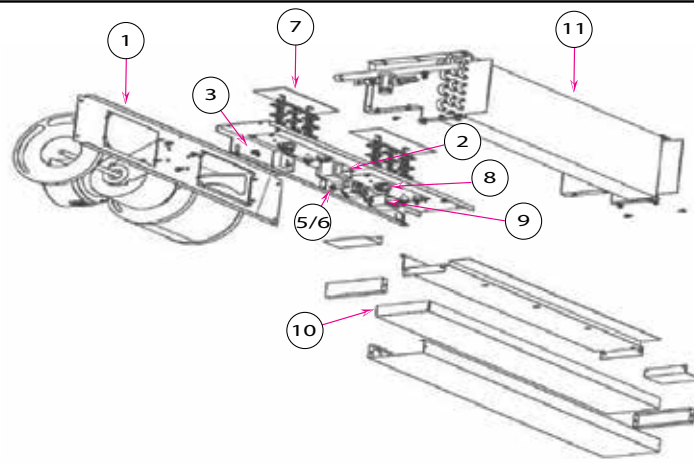


Figure 19: HE*1/HE*3-*-BC Electric Heat Air Handler Replacement Parts Schematic**

HEU1/HEU3/HEC1/HEC3-*-BC ELECTRIC HEAT MODELS**

| Item # | Qty. | Part # | Description |
|----------------------------|---|------------|--|
| 1 | 1 | | Blower Assembly - Contact factory rep to obtain the correct blower assembly. |
| 2 | 1 | R68AA0003 | 208/240-24V Transformer |
| 3 | 1 | R68DC0001 | Ground Lug |
| 4 | 1 | R73MH0001 | 3 Amp Fuse |
| 5 | 1 | R73MHA001 | Fuse Holder |
| 3 KW Electric Heat | | | |
| 6 | 1 | R86CJ0170 | 3 kW Element (Kit - 2 EA. 1.5 kW Heater Elements with Limits) |
| 7 | 1 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| 5 KW Electric Heat | | | |
| 6 | 1 | R86CJ0172 | 5 kW Element (Kit - 2 EA. 2.5 kW Heater Elements with Limits) |
| 7 | 1 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| 6 KW Electric Heat | | | |
| 6 | 1 | R86CJ0173 | 6 kW Element (Kit - 2 EA. 3.0 kW Heater Elements with Limits) |
| 7 | 1 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| 8 KW Electric Heat | | | |
| 6 | 1 | R86CJ0174 | 8 kW Element (Kit - 2 EA. 4.0 kW Heater Elements with Limits) |
| 7 | 1 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| 10 KW Electric Heat | | | |
| 6 | 1 | R86CJ0175 | 10 kW Element (Kit - 2 EA. 5.0 kW Heater Elements with Limits) |
| 7 | 2 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| DRAIN PAN | | | |
| 9 | 1 | R86FDA002 | Galvanized G90 Drain Pan With Coating for F.D. 38 |
| DX COIL | | | |
| 10 | 1 | R86BB0073C | 3-Row, 10" x 38", A-Coil, 5/16" |
| CHILLED WATER COILS | | | |
| 10 | CHILLED WATER COILS - There are too many chilled water coil models to list. Contact factory sales rep to obtain the correct coil. | | |

Table HE*1/HE*3-*-BC Electric Heat Air Handler Replacement Parts List**

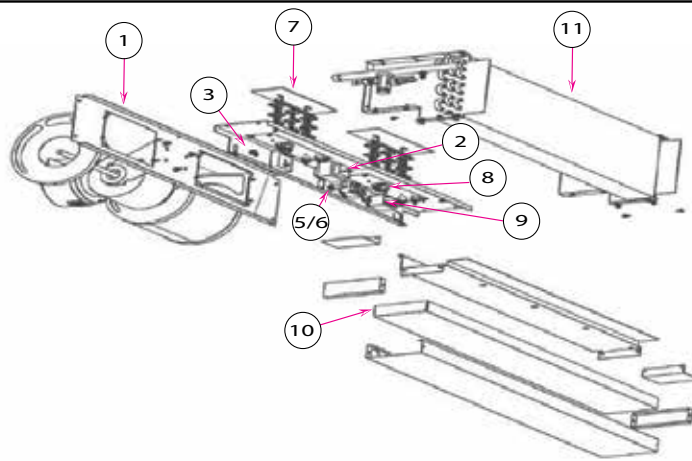


Figure 20: HE*1/ HE*3-*-CC Electric Heat Air Handler Replacement Parts Schematic**

| HEU1/HEU3/HEC1/HEC3**-*-CC ELECTRIC HEAT MODELS | | | |
|--|---|------------|--|
| Item # | Qty. | Part # | Description |
| 1 | 1 | | Blower Assembly - Contact factory rep to obtain the correct blower assembly. |
| 2 | 1 | R68AA0003 | 208/240-24V Transformer |
| 3 | 1 | R68DC0001 | Ground Lug |
| 4 | 1 | R73MH0001 | 3 Amp Fuse |
| 5 | 1 | R73MHA001 | Fuse Holder |
| 3 KW Electric Heat | | | |
| 6 | 1 | R86CJ0170 | 3 kW Element (Kit - 2 EA. 1.5 kW Heater Elements with Limits) |
| 7 | 1 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| 5 KW Electric Heat | | | |
| 6 | 1 | R86CJ0172 | 5 kW Element (Kit - 2 EA. 2.5 kW Heater Elements with Limits) |
| 7 | 1 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| 6 KW Electric Heat | | | |
| 6 | 1 | R86CJ0173 | 6 kW Element (Kit - 2 EA. 3.0 kW Heater Elements with Limits) |
| 7 | 1 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| 8 KW Electric Heat | | | |
| 6 | 1 | R86CJ0174 | 8 kW Element (Kit - 2 EA. 4.0 kW Heater Elements with Limits) |
| 7 | 1 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| 10 KW Electric Heat | | | |
| 6 | 1 | R86CJ0175 | 10 kW Element (Kit - 2 EA. 5.0 kW Heater Elements with Limits) |
| 7 | 2 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| DRAIN PAN | | | |
| 9 | 1 | R86FDA003 | Galvanized G90 Drain Pan With Coating for F.D. 38 |
| DX COIL | | | |
| 10 | 1 | R86BB0074C | 3-Row, 10" x 42", A-Coil, 5/16" |
| CHILLED WATER COILS | | | |
| 10 | CHILLED WATER COILS - There are too many chilled water coil models to list. Contact factory sales rep to obtain the correct coil. | | |

Table 12: HE*1/ HE*3-*-CC Electric Heat Air Handler Replacement Parts List**

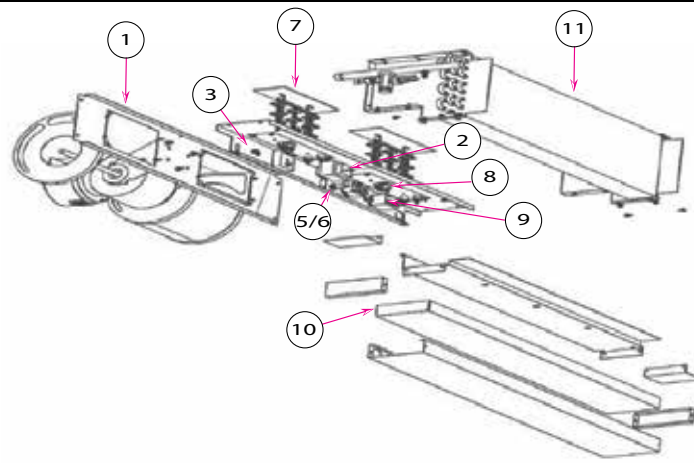


Figure 21: HE*1/ HE*3-*-DC Electric Heat Air Handler Replacement Parts Schematic**

HEU1/HEU3/HEC1/HEC3-*-DC ELECTRIC HEAT MODELS**

| Item # | Qty. | Part # | Description |
|----------------------------|---|------------|--|
| 1 | 1 | | Blower Assembly - Contact factory rep to obtain the correct blower assembly. |
| 2 | 1 | R68AA0003 | 208/240-24V Transformer |
| 3 | 1 | R68DC0001 | Ground Lug |
| 4 | 1 | R73MH0001 | 3 Amp Fuse |
| 5 | 1 | R73MHA001 | Fuse Holder |
| 3 KW Electric Heat | | | |
| 6 | 1 | R86CJ0170 | 3 kW Element (Kit - 2 EA. 1.5 kW Heater Elements with Limits) |
| 7 | 1 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| 5 KW Electric Heat | | | |
| 6 | 1 | R86CJ0172 | 5 kW Element (Kit - 2 EA. 2.5 kW Heater Elements with Limits) |
| 7 | 1 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| 6 KW Electric Heat | | | |
| 6 | 1 | R86CJ0173 | 6 kW Element (Kit - 2 EA. 3.0 kW Heater Elements with Limits) |
| 7 | 1 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| 8 KW Electric Heat | | | |
| 6 | 1 | R86CJ0174 | 8 kW Element (Kit - 2 EA. 4.0 kW Heater Elements with Limits) |
| 7 | 1 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| 10 KW Electric Heat | | | |
| 6 | 1 | R86CJ0175 | 10 kW Element (Kit - 2 EA. 5.0 kW Heater Elements with Limits) |
| 7 | 2 | R68CA0001 | 140°F Limit Switch (Opens at 140°F - Closes at 110°F) |
| 8 | 1 | R68AB0019 | Double Pole Electric Heat Contactor - 50 Amp Resistive |
| DRAIN PAN | | | |
| 9 | 1 | R86FDA004 | Galvanized G90 Drain Pan With Coating for F.D. 49 |
| DX COIL | | | |
| 10 | 1 | R86BB0075C | 3-Row, 10" x 49", A-Coil, 5/16" |
| CHILLED WATER COILS | | | |
| 10 | CHILLED WATER COILS - There are too many chilled water coil models to list. Contact factory sales rep to obtain the correct coil. | | |

Table 13: HE*1/ HE*3-*-DC Electric Heat Air Handler Replacement Parts List**

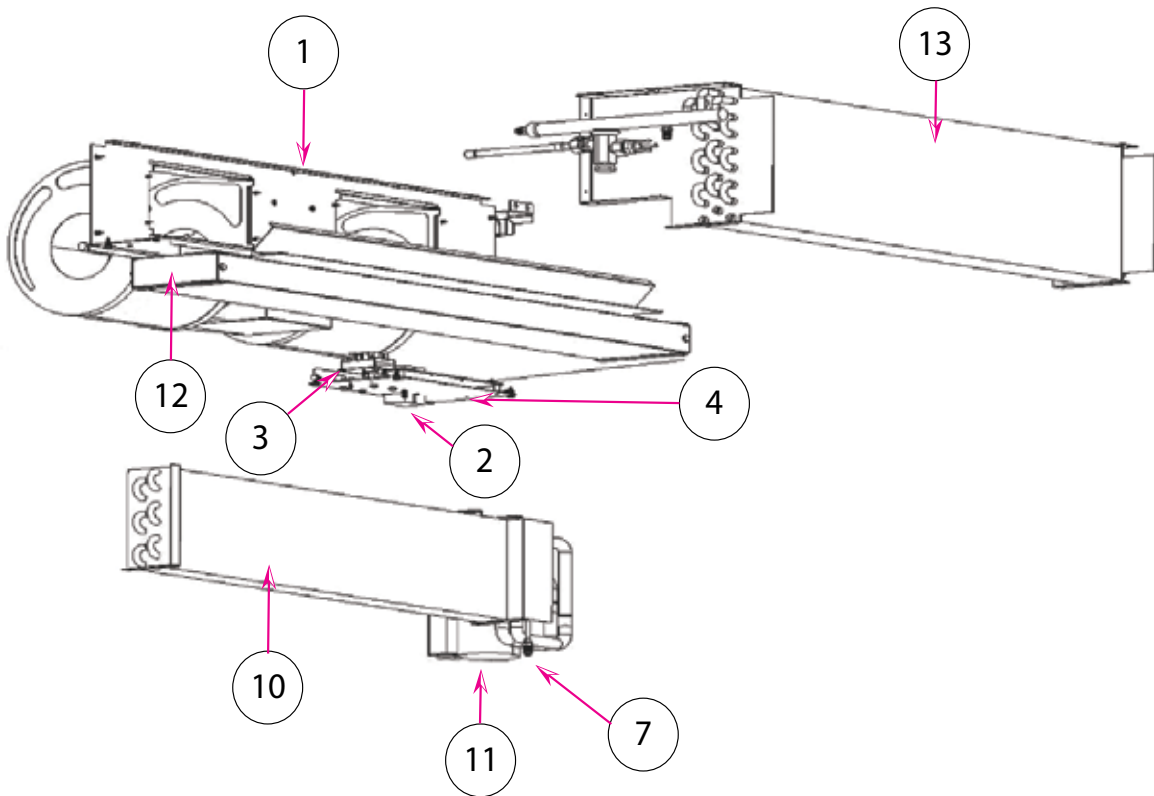


Figure 22: HE*2/ HE*4-*-AA Hydronic Heat Air Handler Replacement Parts Schematic**

HEU2/HEU4/HEC2/HEC4-*-AA HYDRONIC HEAT MODELS**

| Item # | Qty. | Part # | Description |
|----------------------------|---|------------|---|
| 1 | 1 | | Blower Assembly - Contact factory rep to obtain the correct blower assembly.. |
| 2 | 1 | R68AA0002 | 115-24V Transformer |
| 3 | 1 | R68DC0001 | Ground Lug |
| 4 | 1 | R68AE0011 | ICM AY1015 Hydronic Control Board for CT Blower Motors |
| 5 | 1 | R68DD0005 | White Wire Freeze Protector |
| 6 | 1 | R66AB0006 | Sensor Clip HW/AH |
| 7 | 1 | R74BA0004 | Valve - Air Bleed Body |
| 8 | 1 | R74BA0005 | Valve - Air Bleed Core |
| 9 | 1 | R74BB0001 | 1/2" Boiler Drain |
| 10 | 1 | R86BC0001 | 2 Row Hot Water Coil 6 x 27 |
| 11 | 1 | R78AA0007 | 4 GPM Taco Circulating Pump 115V - 1/2" Inlet and Outlet |
| DRAIN PAN | | | |
| 12 | 1 | R86FDA001 | Galvanized G90 Drain Pan With Coating for F.D. 30 |
| DX COIL | | | |
| 13 | 1 | R86BB0072C | 3 Row, A-Coil, 10" x 30", 3/8" |
| CHILLED WATER COILS | | | |
| 13 | CHILLED WATER COILS - There are too many chilled water coil models to list. Contact factory sales rep to obtain the correct coil. | | |

Table 14: HE*2/ HE*4-*-AA Hydronic Heat Air Handler Replacement Parts List**

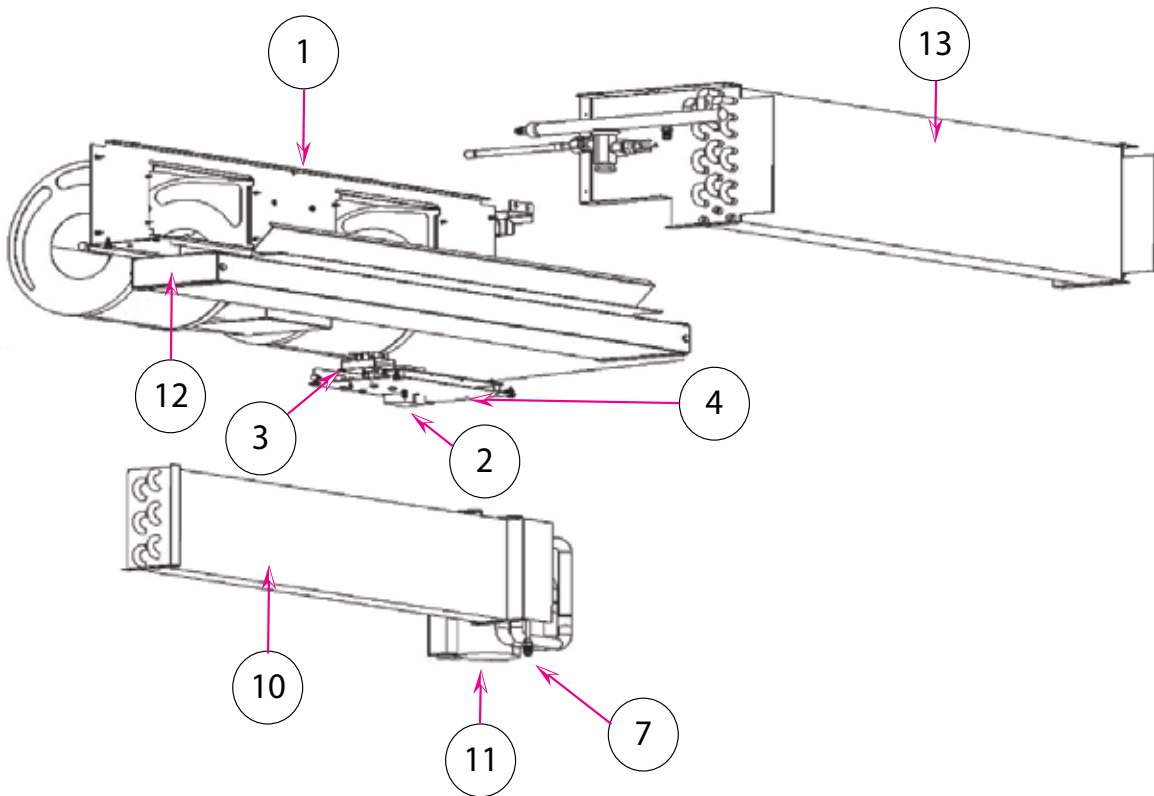


Figure 23: HE*2/ HE*4-*-BA Hydronic Heat Air Handler Replacement Parts Schematic**

HEU2/HEU4/HEC2/HEC4-*-BA HYDRONIC HEAT MODELS**

| Item # | Qty. | Part # | Description |
|---------------------------|---|------------|--|
| 1 | 1 | | Blower Assembly - Contact factory rep to obtain the correct blower assembly. |
| 2 | 1 | R68AA0002 | 115-24V Transformer |
| 3 | 1 | R68DC0001 | Ground Lug |
| 4 | 1 | R68AE0011 | ICM AY1015 Hydronic Control Board for CT Blower Motors |
| 5 | 1 | R68DD0005 | White Wire Freeze Protector |
| 6 | 1 | R66AB0006 | Sensor Clip HW/AH |
| 7 | 1 | R74BA0004 | Valve - Air Bleed Body |
| 8 | 1 | R74BA0005 | Valve - Air Bleed Core |
| 9 | 1 | R74BB0001 | 1/2" Boiler Drain |
| 10 | 1 | R86BC0002 | 2 Row Hot Water Coil 6 x 35 |
| 11 | 1 | R78AA0007 | Standard 4 GPM Circulating Pump 115V - 1/2" Inlet and Outlet |
| 11 | 1 | R78AA0008 | Optional 7 GPM Pump 115V - 3/4" Inlet and Outlet |
| DRAIN PAN | | | |
| 12 | 1 | R86FDA002 | Galvanized G90 Drain Pan With Coating for F.D. 38 |
| DX COIL | | | |
| 13 | 1 | R86BB0073C | 3 Row, A-Coil, 10" x 38", 3/8" |
| CHILLED WATER COIL | | | |
| 13 | CHILLED WATER COILS - There are too many chilled water coil models to list. Contact factory sales rep to obtain the correct coil. | | |

Table 15: HE*2/ HE*4-*-BA Hydronic Heat Air Handler Replacement Parts List**

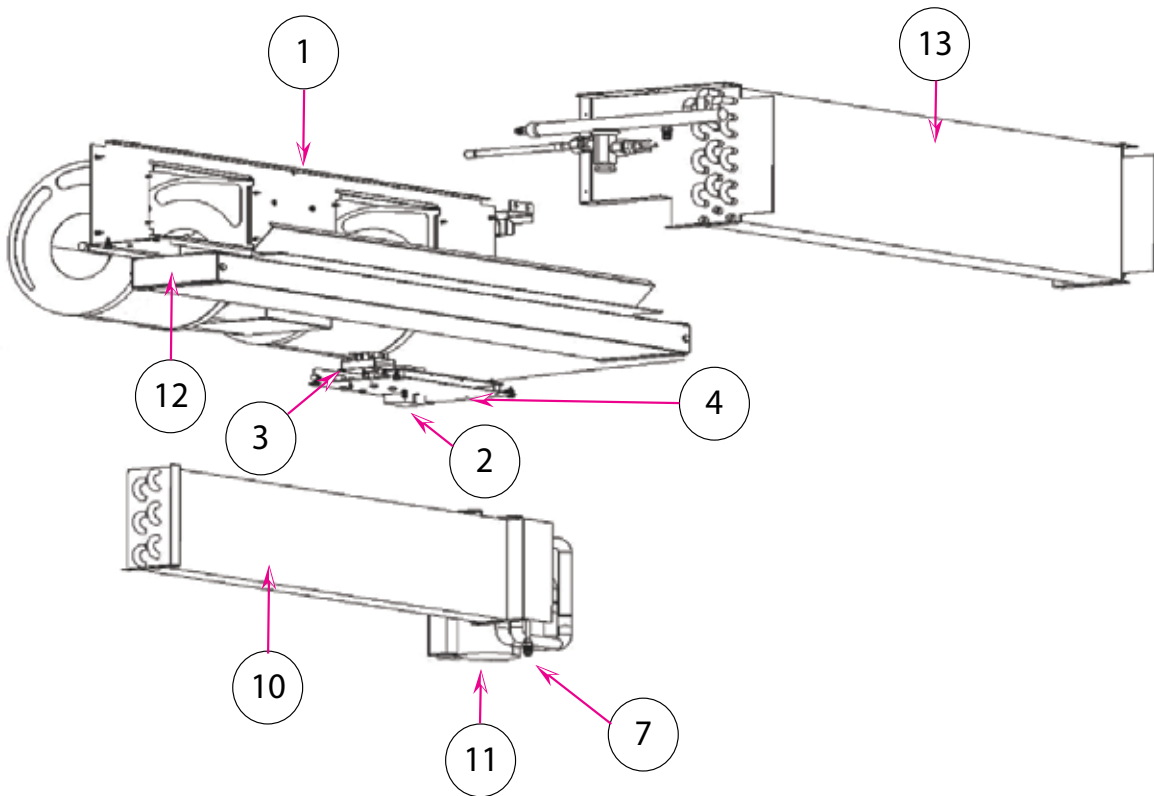


Figure 24: HE*2/ HE*4-*-CA Hydronic Heat Air Handler Replacement Parts Schematic**

HEU2/HEU4/HEC2/HEC4-*-CA HYDRONIC HEAT MODELS**

| Item # | Qty. | Part # | Description |
|----------------------------|--|------------|--|
| 1 | 1 | | Blower Assembly - Contact factory rep to obtain the correct blower assembly. |
| 2 | 1 | R68AA0002 | 115-24V Transformer |
| 3 | 1 | R68DC0001 | Ground Lug |
| 4 | 1 | R68AE0011 | ICM AY1015 Hydronic Control Board for CT Blower Motors |
| 5 | 1 | R68DD0005 | White Wire Freeze Protector |
| 6 | 1 | R66AB0006 | Sensor Clip HW/AH |
| 7 | 1 | R74BA0004 | Valve - Air Bleed Body |
| 8 | 1 | R74BA0005 | Valve - Air Bleed Core |
| 9 | 1 | R74BB0001 | 1/2" Boiler Drain |
| 10 | 1 | R86BC0002 | 2 Row Hot Water Coil 6 x 35 |
| 11 | 1 | R78AA0007 | Standard 4 GPM Circulating Pump 115V - 1/2" Inlet and Outlet |
| 11 | 1 | R78AA0008 | Optional 7 GPM Pump 115V - 3/4" Inlet and Outlet |
| DRAIN PAN | | | |
| 12 | 1 | R86FDA003 | Galvanized G90 Drain Pan With Coating for F.D. 38 |
| DX COIL | | | |
| 13 | 1 | R86BB0074C | 3 Row, A-Coil, 10" x 42", 3/8" |
| CHILLED WATER COILS | | | |
| 13 | CHILLED WATER COILS - There are too many chilled water coil models to list. Contact factory sales rep to obtain the correct coil. | | |

Table 16: HE*2/ HE*4-*-CA Hydronic Heat Air Handler Replacement Parts List**

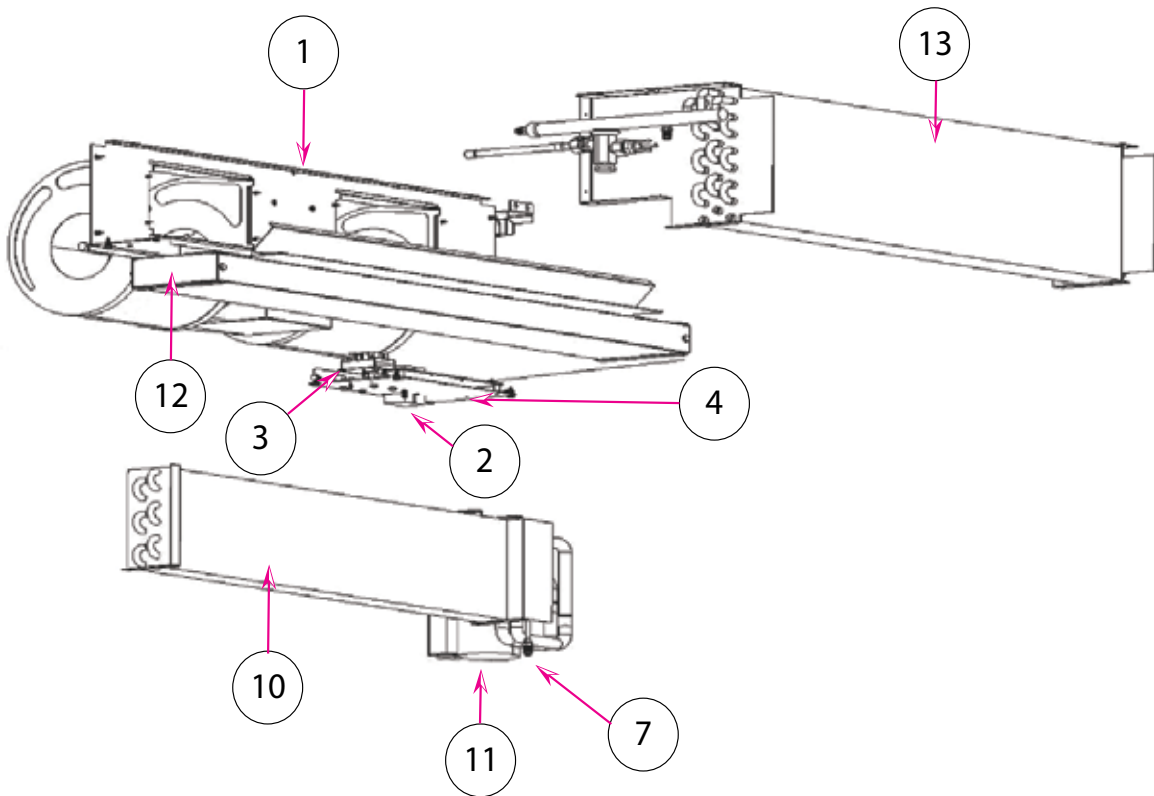


Figure 25: HE*2/ HE*4-*-DA Hydronic Heat Air Handler Replacement Parts Schematic**

HEU2/HEU4/HEC2/HEC4-*-DA HYDRONIC HEAT MODELS**

| Item # | Qty. | Part # | Description |
|----------------------------|---|------------|--|
| 1 | 1 | | Blower Assembly - Contact factory rep to obtain the correct blower assembly. |
| 2 | 1 | R68AA0002 | 115-24V Transformer |
| 3 | 1 | R68DC0001 | Ground Lug |
| 4 | 1 | R68AE0011 | ICM AY1015 Hydronic Control Board for CT Blower Motors |
| 5 | 1 | R68DD0005 | White Wire Freeze Protector |
| 6 | 1 | R66AB0006 | Sensor Clip HW/AH |
| 7 | 1 | R74BA0004 | Valve - Air Bleed Body |
| 8 | 1 | R74BA0005 | Valve - Air Bleed Core |
| 9 | 1 | R74BB0001 | 1/2" Boiler Drain |
| 10 | 1 | R86BC0003 | 2 Row Hot Water Coil 6 x 46 |
| 11 | 1 | R78AA0007 | Standard 4 GPM Circulating Pump 115V - 1/2" Inlet and Outlet |
| 11 | 1 | R78AA0008 | Optional 7 GPM Pump 115V - 3/4" Inlet and Outlet |
| DRAIN PAN | | | |
| 12 | 1 | R86FDA004 | Galvanized G90 Drain Pan With Coating for F.D. 49 |
| DX COIL | | | |
| 13 | 1 | R86BB0075C | 3 Row, A-Coil, 10" x 49", 3/8" |
| CHILLED WATER COILS | | | |
| 13 | CHILLED WATER COILS - There are too many chilled water coil models to list. Contact factory sales rep to obtain the correct coil. | | |

Table 17: HE*2/ HE*4-*-DA Hydronic Heat Air Handler Replacement Parts List**